# Exterior lights: High beams not functioning when first operated

Topic number LI82.10-P-065209

Version

Design group 82.10 Exterior lights

Date 11-10-2016

Validity Model series 166, 246, 176 with code 803 and without

one of the SA codes 238 / 476 / 513 / 608 / 628

Reason for change Reason for block

## Complaint:

While driving, the high beams are only activated when the high beam switch is operated for a second time.

#### Note:

The complaint can occur after replacement of the instrument cluster and is only reproducible while driving.

The problem cannot be reproduced when testing while stationary.

#### Cause:

SAM-F not compatible with the replaced instrument cluster

#### Remedy:

Create a PTSS case, instructions to be provided through case

### **Symptoms**

Overall vehicle / Lighting / Exterior lights / Driving lights / High beams / Indicator lamp / lit

Overall vehicle / Lighting / Exterior lights / Driving lights / High beams / Indicator lamp / Nonfunctional

Overall vehicle / Lighting / Exterior lights / Driving lights / High beams / Function / Nonfunctional