


Door open switch adjustment:

3/16 Allen head bolt
Switch finger

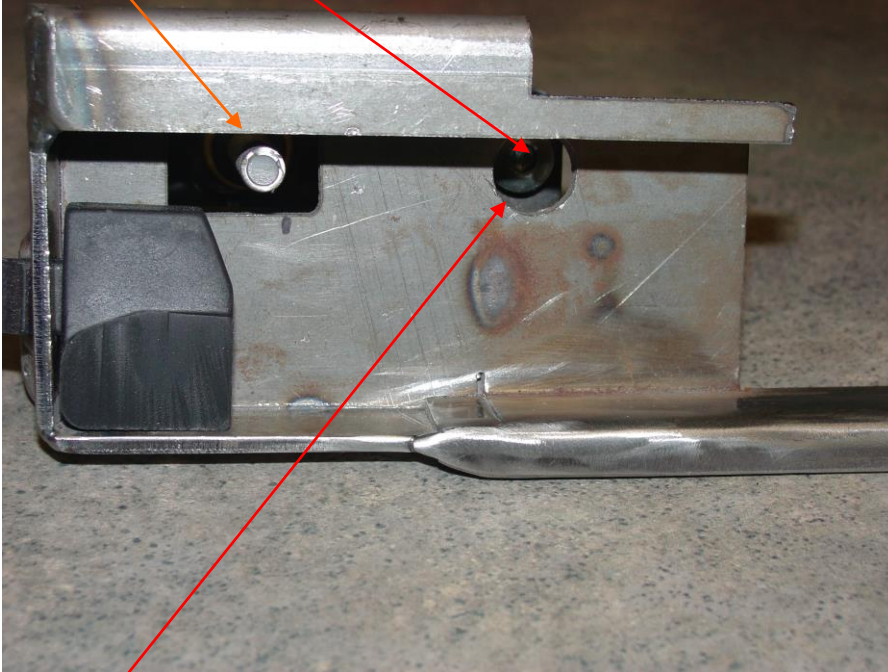

Turn bolt to the right to make switch move forward, turn the bolt left to make switch move back. To make sure the switch has move please push on the switch with a screw driver to set it.

This tab is threaded

