

2016-11-10

[illegible]

To Enable / Disable EITMS:

NOTE

- *EITMS can be enabled or disabled with the engine running or shut off.*
 - *On vehicles equipped with radios, the EITMS activation and enabled/disabled can be viewed in the Information Screen.*
1. Turn the ignition on and the OFF/RUN switch to RUN.
 2. Roll-off the throttle grip until it stops turning and hold.
 3. After 3 seconds, the cruise control indicator lamp will flash indicating the EITMS status.
 - Flashing green indicates EITMS is enabled.
 - Flashing amber indicates that EITMS is disabled.
 4. To set the indicated status, release the throttle control grip.
 5. To change the status, repeat above steps.