

# MULTI-MODEL (EQUIPPED WITH MANUAL HVAC) HEATER SYSTEM OPERATING TIPS

This article provides HVAC heater/defroster operating tips using Mode selector dial. This includes the use of intermediate positions ● .

## Operating Tips For Manual HVAC


To warm-up foot area quickly, you first need to consider if the windshield is fogged.

Some customers set the MODE SELECTOR DIAL to  . This position will provide best heater performance to foot area; however, defroster performance may be limited.

If windshield fogging is present, use intermediate positions ● between  and  or  and  .



The chart below shows the airflow ratio to Floor/Defroster at each mode including intermediate positions.

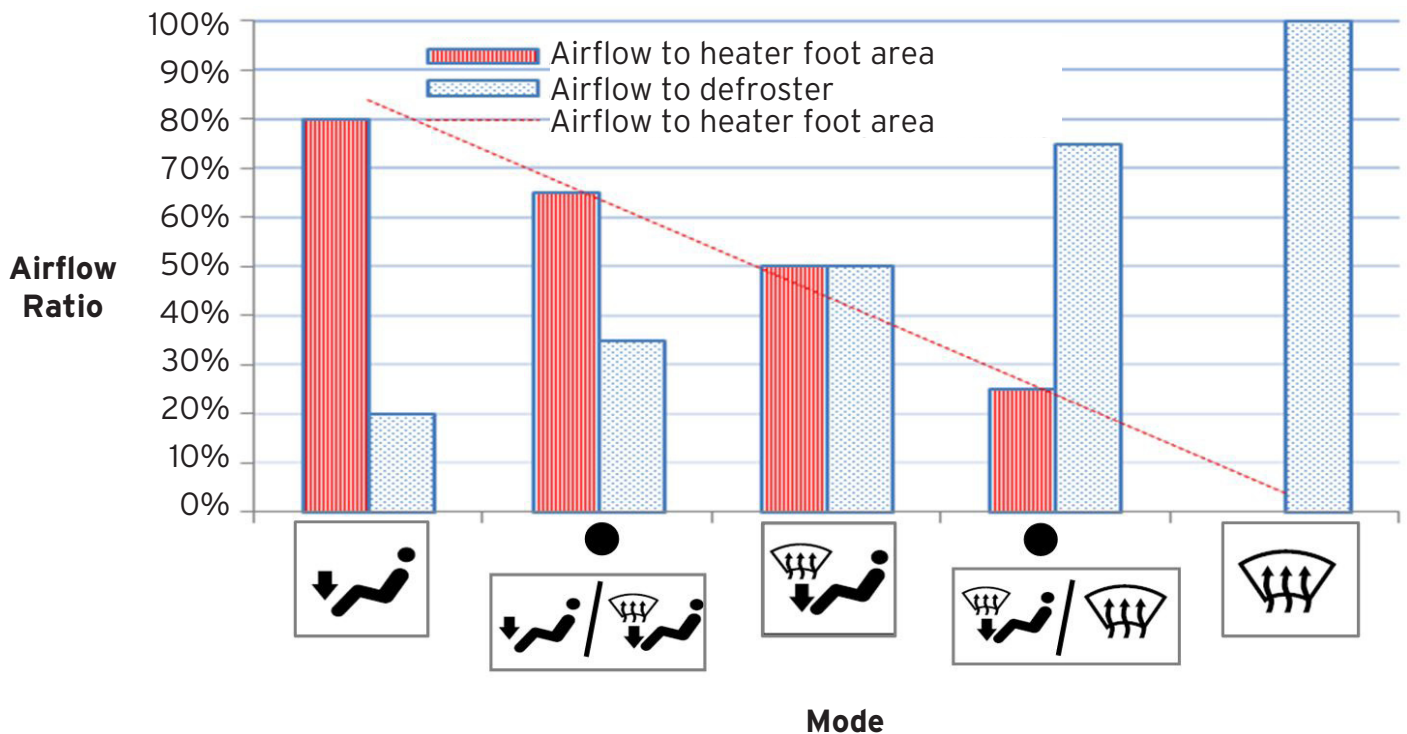

**Note:** Once the cabin interior warms up to the desired temperature, change from Recirc (🚗) to Outside Air mode (🚗) to minimize windshield fogging.

The flow chart below shows the best heater mode positions to heat the floor, including the usage of intermediate position between Floor and Defroster/Floor.

