

# TECHNICAL BULLETIN

## LTB00960NAS1

### 01 AUG 2016



© Jaguar Land Rover North America, LLC

NOTE: The information in Technical Bulletins is intended for use by trained, professional Technicians with the knowledge, tools, and equipment required to do the job properly and safely. It informs these Technicians of conditions that may occur on some vehicles, or provides information that could assist in proper vehicle service. The procedures should not be performed by 'do-it-yourselfers'. If you are not a Retailer, do not assume that a condition described affects your vehicle. Contact an authorized Land Rover service facility to determine whether this bulletin applies to a specific vehicle.

### **SECTION: 501-05**

### Loadspace Cover Support Peg(s) Broken

### **AFFECTED VEHICLE RANGE:**

#### **Range Rover (LG)**

**Model Year:** 2013 Onwards  
**VIN:** 001204 Onwards  
**Assembly Plant:** Solihull

MARKETS:

NAS

### **CONDITION SUMMARY:**

**Situation:** One or more of the loadspace cover support pegs may be broken, snapped, or loose.

**Cause:** This may be caused by general wear and tear on the loadspace cover support peg.

**Action:** Should a customer express this concern, follow the Service Instruction below.

### **PARTS:**

LR092652	Service Repair Kit	1
----------	--------------------	---

### **TOOLS:**

Refer to Workshop Manual for any required special tools.

### **WARRANTY:**

 **NOTE: Repair procedures are under constant review, and therefore times are subject to change; those quoted here must be taken as guidance only. Always refer to TOPIx to obtain the latest repair time.**

 **NOTE: DDW requires the use of causal part numbers. Labor only claims must show the causal part number with a quantity of zero.**

DESCRIPTION	SRO	TIME (HOURS)	CONDITION CODE	CAUSAL PART
Loadspace cover - support peg - renew	76.19.14	0.1	42	LR069013

 **NOTE: Normal Warranty procedures apply.**


### **SERVICE INSTRUCTION:**

1. Open the tailgate.

2.  **NOTE: Make sure the loadspace cover is placed on a clean surface to avoid damage.**


Remove the loadspace cover.

3. Using a suitable tool, lever off the affected loadspace cover support peg.

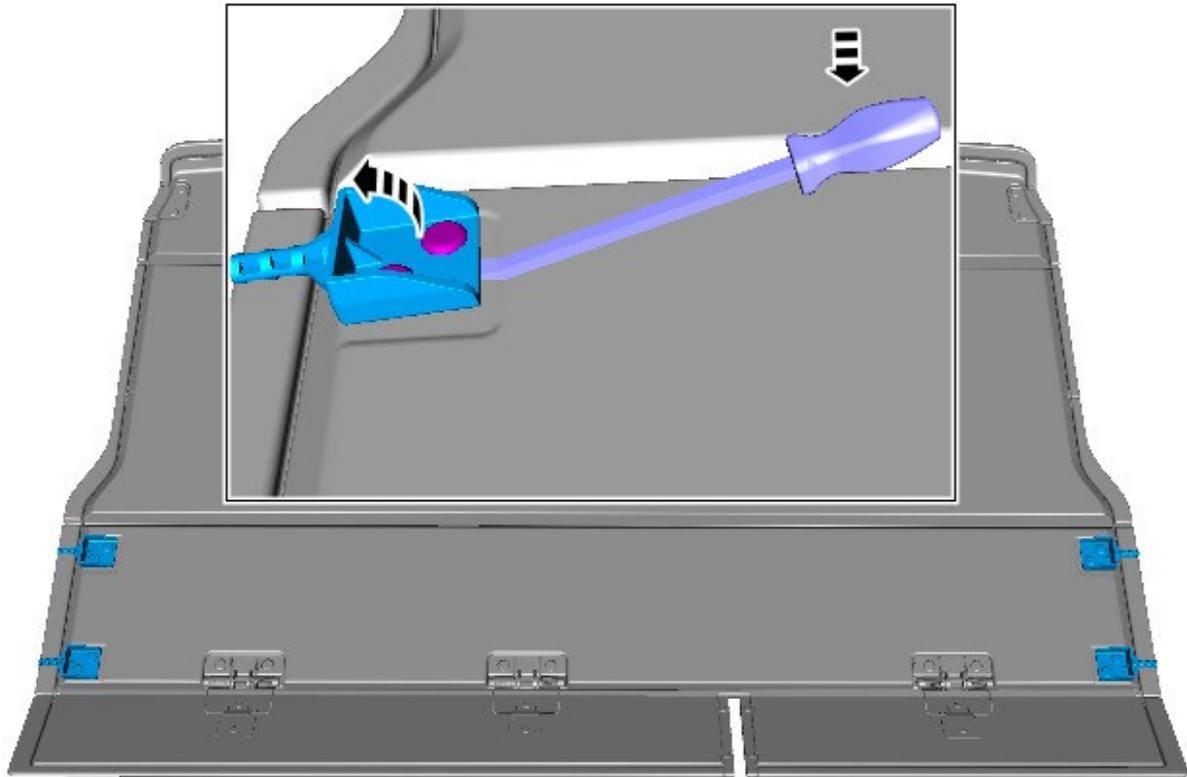

E193116

4. Using a suitable tool, install the new loadspace cover support peg.
  - Use the rivets supplied in the Service Repair kit.

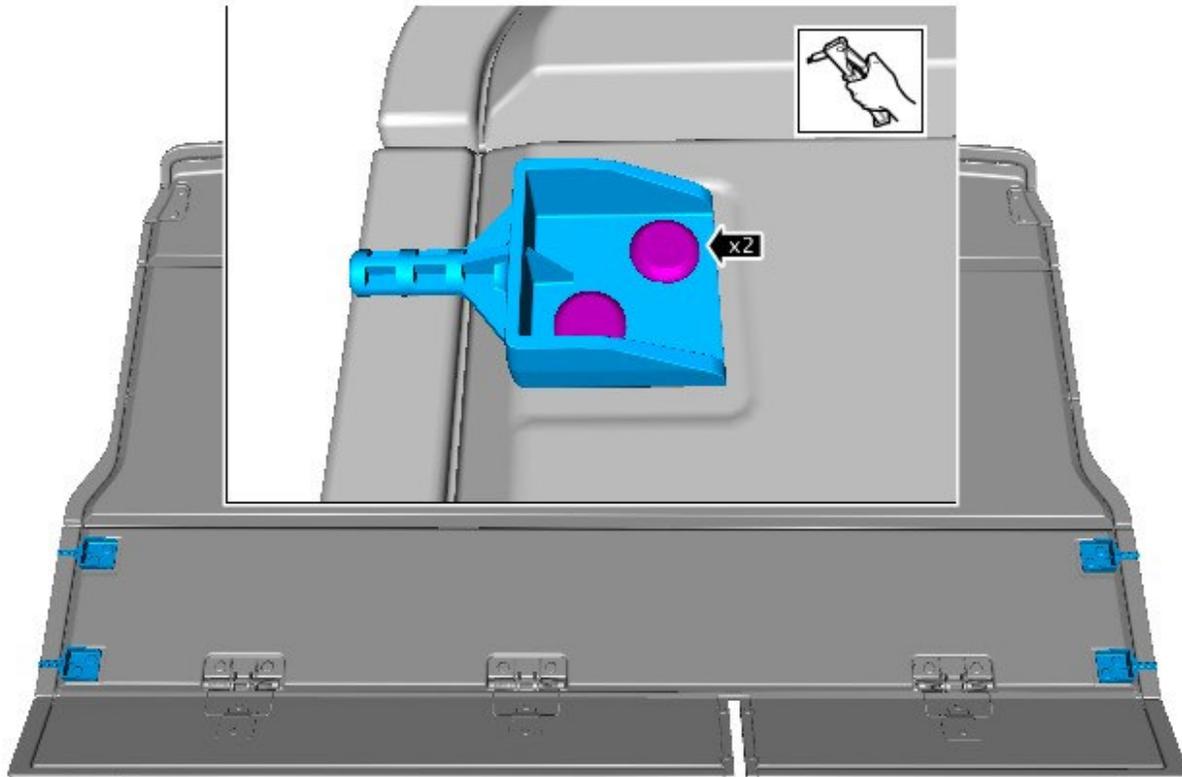

E193117

5. Repeat Steps 3 and 4 for all broken, snapped, or loose loadspace cover support pegs.
6. Install the loadspace cover.
7. Close the tailgate.