

December 8, 2016

05335 Version 1

Right Rear Seat Does Not Fold Properly

AFFECTED VEHICLES

Year	Model	Trim	VIN Range
2015	CR-V	2WD	2HKRM3...FH512304 thru END
			5J6RM3...FL007921 thru END
		AWD	2HKRM4...FH620499 thru END
			5J6RM4...FL026962 thru END
2016	CR-V	2WD	2HKRM3...GH500001 thru 2HKRM3...GH500271
			5J6RM3...GL000001 thru 5J6RM3...GL000564
		AWD	2HKRM4...GH600001 thru 2HKRM4...GH600271
			5J6RM4...GL000001 thru 5J6RM4...GL04441

NOTE: Vehicles with VINs beginning with 3CZ, built in Mexico, are not affected.

BACKGROUND

When the right rear seat release lever is pulled, the seat bottom is slow to flip up, causing the rear seat to not fold correctly.

POSSIBLE CAUSE

The right rear lower seat bracket is binding.

CORRECTIVE ACTION

Adjust the seat bracket.

WARRANTY CLAIM INFORMATION

The normal warranty applies.

Operation Number	Description	Flat Rate Time	Defect Code	Symptom Code	Template ID	Failed Part Number
8533A2	Adjust the lower seat bracket.	0.4 hr	07403	03214	16-104A	82212-T0A-A01

Skill Level: Repair Technician

DIAGNOSIS


Check that the right rear seat (40 portion) folds properly by pulling the release lever.

- If the seat bottom is slow to fold up, causing the seat back to make contact and not complete the seat folding sequence, continue to REPAIR PROCEDURE.
- If the seat folds normally, this bulletin does not apply.


CUSTOMER INFORMATION: The information in this bulletin is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely maintain your vehicle. These procedures should not be attempted by "do-it-yourselfers," and you should not assume this bulletin applies to your vehicle, or that your vehicle has the condition described. To determine whether this information applies, contact an authorized Honda automobile dealer.

REPAIR PROCEDURE


1. Remove the right side rear seat cushion foot cover.

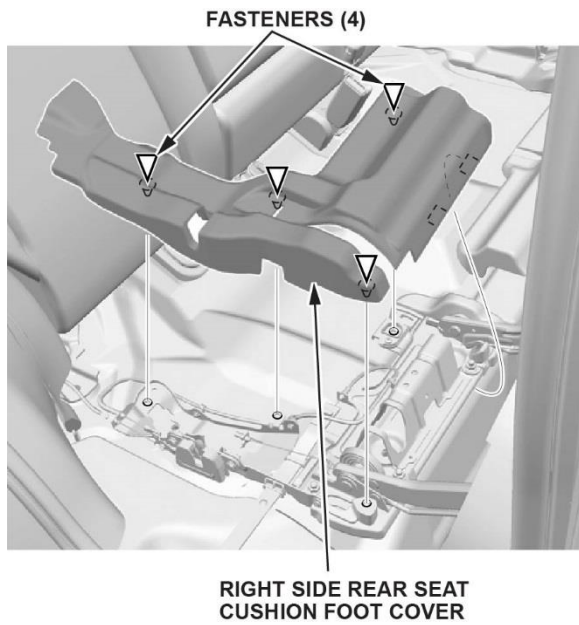


2. Remove the right rear seat cushion link cover.

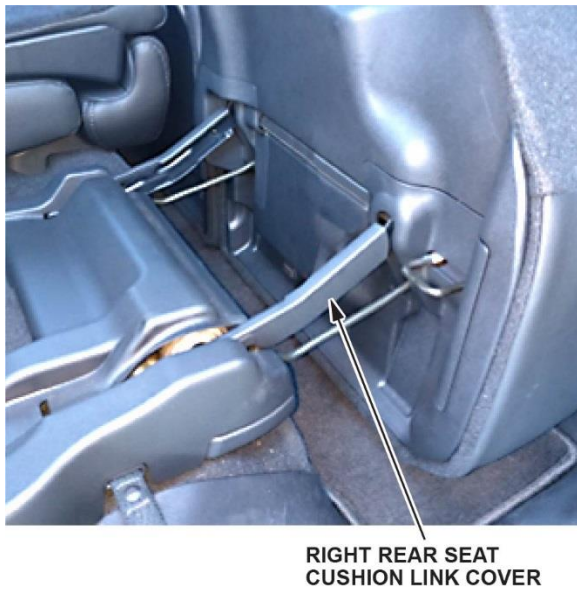

3. Place a pry bar between the right seat cushion outer link and the bracket, and apply pressure in the direction shown.

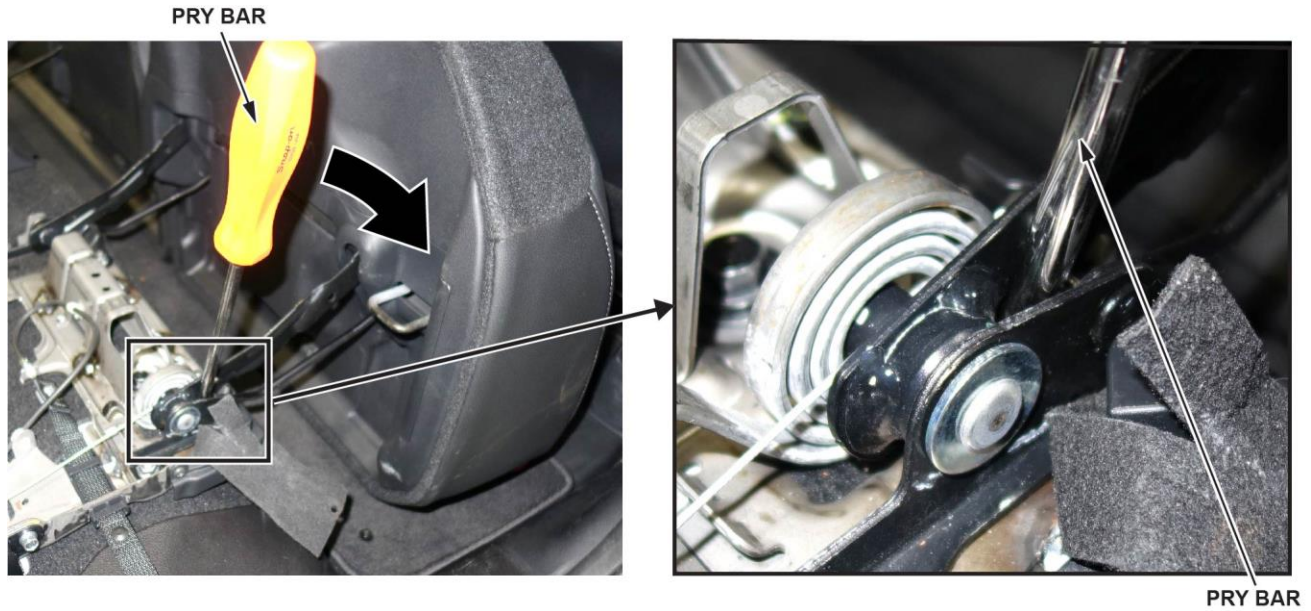

4. Check that the seat drops freely. Lift the seat bottom until the spring touches the bracket, then let the seat bottom drop.
- If the seat drops freely, the repair is complete.
 - If the seat does not drop freely, repeat steps 3 and 4 until the seat drops freely.

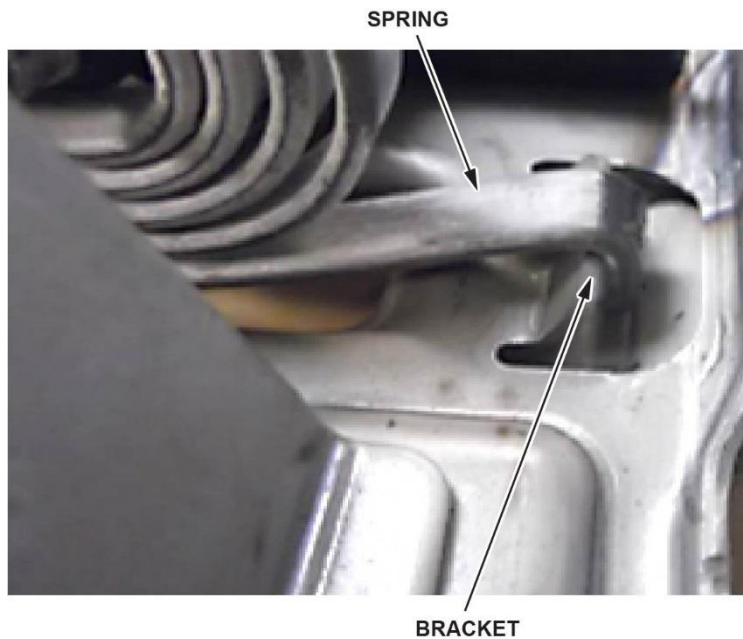

END