



<b>Countries:</b>	CANADA, UNITED STATES	<b>Document ID:</b>	IK0800540
<b>Availability:</b>	ISIS, IsSIR	<b>Revision:</b>	0
<b>Major System:</b>	ELECTRICAL SYSTEM	<b>Created:</b>	4/11/2017
<b>Current Language:</b>	English	<b>Last Modified:</b>	4/17/2017
<b>Other Languages:</b>	NONE	<b>Author:</b>	Charles Schroeder
<b>Viewed:</b>	116		

[Less Info](#)

Hide Details

Coding Information

<b>Copy Link</b> 	<b>Copy Relative Link</b> 	<b>Bookmark</b>  <a href="#">View My Bookmarks</a>	<b>Add to Favorites</b> 	<b>Print</b> 	<b>Provide Feedback</b> 	<b>Helpful</b>  2	<b>Not Helpful</b>  0
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

**Title: Premium Electronic Gauge Cluster in LT and RH Fuel and DEF Distance to Empty**

**Applies To: LT and RH Models with Premium Electronic Gauge Cluster**

## Change Log

Please refer to the change log text box below for recent changes to this article:

04/17/2017 - Initial Article Release.
---------------------------------------

## Description

On LT and RH models with Premium Electronic Gauge Cluster (EGC) the Fuel Distance to Empty and DEF Distance to Empty will not be displayed. A future software update will be available to resolve this concern.

Sales Feature Codes	Description

16GDG 16GDH 16GDJ	GAUGE CLUSTER Premium Level; English with English Speedometer and Tachometer, for Air Brake Chassis, Includes Engine Coolant Temperature, Primary and Secondary Air Pressure, Fuel and DEF Gauges, Oil Pressure Gauge, Includes 5 Inch LCD Color Display
-------------------------	--

## Symptoms

### Diagnostic Trouble Codes & Dashboard Indicator Lights:

DTC/Light	Description
No Faults or Warning Lights	

### Customer Observations or Concerns:

- Fuel Distance to Empty is not displayed on a Digital Gauge in the Trip screen, or as one of the corner gauges of the Electronic Gauge Cluster.
- DEF Distance to Empty is not displayed on a Digital Gauge in the Trip screen, or as one of the corner gauges of the Electronic Gauge Cluster.

## Special Tools / Software

Tool Description	Tool Number	Comments	Instructions
Not Applicable			

## Service Parts Information

Kit Description	Part Number	Quantity Required	Notes
Not Applicable			

## Diagnostic Steps

There are no diagnostics steps associated with this.

## Repair Step(s)

There are no repair steps available at this time.

---

## **Warranty Information**

### **Warranty Claim Coding:**

Refer to the [SRT Manual](#) for Repair Times

---

## **Other Resources**

[Master Service Information Site](#)

[Electronic Gauge Cluster Operation and Maintenance Manual](#)

 Hide Details

#### Feedback Information

Viewed: 115

Helpful: 2

Not Helpful: 0

No Feedback Found

---

Copyright © 2017 Navistar, Inc.