



GET YOUR PHIL Friday RV'ing tips n tricks

TIP #28

Filling The LP tank.

Over the last few weeks a lot of questions on the filling of the LP tank (Propane tank) and how will I know if the tank is filled to 80 % as it says in the manual and on the warning labels.

To fill your LP tank you remove the (1) Yellow propane fill cap and open up the (2) breather valve



1)



(2)

When filling the LP Tank , fluid will appear at the breather valve once you have reached 80%. Stop filling the LP tank at this point. *** DO NOT CONTINUE TO FILL THE LP TANK***



Pleasure-Way industries uses are an ASME certified LP tank provided by Manchester Tank <http://www.mantank.com/> Please visit Manchester's web sight for information on the tank.

If the tank has been over filled the tank may off gas when the tank warms up and the LP gas expands.

The tank gage situated on the tank and the tank gage inside the vehicle will read full at 80% capacity.