



2017

Pre-Delivery Inspection

Technician Reference Document





Table of Contents Technician Reference Document

Technician Reference Document Overview

The Pre-Delivery Inspection Technician Reference Document is designed to be a resource used in hand with the Pre-Delivery Inspection Checklist (PDI). The PDI Checklist has been simplified to make the process more efficient, and in doing so, this document has been created to be used as a reference for checklist items that may have additional information. On the PDI Checklist, you find that certain items have been notated with an asterisk symbol (*), this lets you know that additional information can be found in this Technician Reference Document.

Below you will find a list of each model, with the page numbers to their left. After navigating to the desired page, you will notice each model page is formatted similarly to the PDI Checklists. After each section title is the original checklist item, followed by any additional information specific to that model.

Table of Contents

- 3-4 A3/S3 Sedan & Cabriolet/RS 3
- 5-6 A3 e-tron Sportback
- 7-8 A4 Sedan/A4 allroad
- 9-10 A5 Sport/S5 Cabriolet
- 11-12 A5 Sport/S5 Coupe
- 13-14 A6/A6 competition/S6
- 15-16 A7/A7 competition/S7/RS 7/RS 7 performance
- 17-18 A8 L/S8 plus
- 19-20 Q3
- 21-22 Q5/SQ5
- 23-25 Q7
- 26-27 R8 Coupe/R8 Spyder
- 28-29 TT/TTS Coupe
- 30-31 TT Roadster



A3/S3 Sedan & Cabriolet/RS 3 Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode

This step must be performed with the ignition on/engine off or the 03 brake module may remain in transport mode. See TSB 2042954 for resolution.

Deactivate vehicle transport mode (via Special functions > PDI service > 19-Transport mode activating/deactivating.)

Set adaption channel to enable CD Ripping (if equipped with NAV)*

Using ODIS, right click the 5F-Information control unit 1, and select "Guided Functions > 5F-Adaptations > Storage of music activating/deactivating (option 2) and when prompted for the Optical drive, choose option 1 for "On"

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Lighting and Windshield

 Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

 Install wheel bolt cover removal tool from PDI kit into trunk tool kit
 Install wheel bolt cover removal tool from PDI kit and wheel

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

 Set spare tire pressure (Sedan only)
 See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

- Check operation of window, lock, and seat controls Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating
- Check rear view mirror operation
 Check self-dimming function/lighting
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents for all zones
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

- Set Time to "Automatic setting" and "Automatic time zone"
- Verify and set language and Measurement Units
 This can be changed in the Settings menu by going to Menu >
 Vehicle > Vehicle settings
- Verify Speech dialog system is operating Press the "Talk" button and verify several commands
- Set "Entertain. Fad." in Parking aid to Medium Via "Menu->Vehicle->Left Option->Driver Assistance->Parking Aid"



A3/S3 Sedan & Cabriolet/RS 3 Technician Reference Document

Settings (continued)

Load Onboard Video Tutorials

Load Onboard Video Tutorials > Turn ignition on > Insert the Onboard DVD into the DVD Drive > Select Menu > Vehicle > Left Option > Vehicle Settings > Owner's manual and with the CD/DVD inserted select "Yes" to start the update > Turn off ignition to start update (the update will take approx. 5 minutes) > Once completed, remove the disk and place back into the case for the next vehicle

Set dealership location in navigation (if equipped) Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off" This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, AT&T Terms & Conditions (T&C) (if applicable)

► Verify system connects to mobile network (if equipped). Review TSB 2042942 for additional information

Make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot")

 Check Wi-Fi hotspot Visibility. No data available at PDI (if equipped)

Check Wi-Fi hotspot functionality is enabled and verify the Access point (SSID) is set to "Audi_MMI_XXXX," where XXXX is the last four digits of VIN. via Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot" > Hotspot settings > Access point (SSID)

Enable Google Earth (if equipped)

Enable Google Earth in the Navigation > Map Settings and verify the white Google logo appears in the bottom right hand corner of the MMI screen

On-Hoist Inspection

Inspect wheel bolts for proper torque

Use torque wrench to verify

On-Hoist Inspection (continued)

- Install wheel bolt covers and center caps as supplied Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times

Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/vibration/pulsation

Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system sensors with rear view camera (if equipped)



A3 e-tron Sportback Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode Deactivate vehicle transport mode (via Special functions ->
 - Service work -> 19-Transport mode activating/deactivating)
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Control Module list -> 5F -> Guided Functions -> 5F Adaption). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> Service work -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

- Check battery clamps for proper torque Re-torque if required
- ▶ Perform a battery test

Perform a battery test and attach the results to the repair order

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk manually and remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Lighting and Windshield

Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk lid toolkit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Verify windows can be operated with the key

Verify windows roll down and sunroof opens when either the key inserted in the door or by holding the unlock button on the remote

- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents for all zones
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialogue system is operating
 Press the "Talk" button and verify several commands
- Set "Entertain. Fad." in Parking aid to Medium Via "Menu->Vehicle->Left Option->Driver Assistance->Parking Aid"
- Load Onboard Video Tutorials

Load Onboard Video Tutorials > Turn ignition on > Insert the Onboard DVD into the DVD Drive > Select Menu > Vehicle > Left Option > Vehicle Settings > Owner's manual and with the CD/DVD inserted select "Yes" to start the update > Turn off ignition to start update (the update will take approx. 5 minutes) > Once completed, remove the disk and place back into the case for the next vehicle

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off" This can be found in the Radio/Settings Menu





A3 e-tron Sportback Technician Reference Document

Audi connect (USA ONLY) (if equipped)

- Verify Audi connect Information Packet is present
 Verify Audi connect Information Packet is present, including
 Audi brochure, AT&T brochure, AT&T Terms & Conditions
 (T&C) (if applicable)
- ➤ Verify system connects to mobile network (if equipped). Review TSB 2042942 for additional information

Make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot")

 Check Wi-Fi hotspot Visibility. No data available at PDI (if equipped)

Check Wi-Fi hotspot functionality is enabled and verify the Access point (SSID) is set to "Audi_MMI_XXXX," where XXXX is the last four digits of VIN. via Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot" > Hotspot settings > Access point (SSID)

Enable Google Earth (if equipped)

Enable Google Earth in the Navigation > Map Settings and verify the white Google logo appears in the bottom right hand corner of the MMI screen

On-Hoist Inspection

- Inspect wheel bolts for proper torque Use torque wrench to verify
- Install wheel bolt covers and center caps as supplied Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation

Driving Performance (continued)

► Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system sensors with rear view camera (if equipped)

Hybrid Technology

Verify EV button is operating

Push the EV button at a speed below 80 mph and check for lights on EV button and instrument cluster. Cycle through the different EV modes: EV, Hybrid, Hold Battery, and Charge Battery. These settings can be accessed through the MMI via MENU > Car > Car systems > Charging & e-tron > e-tron mode. EV mode may or may not activate based on current operational criteria as described in the owner's manual

- Verify charging while braking in recuperation range
 See power meter for details. Will only recuperate if battery is not fully charged
- Check MMI and instrument cluster for proper operation mode indication (only shows in MMI if equipped with NAV)
 Verify green arrows while EV or electrical drive, orange while combustion engine active, etc. Only shows in MMI if equipped with NAV
- Verify front charge port is operational

Plug in charger and verify that it is operational and charges the vehicle





A4 Sedan/A4 allroad Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode

This step must be performed with the ignition on/engine off or the 03 brake module may remain in transport mode. See TSB 2042954 for resolution.

Deactivate vehicle transport mode (via Special functions > PDI service > 19-Transport mode activating/deactivating.)

Set adaption channel to enable CD Ripping (if equipped with NAV)*

Using ODIS, right click the 5F-Information control unit 1, and select "Guided Functions > 5F-Adaptations > Storage of music activating/deactivating (option 2) and when prompted for the Optical drive, choose option 1 for "On"

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

 Set spare tire pressure
 See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

Check operation of windows and locks

Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features

- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating
- Check rear view mirror operation
 Check self-dimming function/lighting
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents for all zones
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

- Verify and set language and Measurement Units
 This can be changed in the Settings menu by going to Menu >
 Vehicle > Vehicle settings
- Verify Speech dialog system is operating Press the "Talk" button and verify several commands
- Set "Entertain. Fad." in Parking aid to Medium Via "Menu->Vehicle->Left Option->Driver Assistance->Parking Aid"
- Load Onboard Video Tutorials

Load Onboard Video Tutorials > Turn ignition on > Insert the Onboard DVD into the DVD Drive > Select Menu > Vehicle > Left Option > Vehicle Settings > Owner's manual and with the CD/DVD inserted select "Yes" to start the update > Turn off ignition to start update (the update will take approx. 5 minutes) > Once completed, remove the disk and place back into the case for the next vehicle

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test



A4 Sedan/A4 allroad Technician Reference Document

Settings (continued)

Turn off Manual Speed Warning

This can be changed in the Driver Assistance settings by going to Menu > Vehicle > Driver Assistance > Speed Warning > Manual->Select Off

Media / Radio / SAT

▶ Verify HD Radio is turned "off"

This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, AT&T Terms & Conditions (T&C) (if applicable)

Verify system connects to mobile network (if equipped). Review TSB 2042942 for additional information

Make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped) Ensure the wireless network is turned on (Telephone > Op-

tions > Wi-Fi options > Wi-Fi Mode "Hotspot")

 Check Wi-Fi hotspot Visibility. No data available at PDI (if equipped)

Check Wi-Fi hotspot functionality is enabled and verify the Access point (SSID) is set to "Audi_MMI_XXXX," where XXXX is the last four digits of VIN. via Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot" > Hotspot settings > Access point (SSID)

Enable Google Earth (if equipped)

Enable Google Earth in the Navigation > Map Settings and verify the white Google logo appears in the bottom right hand corner of the MMI screen

On-Hoist Inspection

Perform a coolant reservoir cap pressure test

via ELSA -> Enter VIN # -> Repair manual Engine -> 4-Cylinder Direct Injection 1.8L; 2.0L 4V TFSI Engine (Generation III) -> 19 Cooling System -> Coolant System/Coolant -> Cooling System, Checking for Leaks -> Pressure Relief Valve in Cap, Checking. Only the procedure "Pressure Relief Valve in Cap, Checking" should be performed in the document Cooling System, Checking for Leaks

Inspect wheel bolts for proper torque

Use torque wrench to verify

Effective 2-8-2017-US Version 2.3

On-Hoist Inspection (continued)

- Install wheel bolt covers and center caps as supplied Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times

Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/vibration/pulsation

Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system sensors with rear view camera (if equipped)

 Verify all vehicle Head-up display functionality (if equipped)

Verify the image can be adjusted properly in the viewing area of the windshield. Verify NAV directions, speed, cruise control, and lane assist are all visible in Head-Up Display (as equipped)





A5 Sport/S5 Cabriolet Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode
 Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Special functions -> Service work -> : 5F-Activating/deactivating storage of music). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc.

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

- Check battery clamps for proper torque Re-torque if required
- Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> PDI Service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

 Set spare tire pressure
 See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating Press the "Talk" button and verify several commands
- ► Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle





A5 Sport/S5 Cabriolet Technician Reference Document

Settings (continued)

- Set "Music volume while parking" to 6 lines
 Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)
- Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off" This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present including Audi brochure, T-Mobile brochure, customer SIM card, T-Mobile Terms & Conditions (T&C)(if applicable)

Connect the dealer demo SIM card to verify system connects to mobile network

Connect the dealer demo SIM card to the vehicle and make sure the system fully connects to 2G or 3G (2G or 3G symbol with Box surrounding it) (only applies if in a T-Mobile service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

► Enable Google Earth

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

Inspect wheel bolts for proper torque

Use torque wrench to verify

Install wheel bolt covers and center caps as supplied
 Wheel bolt covers and center caps can be found in the PDI kit

On-Hoist Inspection (continued)

Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times
 Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Convertible Functionality (if equipped)

Test operation of power folding top

Perform with engine running to conserve battery power

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system sensors with rear view camera (if equipped)





A5 Sport/S5 Coupe Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode
 Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Special functions -> Service work -> : 5F-Activating/deactivating storage of music). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc.

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

- Check battery clamps for proper torque Re-torque if required
- Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> PDI Service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

 Set spare tire pressure
 See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands
- ► Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle



A5 Sport/S5 Coupe Technician Reference Document

Settings (continued)

- Set "Music volume while parking" to 6 lines
 Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)
- Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off" This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present including Audi brochure, T-Mobile brochure, customer SIM card, T-Mobile Terms & Conditions (T&C)(if applicable)

Connect the dealer demo SIM card to verify system connects to mobile network

Connect the dealer demo SIM card to the vehicle and make sure the system fully connects to 2G or 3G (2G or 3G symbol with Box surrounding it) (only applies if in a T-Mobile service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

► Enable Google Earth

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

Inspect wheel bolts for proper torque

Use torque wrench to verify

Install wheel bolt covers and center caps as supplied
 Wheel bolt covers and center caps can be found in the PDI kit

On-Hoist Inspection (continued)

Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times
 Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)
 Verify operation of Audi parking system sensors with rear view camera (if equipped)





A6/A6 competition/S6 Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode
 Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)
- Deactivate air suspension loading mode (if equipped) via Special Functions -> Service Work -> 34-Loading mode activating/deactivating Warning! Car body may lower!
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Control Module list -> 5F -> Guided Functions -> 5F Adaption). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

► Set service reminder

via Special functions -> PDI Service -> 17-PDI-resetting SRI at PDI, counter reset, etc.

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Exterior (continued)

Check all doors for proper power closing (if equipped)
 For vehicles equipped with the power door closing feature, check all doors for proper closing

Lighting and Windshield

Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, seat ventilation and massage (if equipped), heated seats and child safety features
- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Verify operation heated/ventilated and massaging seats (if equipped)

Check both front and rear. Massaging feature is in the front seats only (if equipped)

- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation



A6/A6 competition/S6 Technician Reference Document

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on"

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands
- Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle

▶ Set "Music volume while parking" to 6 lines

Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off"

This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, customer SIM card, AT&T Terms & Conditions (T&C)(if applicable)

 Connect the dealer demo SIM card to verify system connects to mobile network

Connect the AT&T dealer demo SIM card to the vehicle and make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Effective 2-8-2017-US Version 2.3

Audi connect (USA ONLY) (if equipped) (continued)

► Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

Enable Google Earth (if equipped)

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

- Inspect wheel bolts for proper torque Use torque wrench to verify
- Install wheel bolt covers
 Wheel bolt covers can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

Verify engine Start-Stop System functionality

Verify the velum sticker is on the start/stop button. Remove the start/stop information card from the car kit and place it in the glove box with the owner's manuals. Additional supply can be ordered via the Brand Store on AccessAudi

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times

Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation

Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system with rear view camera and top and/or corner view cameras

Verify all vehicle Head-up Display functionality (if equipped)

Verify the image can be adjusted properly in the viewing area of the windshield. Verify NAV directions, speed, cruise control, and lane assist are all visible in Head-Up Display (as equipped)





A7/A7 competition/S7/RS 7/RS 7 performance Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode
 Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)
- Deactivate air suspension loading mode (if equipped) via Special Functions -> Service Work -> 34-Loading mode activating/deactivating Warning! Car body may lower!
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Control Module list -> 5F -> Guided Functions -> 5F Adaption). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI Service -> 17-PDI-resetting SRI at PDI, counter reset, etc.

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Check all doors for proper power closing (if equpped) For vehicles equipped with the power door closing feature, check all doors for proper closing

Lighting and Windshield

Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

Check operation of window, lock, and seat controls

Check operation of all switches: Locks, windows, seat adjustment, seat ventilation and massage (if equipped), heated seats and child safety features

- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Verify operation heated/ventilated & massaging seats (if equipped)

Check both front and rear. Massaging feature is in the front seats only (if equipped)

- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on"

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands





A7/A7 competition/S7/RS 7/RS 7 performance Technician Reference Document

Settings (continued)

Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle

▶ Set "Music volume while parking" to 6 lines

Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off"

This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, customer SIM card, AT&T Terms & Conditions (T&C)(if applicable)

Connect the dealer demo SIM card to verify system connects to mobile network

Connect the AT&T dealer demo SIM card to the vehicle and make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

Enable Google Earth (if equipped)

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

- Inspect wheel bolts for proper torque Use torque wrench to verify
- Install wheel bolt covers
 Wheel bolt covers can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

Verify engine Start-Stop System functionality

Verify the velum sticker is on the start/stop button. Remove the start/stop information card from the car kit and place it in the glove box with the owner's manuals. Additional supply can be ordered via the Brand Store on AccessAudi

Verify engine performance and acceleration

Listen for abnormal noise/vibrations

- Test drive vehicle applying brakes several times
 Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system with rear view camera and top and/or corner view cameras

 Verify all vehicle Head-up Display functionality (if equipped)

Verify the image can be adjusted properly in the viewing area of the windshield. Verify NAV directions, speed, cruise control, and lane assist are all visible in Head-Up Display (as equipped)



A8 L/S8 plus Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode
 Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)
- Deactivate air suspension loading mode (if equipped) via Special Functions -> Service Work -> 34-Loading mode activating/deactivating Warning! Car body may lower!
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Special functions -> Service work -> : 5F-Activating/deactivating storage of music). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

► Set service reminder

via Special functions -> PDI Service -> 17-PDI-resetting SRI at PDI, counter reset, etc.

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Check all doors for proper power closing (if equpped) For vehicles equipped with the power door closing feature, check all doors for proper closing

Lighting and Windshield

 Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

 Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

Check operation of window, lock, and seat controls

Check operation of all switches: Locks, windows, seat adjustment, seat ventilation and massage (if equipped), heated seats and child safety features

- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Verify operation heated/ventilated & massaging seats (if equipped)

Check both front and rear.

- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

- Set Time source setting to "GPS" and set Auto daylight savings time to "on"
 - Change time zone appropriate to the dealer location
- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands

Effective 2-8-2017-US Version 2.3



A8 L/S8 plus Technician Reference Document

Settings (continued)

Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle

▶ Set "Music volume while parking" to 6 lines

Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

▶ Verify operation of Rear Seat Entertainment (if equipped) Rear Seat Entertainment/Rear MMI: Verify operation. Verify the wireless headphones are present and pair them to the RSE system (refer to RSE manual). When pairing the headphones, press and hold the on/off button for 4–5 seconds until the light starts flashing quickly. Also verify the DVD units operate

▶ Verify HD Radio is turned "off"

This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present including Audi brochure, T-Mobile brochure, customer SIM card, T-Mobile Terms & Conditions (T&C)(if applicable)

 Connect the dealer demo SIM card to verify system connects to mobile network

Connect the dealer demo SIM card to the vehicle and make sure the system fully connects to 2G or 3G (2G or 3G symbol with Box surrounding it) (only applies if in a T-Mobile service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Audi connect (USA ONLY) (if equipped) (continued)

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

Enable Google Earth (if equipped)

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

- ► Inspect wheel bolts for proper torque Use torque wrench to verify
- Install wheel bolt covers

Wheel bolt covers can be found in the PDI kit

 Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

Verify engine Start-Stop System functionality

Verify the velum sticker is on the start/stop button. Remove the start/stop information card from the car kit and place it in the glove box with the owner's manuals. Additional supply can be ordered via the Brand Store on AccessAudi

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- ► Test drive vehicle applying brakes several times

Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation

Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system with rear view camera and top and/or corner view cameras

 Verify all vehicle Head-up Display functionality (if equipped)

Verify the image can be adjusted properly in the viewing area of the windshield. Verify NAV directions, speed, cruise control, and lane assist are all visible in Head-Up Display (as equipped)



Q3 Technician Reference Document

Vehicle Preparation

- Deactivate vehicle transport mode
 Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)
- Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Special functions -> Service work -> : 5F-Activating/deactivating storage of music). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI Service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

- Check battery clamps for proper torque Re-torque if required
- ▶ Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk manually and remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Lighting and Windshield

 Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

```
Effective 2-8-2017-US
Version 2.3
```

Trunk Inspection

Verify power tailgate is operational and set default opening height

If equipped with power rear tailgate, adjust the opening height to 75 inches (190 cm) from the ground to the close button in the rear lid. Press and hold the close button in the rear lid for at least four seconds to program the opening height

 Install wheel bolt cover removal tool from PDI kit into trunk lid toolkit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit to the right of the spare tire

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet.

Interior

Check operation of window, lock, and seat controls

Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features

- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents
- Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units
 This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands

Model Year 2017 | Audi Pre-Delivery Reference Document | 19



Q3 Technician Reference Document

Load Onboard Video Tutorials from SD card Requirements: 1 SD card at least 2GB in size.

- Website: Download Installation content from http://www.audiiqs.com/. Select In-Car Video Tutorials from the main screen. Choose 2017 and Select "Download Tutorial" for the 2017 Q3. Refer to the File Extraction Document for instructions to copy data to SD Card.
- 2. Car: Load Onboard Video Tutorials> Turn ignition on> Insert the Created SD Card for 2017 Q3 into SD1 slot> Select the CAR function button. System will initialize> Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select SD1"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the SD Card and store to be used again for the next vehicle.
- ▶ Set "Music volume while parking" to 6 lines

Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off" This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present

Verify Audi connect Information Packet is present including Audi brochure, T-Mobile brochure, customer SIM card, T-Mobile Terms & Conditions (T&C)(if applicable)

 Connect the dealer demo SIM card to verify system connects to mobile network

Connect the dealer demo SIM card to the vehicle and make sure the system fully connects to 2G or 3G (2G or 3G symbol with Box surrounding it) (only applies if in a T-Mobile service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

Effective 2-8-2017-US Version 2.3

Audi connect (USA ONLY) (if equipped) (continued)

Enable Google Earth (if equipped)

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

- Inspect wheel bolts for proper torque
 Use torque wrench to verify
- Install wheel bolt covers and center caps as supplied
 Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle*

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- ► Verify engine performance and acceleration Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system sensors with rear view camera (if equipped)



Q5/SQ5 Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode

Deactivate vehicle transport mode (via Special functions -> Service work -> 19-Transport mode activating/deactivating)

 Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Special functions -> Service work -> : 5F-Activating/deactivating storage of music). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI Service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk manually and remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Exterior (continued)

 Prepare the base bars for customer delivery (install bars only upon customer request)

Install the rubber strips to the top of the base carrier bars (do not install the carrier bars on the vehicle unless customer has requested). Repackage the bars into the box if they are not being installed on the vehicle. Retrieve the paper with the torque wrench key code from the base carrier bar box. Insert the paper with the key code into the owner's literature wallet. Record torque wrench key code in the VDF to ensure it's documented in the event the paper with the code is misplaced

Lighting and Windshield

Test front washers (and headlight washers if equipped) Headlights must be on to test functionality of the headlight

Trunk Inspection

washers

Verify power tailgate is operational and set default opening height

Adjust the trunk lid opening height to 77.7 inches (197 cm) from the ground to the close button in the rear lid. Press and hold the close button in the rear lid for at least four seconds to program the opening height

Install wheel bolt cover removal tool from PDI kit into trunk lid toolkit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit to the right of the spare tire

Interior

Check operation of window, lock, and seat controls

Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features

- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Verify operation heated/ventilated seats (if equipped)
 Check both front and rear (if equipped)
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents



Q5/SQ5 Technician Reference Document

Interior (continued)

Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands

Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle

▶ Set "Music volume while parking" to 6 lines

Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)

 Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

▶ Verify HD Radio is turned "off"

This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present

Verify Audi connect Information Packet is present including Audi brochure, T-Mobile brochure, customer SIM card, T-Mobile Terms & Conditions (T&C) (if applicable)

 Connect the dealer demo SIM card to verify system connects to mobile network

Connect the dealer demo SIM card to the vehicle and make sure the system fully connects to 2G or 3G (2G or 3G symbol with Box surrounding it) (only applies if in a T-Mobile service area)

Audi connect (USA ONLY) (if equipped) (continued)

► Turn on the wireless network

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

► Enable Google Earth

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

- Inspect wheel bolts for proper torque
 Use torque wrench to verify
- Install wheel bolt covers and center caps as supplied Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

Verify engine Start-Stop System functionality

Verify the velum sticker is on the start/stop button. Remove the start/stop information card from the car kit and place it in the glove box with the owner's manuals. Additional supply can be ordered via the Brand Store on AccessAudi

- ► Verify engine performance and acceleration Listen for abnormal noise/vibrations
- ➤ Test drive vehicle applying brakes several times Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)

Verify operation of Audi parking system sensors with rear view camera (if equipped)



Q7 Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode

Deactivate vehicle transport mode (via Special functions -> PDI service -> 19-Transport mode activating/deactivating)

This step must be performed with the engine off, ignition on, or the 03 brake module may remain in transport mode. See TSB 2042954 for resolution

 Set adaption channel to enable CD Ripping (if equipped with NAV)

Using ODIS, right click the 5F-Information control unit 1, and select "Guided Functions > 5F-Adaptations > Storage of music activating/deactivating (option 2) and when prompted for the Optical drive, choose option 1 for "On"

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc.

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Check all doors for proper power closing (if equipped)

For vehicles equipped with the power door closing feature, check all doors for proper closing

Lighting and windshield

 Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

 Verify power tailgate is operational and set default opening height

Adjust the trunk lid opening height to 75 inches (190 cm) from the ground to the close button in the rear lid. Press and hold the close button in the rear lid for at least four seconds to program the opening height. Verify operation of hands-free release (if equipped)

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

Check operation of windows and locks

Check operation of all switches: Locks, windows, and child safety features

- Check rear view mirror operation
 Check self-dimming function/lighting
- Inspect mirrors for proper operation

Inspect folding, adjustments, right side tilt in reverse, heating

- Verify operation front heated seats
 Ensure seat rail end caps are in place and in tact
- Verify operation of manual folding 2nd row and power folding 3rd row seats
 Controls for the power folding 3rd row are located in the
- trunk

 Verify proper operation of climate control

Ensure proper heating and A/C cooling and open all panel vents for all zones

Check panoramic sunroof and sunshade operation
 Verify open/close/vent/deflector at edge and sunshade operation



Q7 Technician Reference Document

Settings

- Verify and set language and Measurement Units
 This can be changed in the Settings menu by going to Menu >
 Vehicle > Vehicle settings
- Verify Speech dialog system is operating Press the "Talk" button and verify several commands
- Set "Entertain. Fad." in Parking aid to Medium Via Menu > Vehicle > Driver Assistance > Parking Aid
- Load Onboard Video Tutorials

Load Onboard Video Tutorials > Turn ignition on > Insert the Onboard DVD into the DVD Drive > Select Menu > Vehicle > Left Option > Vehicle Settings > Owner's manual and with the CD/DVD inserted select "Yes" to start the update > Turn off ignition to start update (the update will take approx. 5 minutes) > Once completed, remove the disk and place back into the case for the next vehicle

Set dealership location in navigation (if equipped)

Set dealership location for following back to dealership during road test

▶ Turn off Manual Speed Warning

This can be changed in the Driver Assistance settings by going to Menu > Vehicle > Driver Assistance > Speed Warning > Manual->Select Off

Media / Radio / SAT

Verify HD Radio is turned "off"

This can be found in the Radio/Settings Menu

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, AT&T Terms & Conditions (T&C)(if applicable)

► Verify system connects to mobile network (if equipped) Review TSB 2042942 for additional information

Make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped) Ensure the wireless network is turned on (Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot")

Audi connect (USA ONLY) (if equipped) (continued)

 Check Wi-Fi hotspot visibility. No data is available at PDI (if equipped)

Check Wi-Fi hotspot visibility is enabled and verify the Access point (SSID) is set to "Audi_MMI_XXXX," where XXXX is the last four digits of VIN. via Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot" > Hotspot settings > Access point (SSID)

Enable Google Earth (if equipped)

Enable Google Earth in the Navigation > Map Settings and verify the white Google logo appears in the bottom right hand corner of the MMI screen

On-Hoist Inspection

- Inspect wheel bolts for proper torque
 Use torque wrench to verify
- Install wheel bolt covers and center caps as supplied
 Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

Verify engine Start-Stop System functionality

Verify the velum sticker is on the start/stop button. Remove the start/stop information card from the car kit and place it in the glove box with the owner's manuals. Additional supply can be ordered via the Brand Store on AccessAudi

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/vibration/pulsation
- Verify operation of all-wheel steering with vehicle speeddependent control (if equipped)

All-wheel steering with vehicle speed-dependent control counter-steers under 37 mph and dynamic parallel-steers above 50 mph (if equipped)



Q7 Technician Reference Document

Driver Assistance

Verify Audi side assist functionality Pre sense rear (if equipped)

Includes Rear cross traffic alert and Vehicle exit assist (if equipped)

- Verify operation of parking system plus
 Verify operation of Audi Parking aid with rear view camera and top and/or corner view cameras (if equipped)
- Verify all vehicle Head-up display functionality (if equipped)

Verify the image can be adjusted properly in the viewing area of the windshield. Verify NAV directions, speed, cruise control, and lane assist are all visible in Head-Up Display (as equipped)





R8 Coupe/R8 Spyder Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode

This step must be performed with the engine off, ignition on, or the 03 brake module may remain in transport mode. See TSB 2042954 for resolution

Deactivate vehicle transport mode (via Special functions -> PDI service -> 19-Transport mode activating/deactivating)

Set adaption channel to enable CD Ripping (if equipped with NAV)*

Set adaptation channel (via Control Module list -> 5F -> Guided Functions -> 5F Adaption). Also referred to as CD Ripping.Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Deactivate the anti-theft function for the Navigation DVD

Deactivate the anti-theft function for the Navigation DVD using the Scan Tool. Follow the process outlined in TSB 2013790

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform the A-battery test for new batteries using GFF in ODIS Diagnosis -> Special functions -> PDI service. Select option 2, the battery test for new batteries as part of the pre-delivery inspection and act according to the test result (ok, recharge, replace). Ensure diagnosis log is uploaded to the GFF paperless server by selecting "ok" when tester wants to send the current generated diagnosis protocol online. (Note: Do not use Guided Function. The diagnosis log will not be uploaded to GFF paperless)

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Effective 2-8-2017-US Version 2.3

Exterior (continued)

 Test front washers (and headlight washers if equipped)
 Headlights must be on to test functionality of the headlight washers

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Check rear view mirror operation
 Check self-dimming function/lighting
- Inspect mirrors for proper operation

Inspect folding, adjustments, right side tilt in reverse, heating

Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents for all zones

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units
 This can be changed in the Settings menu by going to Menu >
 Vehicle > Vehicle settings
- Verify Speech dialog system is operating
 Press the "Talk" button and verify several commands
- Load Onboard Video Tutorials

Load Onboard Video Tutorials> Turn ignition on> Insert the Onboard DVD into the DVD Drive> Select the CAR function button. System will initialize>Select the Owner's Man. function by selecting the upper right control button> Select "Yes"> Select "CD/DVD"> Select "Start update"> Turn off ignition to start update (the update will take approx. 5 minutes)> Once completed, remove the disk and place back into the case for the next vehicle

Set "Music volume while parking" to 6 lines

Accessed via MMI rear view camera display, Settings > Music volume while parking (applies to vehicles with park assist or rear view camera)





R8 Coupe/R8 Spyder Technician Reference Document

Settings (continued)

 Set dealership location in navigation
 Set dealership location for following back to dealership during road test

Media / Radio / SAT

Verify HD Radio is turned "off"
 This can be found in the Radio/Settings Menu

Audi connect (USA ONLY)

- Verify Audi connect Information Packet is present
 Verify Audi connect Information Packet is present, including
 Audi brochure, AT&T brochure, customer SIM card, AT&T
 Terms & Conditions (T&C) (if applicable)
- Connect the dealer demo SIM card to verify system connects to mobile network

Connect the AT&T dealer demo SIM card to the vehicle and make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network

Ensure the wireless network is turned on (Telephone > Options > Wi-Fi options > Wi-Fi Mode "Hotspot")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

► Enable Google Earth

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 2G or 3G symbol

On-Hoist Inspection

Inspect wheel bolts for proper torque

Use torque wrench to verify

Install wheel bolt covers and center caps as supplied
 Wheel bolt covers and center caps can be found in the PDI kit

Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Convertible Functionality (if equipped)

- Test operation of power folding top
 - Perform with engine running to conserve battery power

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times
 Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/vibration/pulsation
- Calibrate rear view mirror
 Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of parking system (if equipped)
 Verify operation of parking system plus with rear view camera (front and rear acoustic sensors)



TT/TTS Coupe Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode
 This step must be performed with the engine off, ignition on.

Deactivate vehicle transport mode (via Special functions -> PDI service -> 19-Transport mode activating/deactivating)

Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Control Module list -> 5F -> Guided Functions -> 5F Adaption). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

- Check battery clamps for proper torque Re-torque if required
- Perform a battery test

Perform a battery test and attach the results to the repair order

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with the Advanced Key (if equipped)

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Effective 2-8-2017-US Version 2.3

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands
- Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, customer SIM card, AT&T Terms & Conditions (T&C)(if applicable)

 Connect the dealer demo SIM card to verify system connects to mobile network

Connect the AT&T dealer demo SIM card to the vehicle and make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system





TT/TTS Coupe Technician Reference Document

Audi connect (USA ONLY) (if equipped) (continued)

 Enable Google Earth (if equipped)
 Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the 3G, or 2G symbol

On-Hoist Inspection

- Inspect wheel bolts for proper torque Use torque wrench to verify
- Install wheel bolt covers and center caps as supplied Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times
 Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- ► Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driver Assistance

Verify operation of Audi parking system

Verify operation of Audi parking system sensors; Rear sensors standard, front sensors and rear view camera (if equipped)



TT Roadster Technician Reference Document

Vehicle Preparation

Deactivate vehicle transport mode
 This step must be performed with the engine off, ignition on.

Deactivate vehicle transport mode (via Special functions -> PDI service -> 19-Transport mode activating/deactivating)

Set adaption channel to enable CD Ripping (if equipped with NAV)

Set adaptation channel (via Control Module list -> 5F -> Guided Functions -> 5F Adaption). Also referred to as CD Ripping. Perform 3 button reset of the MMI to complete the activation. Refer to the owners manual for model specific button sequence

Set service reminder

via Special functions -> PDI service -> 17-PDI-resetting SRI at PDI, counter reset, etc

Perform any open campaigns

Follow instructions listed in campaign documentation

Under the Hood Inspection

 Check battery clamps for proper torque Re-torque if required

Perform a battery test

Perform a battery test and attach the results to the repair order

Check engine oil level

Fill oil to the max level when the vehicle is at operating temperature

Exterior

Check all key buttons and features

Check functionality of all keys. Verify vehicle starts and runs with all keys and the start/stop button. Verify all doors and trunk remotely lock/unlock with all keys, including all door handle sensors with Advanced Key (if equipped)

Trunk Inspection

Install wheel bolt cover removal tool from PDI kit into trunk tool kit

Install wheel bolt cover removal tool from PDI kit and wheel lock key (if applicable) into trunk tool kit

Set spare tire pressure

See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet

Interior

- Check operation of window, lock, and seat controls
 Check operation of all switches: Locks, windows, seat adjustment, heated seats (if equipped) and child safety features
- Check rear view mirror operation
 Check self-dimming function/lighting (if equipped)
- Inspect mirrors for proper operation
 Inspect folding, adjustments, right side tilt in reverse, heating (if equipped)
- Verify proper operation of climate control
 Ensure proper heating and A/C cooling and open all panel vents

Settings

Set Time source setting to "GPS" and set Auto daylight savings time to "on."

Change time zone appropriate to the dealer location

- Verify and set language and Measurement Units This can be changed in the Setup/Settings menu
- Verify speech dialog system is operating
 Press the "Talk" button and verify several commands
- Set dealership location in navigation (if equipped)
 Set dealership location for following back to dealership during road test

Audi connect (USA ONLY) (if equipped)

Verify Audi connect Information Packet is present (if equipped)

Verify Audi connect Information Packet is present, including Audi brochure, AT&T brochure, customer SIM card, AT&T Terms & Conditions (T&C)(if applicable)

 Connect the dealer demo SIM card to verify system connects to mobile network

Connect the AT&T dealer demo SIM card to the vehicle and make sure the system fully connects to the wireless network (LTE symbol with service bars)(only applies if in an AT&T service area)

Turn on the wireless network (if equipped)

Ensure the wireless network is turned on (TEL function button > Settings Ctrl button > Wi-Fi settings > Wi-Fi active > select "Visible")



TT Roadster Technician Reference Document

Audi connect (USA ONLY) (if equipped) (continued)

Check Wi-Fi hotspot functionality

Check Wi-Fi hotspot functionality is enabled and verify the SSID is set to "AUDIXXXXX," where XXXXX = the last five digits of VIN that are automatically preset in the system

Enable Google Earth (if equipped)

Enable Google Earth in the navigation settings and verify the white Google Logo appears next to the-3G, or 2G symbol

On-Hoist Inspection

- Inspect wheel bolts for proper torque Use torque wrench to verify
- Install wheel bolt covers and center caps as supplied
 Wheel bolt covers and center caps can be found in the PDI kit
- Set and store tire pressures for either sold vehicle OR stock inventory vehicle

If a known "sold" unit, set to appropriate Normal Load Condition. See separate "2017 Normal Load Condition Tire Pressure Table" posted on ServiceNet. If going to stock, set to maximum recommended tire pressures listed on the B-pillar doorjamb, and store tire pressure values in Car/System menu

Driving Performance

- Verify engine performance and acceleration
 Listen for abnormal noise/vibrations
- Test drive vehicle applying brakes several times Apply brakes at least 4 times at 20 mph (35 km/h) to clean brake rotors. Check for abnormal noise/ vibration/pulsation
- ► Calibrate rear view mirror

Calibrate rear view mirror compass to proper zone and check self-dimming function/lighting (if equipped)

Driving Assistance

Verify operation of parking system

Verify operation of Audi parking system sensors; Rear sensors standard, front sensors and rear view camera (if equipped)

Convertible Functionality (if equipped)

► Test operation of power folding top

Perform with engine running to conserve battery power