

## Instrument cluster: HOLD indicator continues to be lit for a few seconds although the vehicle is moving

---

|                   |                                                                      |
|-------------------|----------------------------------------------------------------------|
| Topic number      | LI54.30-P-066154                                                     |
| Version           | 3                                                                    |
| Design group      | 54.30 Instrument cluster, display instruments, hazard warning device |
| Date              | 05-09-2017                                                           |
| Validity          | Model 166 and 292 with code 805, 806 and 807.                        |
| Reason for change | Remedy adapted.                                                      |
| Reason for block  |                                                                      |

---

### Complaint:

The HOLD indicator in the instrument cluster continues to be lit for a few seconds although the vehicle is moving and the brakes are disengaged.

This situation occurs only when Eco start/stop mode is activated.

| Attachments                        |                                               |
|------------------------------------|-----------------------------------------------|
| File                               | Description                                   |
| HOLD shown while car at 48 kmh.pdf | Page 1: Nominal state<br>Page 2: Actual state |

### Cause:

Internal logic of the IC software.

### Remedy:

A software update is being planned. You will be notified of the current status in this document.

Note: Even if the HOLD indicator lights up in this driving situation, neither the brakes nor any other safety systems in the vehicle are affected. The safety and restraint systems continue to operate properly and under these conditions, the vehicle can be driven safely.

| Symptoms                                                               |
|------------------------------------------------------------------------|
| Communication/information / Information display / Indicator lamp / lit |

| Control unit/fault code              |            |            |
|--------------------------------------|------------|------------|
| Control unit                         | Fault code | Fault text |
| A1 - Instrument cluster (IC) (IC172) | -          | -          |

# XENTRY TIPS

---

| Operation numbers/damage codes |                                                                      |      |             |      |
|--------------------------------|----------------------------------------------------------------------|------|-------------|------|
| Op. no.                        | Operation text                                                       | Time | Damage code | Note |
| 02-4762                        | CONNECT/DISCONNECT DIAGNOSIS SYSTEM (XENTRY/DAS)                     |      | 54288 50    |      |
| 02-5058                        | CONNECT/DISCONNECT BATTERY CHARGER (XENTRY/DAS CONNECTED)            |      | 54288 50    |      |
| 02-9334                        | UPDATE INSTRUMENT PANEL CONTROL UNIT SOFTWARE (XENTRY/DAS CONNECTED) |      | 54288 50    |      |



18.0°C 15:02

500.9 km  
4262

R N P  
D6



