



Preliminary Information

PIT5591 Dinghy towing instructions. Discharged battery after dinghy towing

Models

Brand:	Model:	Model Years:	VIN:		Engine:	Transmissions:
			from	to		
Chevrolet	Equinox	2018	All	All	All	All
Involved Region or Country:		North America				
Additional RPO/s:		None				
Condition:		When attempting to dinghy tow vehicle, the vehicle will not power down.				
Cause:		Calibration will not allow radio screen and DIC to power down when following owner manual instructions.				

Correction:

To tow the vehicle from the front with all four wheels on the ground:

1. Turn the vehicle on.
2. In vehicles equipped with AWD engage the AWD system and confirm that it is on.
3. Position the vehicle to be towed and secure it to the towing vehicle.
4. Shift the transmission to N (Neutral).
5. Turn the ignition to ACC/ACCESSORY.
6. Turn all accessories off.
7. Disconnect the negative battery cable and tie down the cable away from the battery post.

Refer to owner manual to determine which powertrain combinations can be dinghy towed.

(Engineering is working on a permanent solution to this concern).

Version History

Version	1
Modified	

