

Bulletin No.: PIT5119F Published date: 11/20/2017

# **Preliminary Information**

PIT5119F Intermittent Remote Keyless Entry Inoperative

#### **Models**

Brand:	Model:	Model Years:	VIN:		Fueine	Transmissions
bianu:			from	to	Engine:	Transmissions:
Buick	Encore	2013 - 2017	AII	All	All	All
Buick	Lacrosse	2010 - 2017	AII	All	All	All
Buick	Regal	2010 - 2017	AII	All	All	All
Buick	Verano	2012 - 2017	AII	All	All	All
Chevrolet	Camaro	2010 - 2015	AII	All	All	All
Chevrolet	Cruze	2011 - 2017	AII	All	All	All
Chevrolet	Equinox	2010 - 2017	AII	All	All	All
Chevrolet	Impala	2014 - 2017	AII	All	All	All
Chevrolet	Malibu	2013 - 2015	AII	All	All	All
Chevrolet	Malibu Limited	2016	AII	All	All	All
Chevrolet	Orlando	2012 - 2017	AII	All	All	All
Chevrolet	Sonic	2012 - 2017	AII	All	All	All
Chevrolet	Spark	2012 - 2017	AII	All	All	All
Chevrolet	Trax	2012 - 2017	AII*	All	All	All
GMC	Terrain	2010 - 2017	AII	All	All	All

<sup>\*</sup>Canada Only

#### **Supersession Statement:**

This PI was superseded to update model years. Please discard PIT5119D.

The following diagnosis might be helpful if the vehicle exhibits the symptom(s) described in this PI.

## **Condition / Concern**

Customer may comment the keyless entry remote is inoperative at times. This may be caused by the ignition key cylinder door sticks in the up position. When this happens it will disable the keyless remote start and the door lock functions. Customers may notice a Chime sound when the key is out of the ignition and the driver's door is open. The likely cause is a sticking ignition key cylinder door on plunger to the micro switch.

## **Recommendations / Instructions**

Use a Lubriplate type of lubrication spray	and lubricate the ignition ke	y cylinder door. Insert the	tip of the key in and	out to verify the
door of the cylinder is not sticking.				

Ignition key door sticking open	on key door sticking open		

Ignition key door in correct position

### **Warranty Information**

For vehicles repaired under warranty, use:

Labor Operation	Description	Labor Time	
5480068*	Lubricate the Ignition Key Cylinder	0.2 hr	

Please follow this diagnostic or repair process thoroughly and complete each step. If the condition exhibited is resolved without completing every step, the remaining steps do not need to be performed.



















