



Countries:	CANADA, UNITED STATES	Document ID:	IK1900254
Availability:	ISIS, Bus ISIS, FleetISIS, NotSIR	Revision:	3
Major System:	ACCESSORIES	Created:	11/15/2017
Current Language:	English	Last Modified:	11/30/2017
Other Languages:	NONE	Author:	William Katschke
Viewed:	149		

[Less Info](#)[Hide Details](#)

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		View My Bookmarks				5	1

Title: Air Compressor Intake Hose Rubbing Zip Tie**Applies To:** CE Bus & DuraStar with Cummins ISB

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

11/30/2017 - Added DuraStar to the applies to description

11/17/2017 - Changed Figure 3 and added instructions for repair if hose is not available.

11/16/2017 - Initial Article Release

DESCRIPTION

This document will guide the user through steps to take when the Air Compressor Hose is rubbing against zip tie beneath the hose.

SYMPTOM(s)

Air Compressor Inlet Hose rubbing against zip tie.

Diagnostic Trouble Code(s) & Dashboard Indicator Light(s):

N/A

DTC/Light	Description
N/A	N/A

Customer Observations or Concerns:

N/A

SPECIAL TOOL(s) / SOFTWARE

N/A

Tool Description	Tool Number	Comments	Instructions
N/A	N/A	N/A	N/A

SERVICE PARTS INFORMATION

Kit Description	Part Number	Quantity Required	Notes
HOSE, AIR COMPRESSOR, 1IN ID	6132813C2	1	If needed order Critical/Truck Down

DIAGNOSTIC STEP(s)


WARNING:

To prevent property damage, personal injury, and / or death, park vehicle on a hard, flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.


WARNING:

To prevent property damage, personal injury, and / or death, if the vehicle must be raised, do not work under the vehicle supported only by jacks. Jacks can slip or fall over.


WARNING:

To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.


WARNING:

To prevent property damage, personal injury, and / or death, keep flames or sparks away from vehicle and do not smoke while servicing the vehicle's batteries. Batteries expel explosive gases.


WARNING:

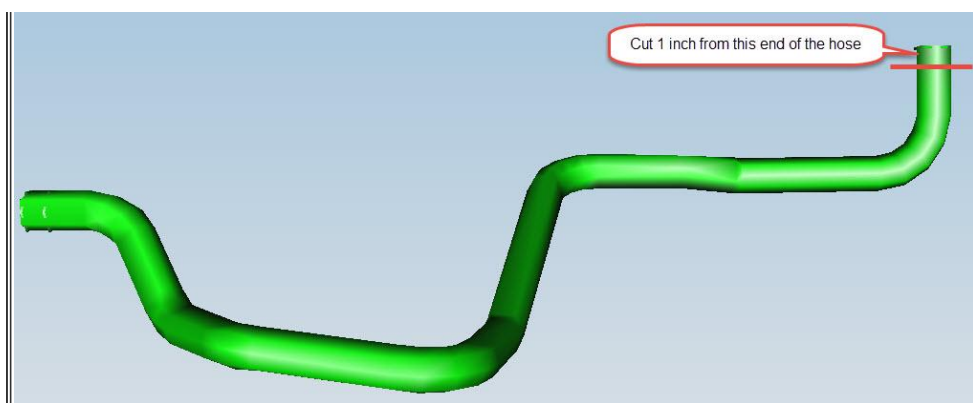
To prevent property damage, personal injury, and / or death, remove the ground cable from the negative terminal of the battery box before disconnecting any electrical components. Always connect the ground cable last.



Note:
If replacement hose is unavailable cut hose at location of hole and install a double barbed brass fitting and hose clamps (obtain locally) to repair hose until 6132813C2 is available. Once complete follow repair steps below.

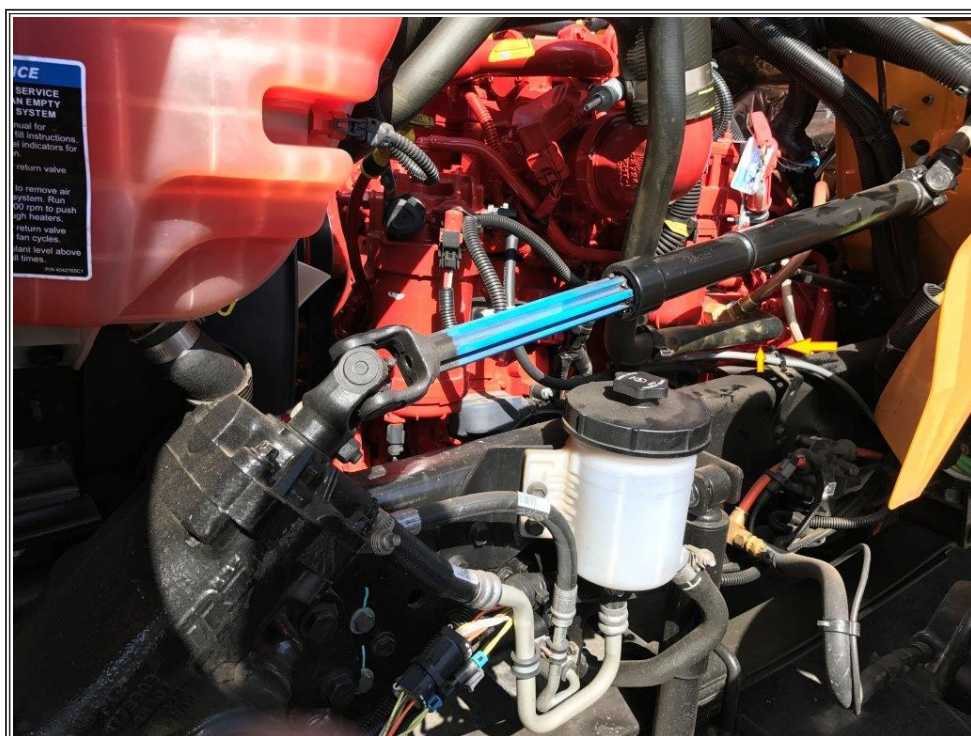
1. Remove inlet hose from the air compressor.

[illegible]

**Figure # 2**

Air Compressor Inlet Hose

2. Cut 1 inch off the compressor side of the hose (See figure 2), this will prevent the hose from making contact with the zip tie.
3. Reinstall hose.

**Figure # 3**

Air Compressor Inlet Hose With 1" Removed From The End

WARRANTY INFORMATION

Warranty Claim Coding:

Refer to the [Warranty Coding Manual](#) for Group and Noun Codes.

Standard Repair Time(s):

Refer to the [SRT Manual](#) for Repair Times

OTHER RESOURCES

[Master Service Information Site](#) Hide Details

Feedback Information

Viewed: 148

Helpful: 5

Not Helpful: 1

No Feedback Found

Copyright © 2017 Navistar, Inc.