



# HYUNDAI Technical Service Bulletin

GROUP <b>Body Interior</b>	NUMBER <b>17-BD-003</b>
DATE <b>DECEMBER, 2017</b>	MODEL(S) <b>Genesis (DH)</b>

**SUBJECT:** FRONT SEAT CUSHION TILT PIPE HOUSING REPLACEMENT

**Description:** This bulletin describes the procedure to replace the front seat cushion tilt pipe housing. If wobble, and/or noise occurs from the front seat track assembly, it is recommended to replace the front seat cushion tilt pipe housings with new ones instead of replacing the front seat track assembly.



**Applicable Vehicles:** 2015MY and 2016MY Hyundai Genesis

### Parts Information:

PART NAME	PART NUMBER	QTY
Front seat cushion tilt pipe housing	<b>88532 - B1000</b>	2

### Warranty Information:

MODEL	OP CODE	OPERATION	OP TIME	CAUSAL PART	NATURE CODE	CAUSE CODE
Hyundai Genesis (DH)	88532R00	Tilt Pipe Housing Assembly – Driver Seat With Cushion Extension	See Web LTS For Current LTS time	<b>88532 - B1000</b>	Q64	ZZ3
	88532R0R	Tilt Pipe Housing Assembly – Driver/Passenger Seat Without Cushion Extension		<b>88532 - B1000</b>	Q64	ZZ3
	88532R0B	Tilt Pipe Housing Assembly – Both Seats.		<b>88532 - B1000</b>	Q64	ZZ3

**Service Procedure: Driver Seat with Cushion Extender. For procedure without cushion extender please see page 6.**

1. Adjust seat to highest position and extend cushion extender to furthest position.



2. Remove negative battery terminal.

**NOTICE**


Save customer radio presets prior to detaching negative battery terminal.

**NOTICE**


Battery (-) terminal installation:  
4.0 ~ 6.0 N.m (0.4 ~ 0.6kgf.m,  
3.0 ~ 4.0 lb-ft).



3. Remove plastic cap and remove front shield cover screw underneath plastic cap.

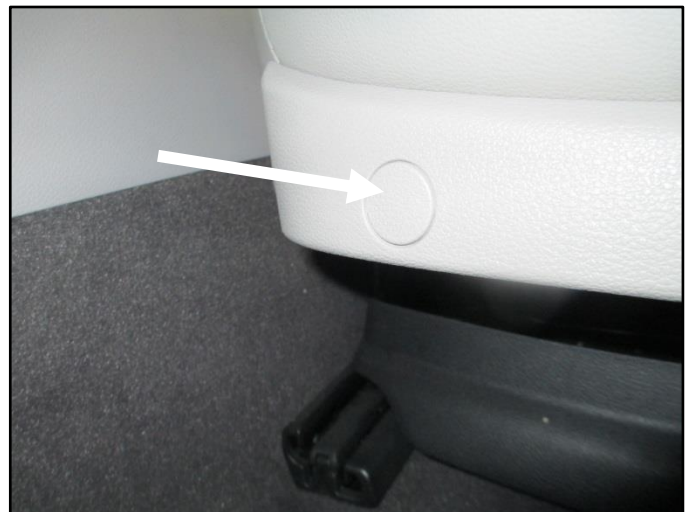


4. Remove front cover shield.

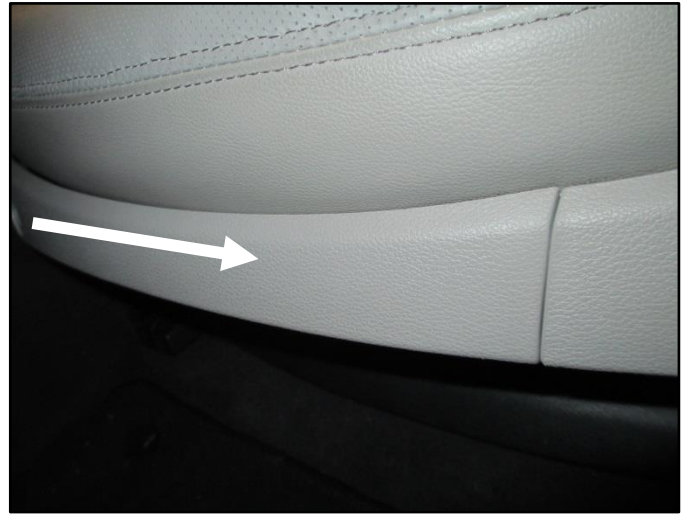

5. Remove 2 X 10MM bolts under cushion extender.

**NOTICE**

**Tightening torque: 4.9 ~ 5.9 N-m  
(0.5 ~ 0.6 kgf.m, 3.6 ~ 4.3 lb-ft)**

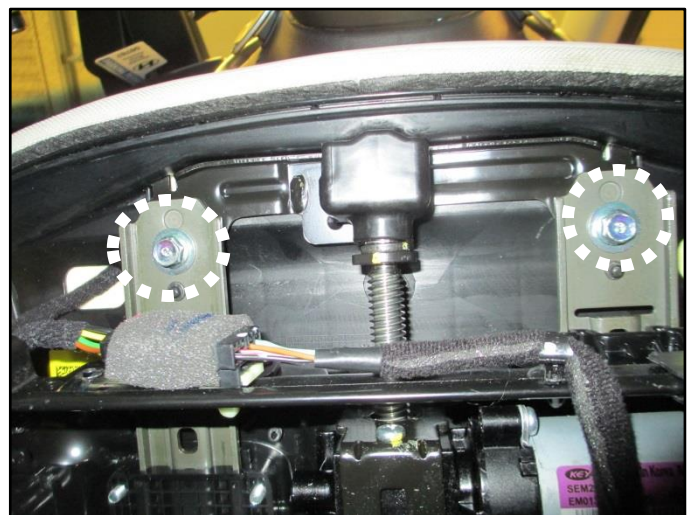


6. Detach harness from seat assembly.  
Remove cushion extender and place aside.

**CAUTION**


**Do not cut tab.**



7. Remove extender cover screws and detach cover.

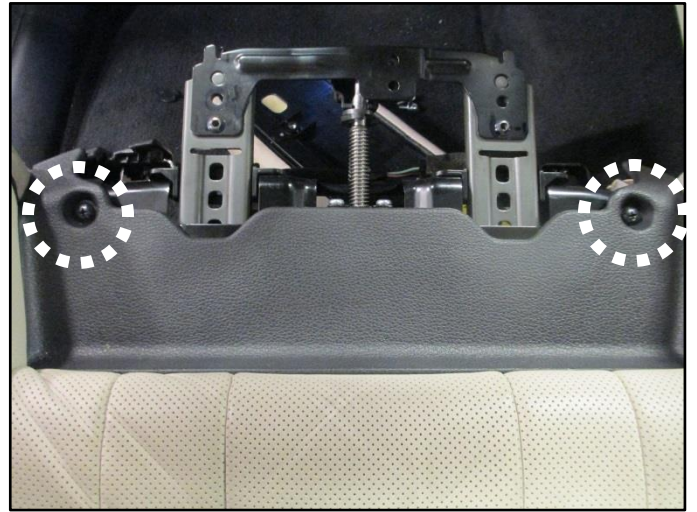

8. Remove pipe housing screws.

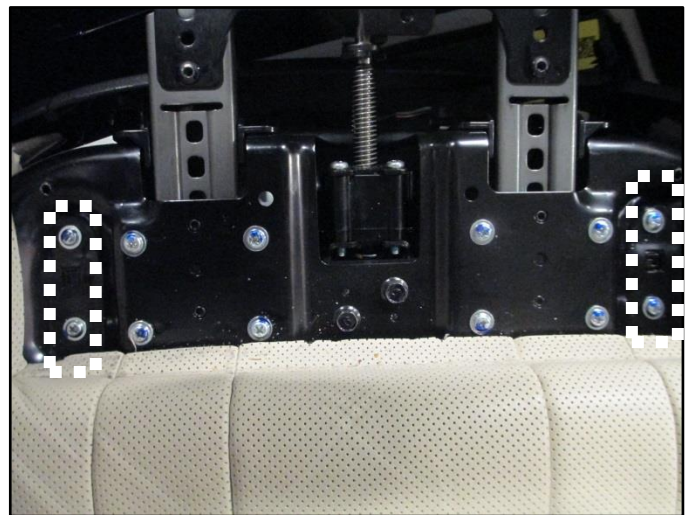


9. Lift cushion to remove tilt pipe housing.



10. Detach and replace both tilt pipe housings; one on each side.

**NOTICE**


Ensure housing is fully locked in placed.

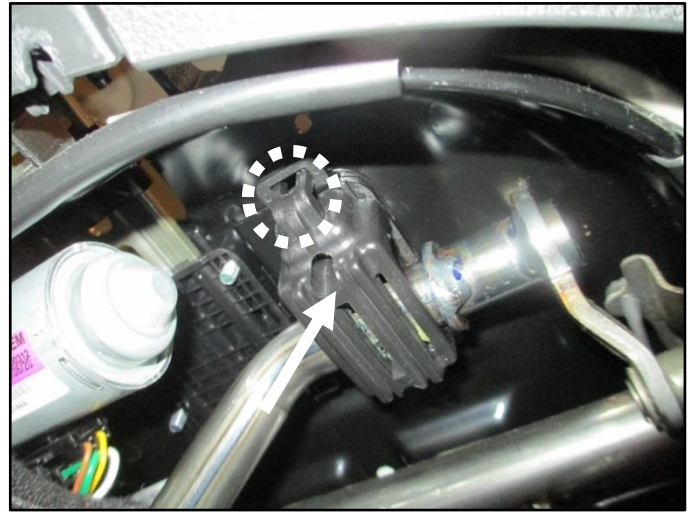

11. Reinstall all the removed parts in reverse order.  
  
Reset all radio presents to previous stations.  
  
Test seat components for proper operation.
12. Continue below if seat cushion **does not** contain cushion extender or concern is present on passenger seat.

**Service Procedure: Passenger Seat / Non Seat Cushion Extender**

1. Adjust seat to highest position and middle position of track.

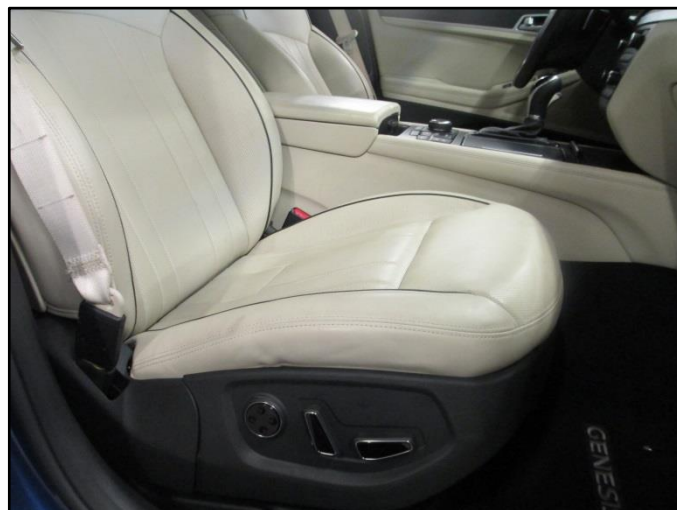

2. Remove negative battery terminal.

**NOTICE**

Save customer radio presets prior to detaching negative battery terminal.

**NOTICE**


Battery (-) terminal installation:  
 4.0 ~ 6.0 N.m (0.4 ~ 0.6kgf.m,  
 3.0 ~ 4.0 lb-ft).



3. Remove plastic cap and remove front shield cover screw underneath plastic cap.



- 4. Remove front shield cover.

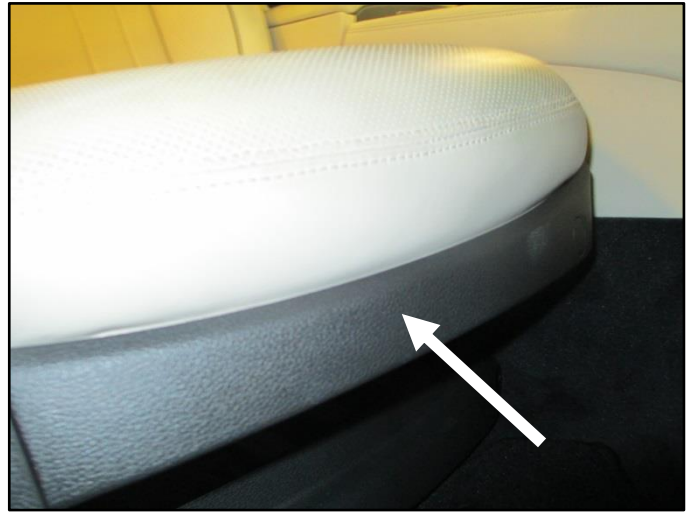

- 5. Remove side shield cover screw.



- 6. Remove side shield cover.



7. Remove seat cushion.



8. Remove tilt pipe housing screws.



9. Lift seat cushion panel to remove tilt pipe housing.






10. Detach and replace both tilt pipe housing components; one on each side.

**NOTICE**

Ensure housing is fully locked in placed.

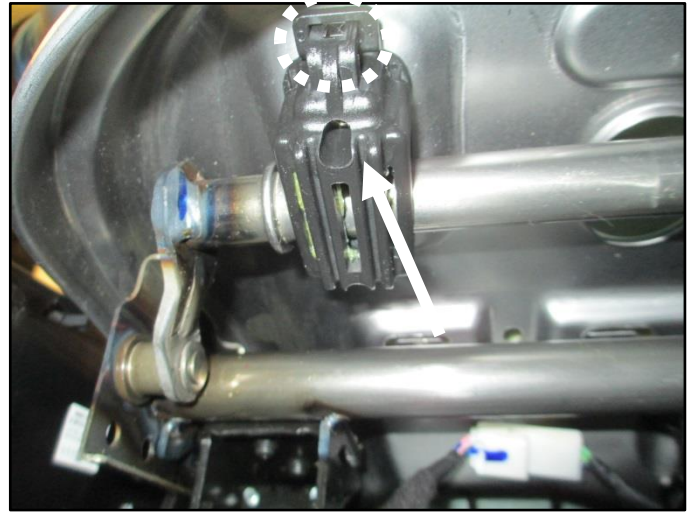

11. Reinstall all the removed parts in reverse order.
- Reset all radio presets to previous stations.
- Test seat components for proper operation.