

Start with the back of the Go Power controller first (picture 2) and check the fuse if the fuse is blown or loose. Replace it if possible and go from there.

