



Countries: CANADA, UNITED STATES **Document ID:** IK1600227
Availability: ISIS, IsSIR **Revision:** 2
Major System: CAB / SLEEPER / HOOD **Created:** 7/13/2017
Current Language: English **Last Modified:** 12/19/2017
Other Languages: NONE **Author:** Pablo Guerrero
Viewed: 552

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 5	 0

Title: Loose or Missing Glass in the Hood Mounted Mirror

Applies To: LT Chassis

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

12/08/2017 - Author changed for feedback purposes
11/30/2017 - Added optional replacement of mirror assembly
07/14/2017 - Initial Article Release

DESCRIPTION

This document will guide the user through inspection and or replacement of the hood mounted mirror glass.

SYMPTOM(s)

Customer complaint of loose or missing glass from the hood mounted mirror.

SERVICE PARTS INFORMATION

Description	Part Number	Quantity
Carrier, Glass	2514670C1	As Needed
Hood mirror	3765560C93 LH Black 3765561C93 RH Black 3765562C93 LH Bright 3765563C93 RH Bright	

REPAIR STEP(s)

Inspect the condition of the mirror assembly. If the mirror is missing, the complete assembly will need to be replaced. If the mirror is loose inside the housing, verify that the mirror lock/ release lever is in the lock position (see Mirror Lock/Release Inspection Procedure below). If the mirror is still loose, even though locked properly, the complete assembly will need to be replaced. Order the correct replacement mirror and install as outlined below.

Note: If an replacement mirror is needed, the mirror housing on new mirrors won't be serviceable. New replacement mirrors have the mirror housing glued to the arm.

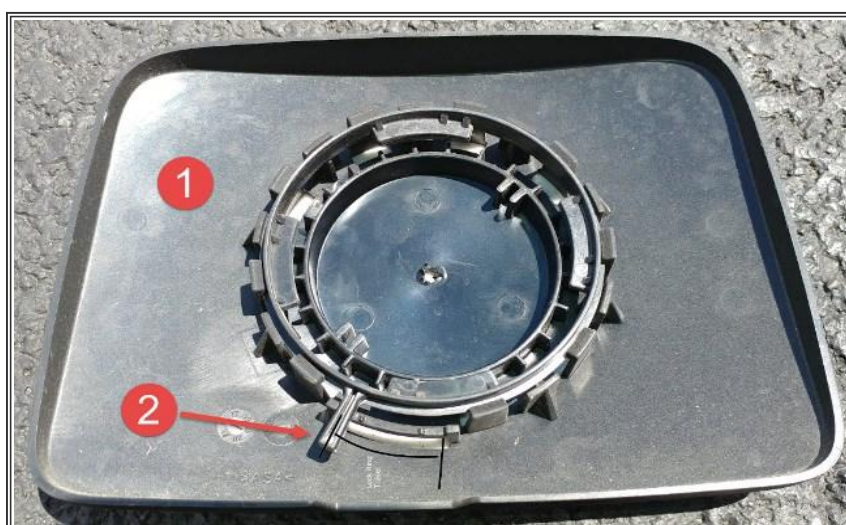


Figure #1: Mirror Housing

Item 1: Mirror Housing

Item 2: Mirror Lock / Release Lever

Mirror Lock/Release lever Inspection Procedure

1.The Mirror lock/release lever, actuates the mechanism to fully lock the mirror housing to the mirror assembly. To lock the mirror, slide the lock/release lever (Figure #1 Item 2) fully over to lock the mirror in place.

NOTE: When properly seated and locked in place, you should hear or feel two clicks as you slide the locking mechanism over.

2.With the mirror installed in the housing, you can access the locking lever through the bottom of the mirror by tilting the top of the mirror inward (Figure #2).





Figure #2: Mirror Lock / Release Lever - Bottom View

Complete Mirror Replacement Procedure

1. To replace complete assembly, remove 4 fasteners (Figure 2, item 1).

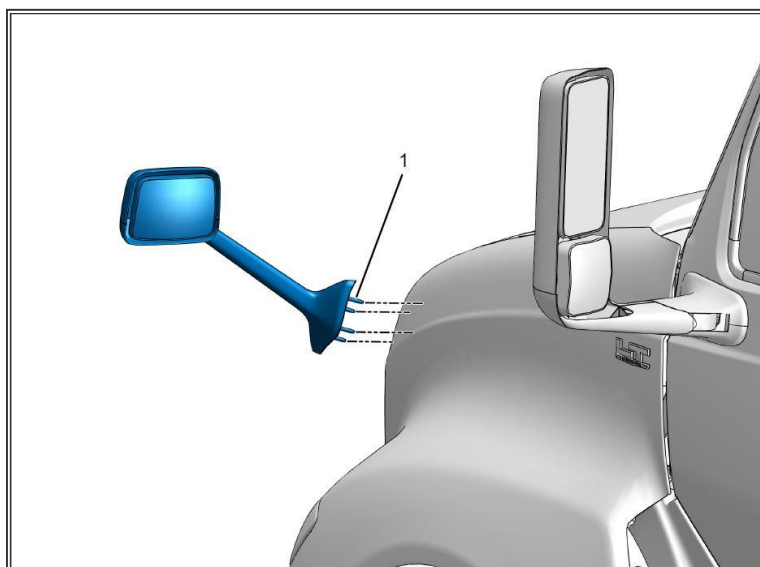


Figure #3: Complete Mirror Assembly

Item 1: Mirror Fasteners

2. Remove complete mirror assembly from vehicle
3. Reinstall new mirror and torque fasteners to 9-12 ft-lb (12.2 - 16.2 Nm)

WARRANTY INFORMATION

Warranty Claim Coding:

Refer to the [Warranty Coding Manual](#) for Group and Noun Codes.

--	--	--	--

Group	Noun
16034	962 - Mirror Head Glass
16034	421 - Spot Mirror

Standard Repair Time(s):Refer to the [SRT Manual](#) for Repair Times

Group	Noun
A16-515	Hood Mounted Mirror Replaced

OTHER RESOURCES[Master Service Information Site](#) Hide Details**Feedback Information**

Viewed: 551

Helpful: 5

Not Helpful: 0

Staff ID	Client ID	Comments	Created Date
	DY00184	You received the following feedback From: dy00184 - Shane Hoye Email Address: shoye@hillintltrucks.com Job Classification: SE006, Service Foreman Dealer: HILL INTL TRUCKS NA LLC Feedback: Somewhat related to this I have had several 4 to be exact being they are not breakaway they get torn off easy	12/19/2017 10:45:10 AM