



Countries: CANADA, UNITED STATES **Document ID:** IK1600227
Availability: ISIS, IsSIR **Revision:** 0
Major System: CAB / SLEEPER / HOOD **Created:** 7/13/2017
Current Language: English **Last Modified:** 7/14/2017
Other Languages: NONE **Author:** Greg Scheff
Viewed: 103

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 0	Not Helpful 0
----------------------	-------------------------------	----------------------------------------------------------	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

Title: Loose or Missing Glass in the Hood Mounted Mirror

Applies To: LT Chassis

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

07/14/2017 - Initial Article Release

DESCRIPTION

This document will guide the user through inspection and or replacement of the hood mounted mirror glass.

SYMPTOM(s)

Customer complaint of loose or missing glass from the hood mounted mirror.

SERVICE PARTS INFORMATION

Description	Part Number	Quantity
Carrier, Glass	2514670C1	As Needed

REPAIR STEP(S)

If the mirror is missing from the housing assembly completely, order the correct replacement mirror and install as outlined below.

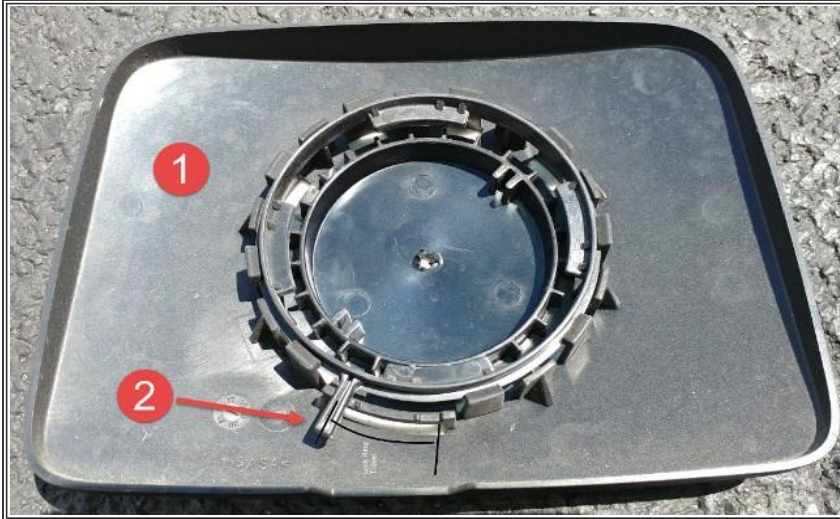


Figure #1: Mirror Housing

Item 1: Mirror Housing

Item 2: Mirror Lock / Release Lever

1. Install the replacement mirror in the bore of the housing (Figure #1 Item 1), and slide the locking lever (Figure #1 Item 2) fully over to lock the mirror in place.

NOTE: When properly seated and locked in place, you should hear or feel two clicks as you slide the locking mechanism over.

2. With the mirror installed in the housing, you can access the locking lever through the bottom of the mirror by tilting the top of the mirror inward (Figure #2).



Figure #2: Mirror Lock / Release Lever - Bottom View

If the mirror is still in place but is loose, follow the steps below.

- Remove the mirror by utilizing the lock ring on the bottom side (Figure #2).

- Inspect for any damage to the lock ring or mirror mount.
- Reinstall the mirror and pull the lock tab fully to the closed position again, making sure you feel or hear two clicks as you slide the lock over.
- There should not be any movement or wiggle in the mirror if installed properly.

WARRANTY INFORMATION

Warranty Claim Coding:

Refer to the [Warranty Coding Manual](#) for Group and Noun Codes.

Standard Repair Time(s):

Refer to the [SRT Manual](#) for Repair Times

OTHER RESOURCES

[Master Service Information Site](#)

 Hide Details

Feedback Information

Viewed: 102

Helpful: 0

Not Helpful: 0

No Feedback Found

Copyright © 2017 Navistar, Inc.