



**Countries:** CANADA, UNITED STATES  
**Availability:** ISIS, Bus ISIS, FleetISIS, Body Builder, IsSIR  
**Major System:** ELECTRICAL SYSTEM  
**Current Language:** English  
**Other Languages:** NONE  
**Viewed:** 199

**Document ID:** IK0800551  
**Revision:** 1  
**Created:** 9/8/2017  
**Last Modified:** 9/18/2017  
**Author:** Charles Schroeder

[Less Info](#)

Hide Details

Coding Information

<b>Copy Link</b> 	<b>Copy Relative Link</b> 	<b>Bookmark</b>  <a href="#">View My Bookmarks</a>	<b>Add to Favorites</b> 	<b>Print</b> 	<b>Provide Feedback</b> 	<b>Helpful</b>  6	<b>Not Helpful</b>  0
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

**Title:** LT and RH Wire Terminal Information

**Applies To:** LT / RH

### Change Log

Please refer to the change log text box below for recent changes to this article:

09/18/2017 - Wire Terminal to connector information has been added to Document 0000018822 - LT and RH Interactive Schematics. Screen shot added showing how to access this information.  
 09/08/2017 - Initial Article Release

### Description

LT and RH model terminal number information. Terminal information can be located in Document 0000018822 - LT and RH Interactive Schematics. Please refer to the screenshot of this document for more information.

- Many of the terminals and connectors on LT and RH are the same as found on ProStar models.
- Searching for the same connector and terminal information in the ProStar circuit diagram manual will provide accurate information for many of the connectors, terminals and seals.
- One of the most common locations that utilize new terminals is the fuse panel.
- The part numbers for the LT and RH fuse panel are listed below.

### Service Parts Information

Kit Description	Part Number	Package Quantity	Notes
TERMINAL,CABLE, MTA F630, 16-18 GA	3768007C1		Relay Terminals for Pins 30/87
TERMINAL,CABLE, MTA F630, 10 GA	3768009C1		
TERMINAL,CABLE, MTA F480, 18-20 GA	3768003C1		Relay Terminals for Pins 85/86/87a
TERMINAL,CABLE, MTA F480, 14 GA	3768004C1		
TERMINAL,CABLE, MTA F280, 20 GA	3768012C1		Fuse Terminals
TERMINAL,CABLE, MTA F280, 16-14 GA	3768013C1		
TERMINAL,CABLE, MTA F280, 12 GA	3768014C1		

<b>Document 0000018822 - LT and RH Interactive Schematics</b>

**Information** 4

1) International LT

2) Browser Requirements

3) Navigation

4) How to Use this Package

**Electrical Schematics** 291

Location Views 50/84

**Part Assembly List** 1

**Connector Assembly List**

Connectors 50/826

Inlines 50/302

Devices 50/661

Wires 50/2762

TERM_SPLICE	CONN	REF_DESG	CAVITY	SEAL_SLEEVE
1661227C1	1661204C1	100	A	N/A
1661227C1	1661204C1	100	B	N/A
1661227C1	1661204C1	100	C	N/A
1661227C1	1661204C1	100	D	N/A
3756749C1	3756780C1	100	1	3756745C1
3673333C1	3767577C1	100	2	N/A
3673333C1	3767577C1	100	3	N/A
0373756C2		101	A	2644054R1
0373756C2		101	A	2644054R1
0373756C2		102	A	2644054R1
0373756C2		102	A	2644054R1
1661208C1	1661200C1	512	A	N/A
1661208C1	1661200C1	512	B	N/A
1661208C1	1661200C1	512	C	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	D	N/A
1661208C1	1661200C1	512	F	N/A

1. Click on the 'Parts Assembly List'
2. Click on 'Connector Assembly List'
3. Terminal Part Number
4. Connector Body Part Number
5. Connector Number (From Schematic)
6. Terminal Location in Connector (Terminal Part Number may vary by location due to wire gauge sizes)
7. Wire Seal (If Applicable)

**OTHER RESOURCES**

[Master Service Information Site](#)

Hide Details
Feedback Information

Viewed: 198

Helpful: 6

Not Helpful: 0

No Feedback Found