



Countries: CANADA, UNITED STATES **Document ID:** IK0400156
Availability: ISIS, FleetISIS, IsSIR **Revision:** 0
Major System: BRAKES **Created:** 10/11/2017
Current Language: English **Last Modified:** 10/12/2017
Other Languages: NONE **Author:** Amber Chapman
Viewed: 104

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 3	Not Helpful 1
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

Title: LT RH and LS Trailer Parking Brake / Hand Valve Routing without 004WDU

Applies To: LT RH and LS

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

10/12/2017 - Initial Article Release

DESCRIPTION

This article applies to LT RH or LS that do NOT have feature 004WDU (hand valve omit).

This document will guide the user through running the hand valve exhaust line plumbing separate from MV3.

SYMPTOM(s)

DTC/Light	Description
N/A	N/A

Customer Observations or Concerns:

When the trailer hand brake is released, the trailer brakes are applied

SPECIAL TOOL(s) / SOFTWARE

Tool Description	Tool Number	Comments	Instructions
N/A			

[Tools Resource Center](#)

SERVICE PARTS INFORMATION

Kit Description	Part Number	Quantity Required
1/4 O.D Black Line	417196C3	9 feet

DIAGNOSTIC STEP(s)

N/A

REPAIR STEP(s)

WARNING! To prevent property damage, personal injury, and / or death, park vehicle on a hard, flat surface, turn the engine off, set the parking brake, and install wheel chocks to prevent the vehicle from moving in either direction.

WARNING! To prevent property damage, personal injury, and / or death, if the vehicle must be raised, do not work under the vehicle supported only by jacks. Jacks can slip or fall over.

WARNING! To prevent personal injury and / or death, always wear safe eye protection when performing vehicle maintenance.

WARNING! To prevent property damage, personal injury, and / or death, keep flames or sparks away from vehicle and do not smoke while servicing the vehicle's batteries. Batteries expel explosive gases.

WARNING! To prevent property damage, personal injury, and / or death, remove the ground cable from the negative terminal of the battery box before disconnecting any electrical components. Always connect the ground cable last.

1. Bring Vehicle into shop and park on a flat surface
2. Shift transmission into park or neutral, set parking brake and install wheel chocks
3. Follow [Re-Route Instructions Here](#)
4. Start vehicle and check for leaks
5. Remove wheel chocks
6. Return to service.

WARRANTY INFORMATION

Warranty Claim Coding:

Refer to the [Warranty Coding Manual](#) for Group and Noun Codes.

Standard Repair Time(s):

Refer to the [SRT Manual](#) for Repair Times

Repair	SRT	Hrs
Re-route hand valve exhaust plumbing		

OTHER RESOURCES

[Master Service Information Site](#)

 Hide Details

Feedback Information

Viewed: 103
 Helpful: 3
 Not Helpful: 1

No Feedback Found