

Front Wheel Opening Extension Pad Installation During PDS

Service

Category General

Section Pre-Delivery Service Market USA



Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2018	LC500, LC500H	

Introduction

The front wheel opening extension pad set (right and left front wheel opening extension pads and self-tapping screws) is placed in the luggage compartment at the assembly plant to avoid damage in transit.

Install the front wheel opening extension pads to the vehicle prior to delivery to the customer.

Warranty Information


OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	_	-	ı	_

Installation Procedure for LC 500/500h

Use the same procedure for the RH side and LH side. The procedure listed below is for the LH side. There is a distinguishable mark on each pad.

Place the left front wheel opening extension pad on the installation position and tighten the 4 self-tapping screws.

Figure 1.

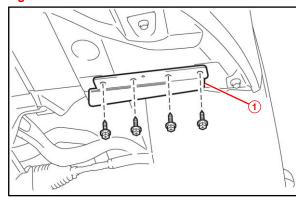

1 Front Wheel Opening Extension Pad