

# Initialization of Seat ECU for PDS

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA



## Applicability


YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2018	LC500, LC500H	

## Introduction

When the DCC fuses are removed or the battery terminal is disconnected, the power source to the power seat ECU is cut off and initialization may be lost.

To ensure proper function of the power seats, the seat ECU must be initialized after the DCC fuses have been installed during PDS (Pre-Delivery Service).

**Figure 1.**

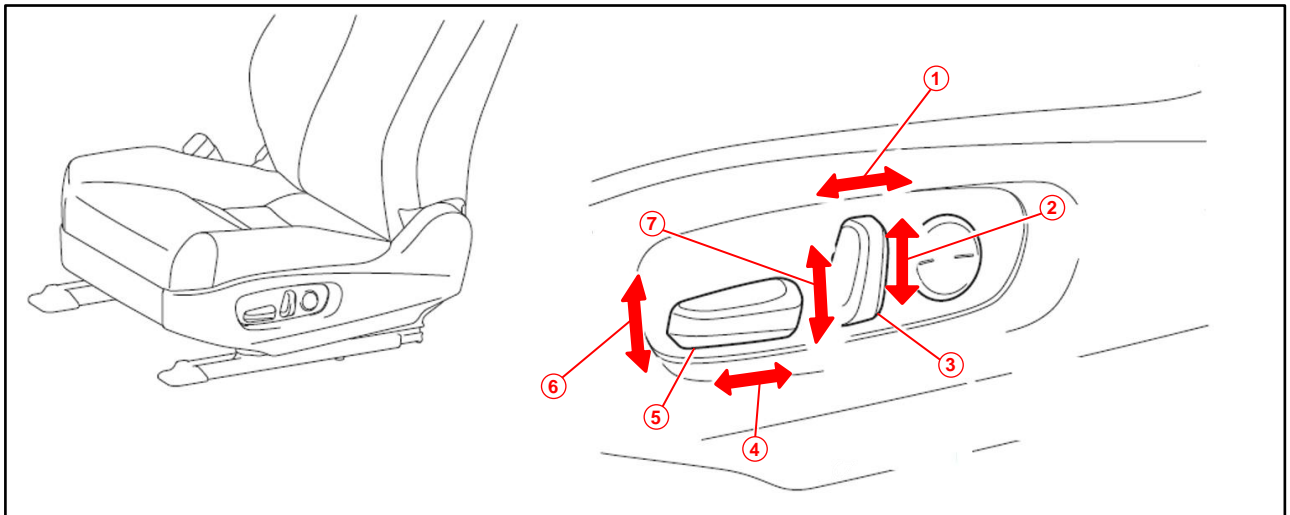

<b>1</b>	<b>Reclining Function</b>
<b>2</b>	<b>Head Restraint Adjustment Function</b>
<b>3</b>	<b>Reclining Power Seat Switch Knob</b>
<b>4</b>	<b>Slide Function</b>


<b>5</b>	<b>Slide and Vertical Power Seat Switch Knob</b>
<b>6</b>	<b>Vertical Function</b>
<b>7</b>	<b>Lifter Function</b>

## Initialization of Seat ECU for PDS

### Initialization Procedure of Driver's Seat

1. Turn the engine switch (power switch) to the "ON" position ("ON" mode).
2. Tap the slide and vertical power seat switch to tilt the front of the seat in the downward direction 3 times.
3. Within 10 seconds of completing step 2, simultaneously recline the seatback by using the reclining power seat switch knob and use the vertical power seat switch knob to move the seat upward until the buzzer sounds.

**Figure 2.**

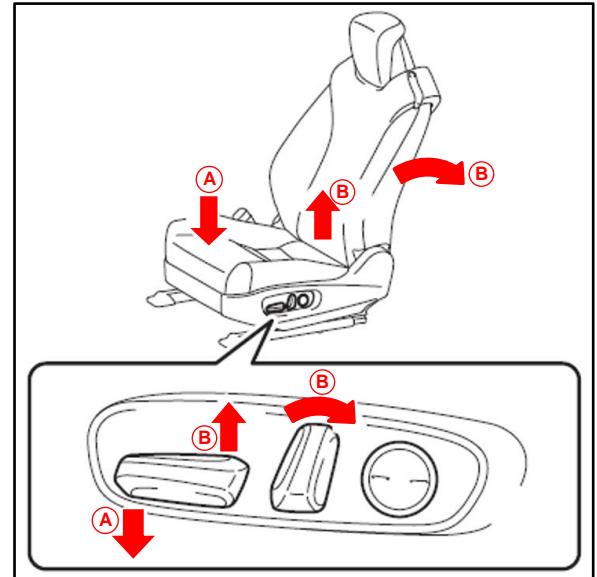

A	See Step 2
B	See Step 3


4. Operate the slide and vertical power seat switch knob to move the seat to the foremost position.

**HINT**  
Continue holding the switch for 1 second after the seat has stopped at the foremost position.

5. Operate the slide and vertical power seat switch knob to move the seat to the rearmost position.

**HINT**  
Continue holding the switch for 1 second after the seat has stopped at the rearmost position.

**Figure 3.**

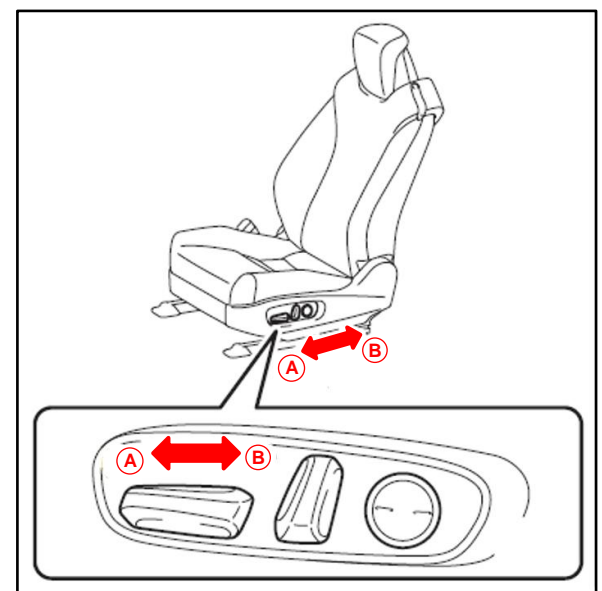

A	See Step 4
B	See Step 5

## Initialization of Seat ECU for PDS


### Initialization Procedure of Driver's Seat (Continued)

6. Operate the slide and vertical power seat switch knob to move the seat to the lowermost position.

**HINT**

Continue holding the switch for 1 second after the seat has stopped at the lowermost position.

**Figure 4.**

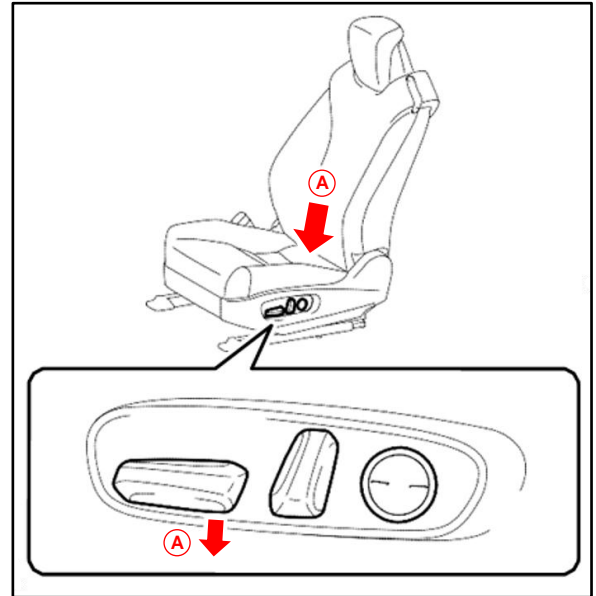


<b>A</b>	See Step 6
----------	------------

7. Operate the reclining power seat switch knob to move the seatback to the foremost lock position.
8. Operate the reclining power seat switch knob to move the head restraint to the lowermost position.

**HINT**

Continue holding the switch for 1 second after the seat has stopped at the lowermost position.

**Figure 5.**

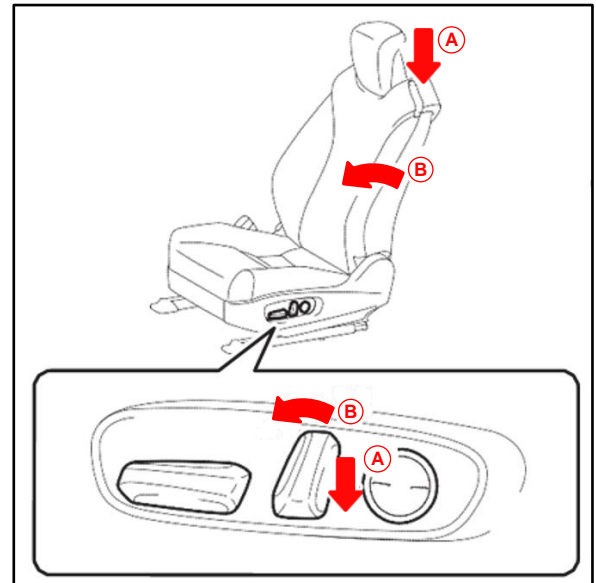

<b>A</b>	See Step 7
----------	------------

<b>B</b>	See Step 8
----------	------------

## Initialization of Seat ECU for PDS

---

### Initialization Procedure of Driver's Seat (Continued)

9. Pull the reclining remote control lever sub-assembly, fold the seatback forward and confirm that the one-touch walk-in function operates normally.

**Figure 6.**

