

Front Wheel Opening Extension Pad Installation During PDS

Service Category General

Section Pre-Delivery Service

Market USA



Applicability

| YEAR(S) | MODEL(S) | ADDITIONAL INFORMATION |
|---------|---------------|------------------------|
| 2018 | ES300H, ES350 | |

Introduction

The front wheel opening extension pad set (right and left front wheel opening extension pads and 2 self-tapping screws) is loaded in the luggage compartment at the assembly plant to avoid damage in transit. Install the front wheel opening extension pads to the vehicle during Pre-Delivery Service (PDS).

Warranty Information


| OP CODE | DESCRIPTION | TIME | OFF | T1 | T2 |
|---------|----------------------------|------|-----|----|----|
| N/A | Not Applicable to Warranty | – | – | – | – |

Installation Procedure

1. Remove the 2 self-tapping screws from the left front engine under cover.

NOTE
The removed self-tapping screws will be reused.

Figure 1.

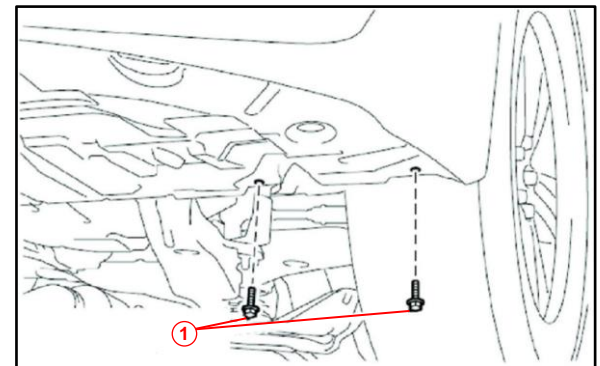

| | |
|----------|---------------------------|
| 1 | Self-tapping Screw |
|----------|---------------------------|

Front Wheel Opening Extension Pad Installation During PDS


Installation Procedure (Continued)

2. Place the left front wheel opening extension pad in position. Using the 2 original self-tapping screws and 1 of the provided self-tapping screws, install the extension pad by tightening the 3 self-tapping screws as shown.

NOTE

There is a distinguishable mark on each pad that identifies the right and left side.

Figure 2.

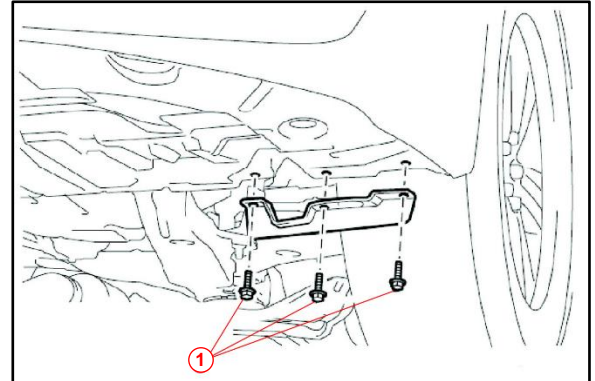

| | |
|----------|---------------------------|
| 1 | Self-tapping Screw |
|----------|---------------------------|

3. Repeat steps 1 – 2 to install the right front wheel opening extension pad.