

Tire Pressure Warning System Initialization

Service Category	General		
Section	Pre-Delivery Service	Market USA	Lexus Supports ASE Certification

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2018	ES300H, ES350	

Introduction

2018 model year ES 300h and ES 350 vehicles are equipped with a direct-type Tire Pressure Warning System (TPWS). Each tire (except the spare tire) has a tire pressure warning valve/sensor that measures tire pressure data. The data is transmitted to the Tire Pressure Warning System antenna/receiver and then to the Tire Pressure Warning System ECU.

During Pre-Delivery Service (PDS), TPWS MUST be initialized according to the procedure in this bulletin.

Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-

Required Tools & Equipment

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream 2.0*		TS2UNIT	
Techstream Lite	ADE	TSLITEPDLR01	1
Techstream Lite (Green Cable)		TSLP2DLR01	

* Essential SST.

NOTE

- Only ONE of the Techstream units listed above is required.
- Software version 12.10.018 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

Tire Pressure Warning System Initialization

L-SB-0133-17

Repair Procedure

) LEXUS

 Adjust ALL tires (except the spare tire) to the standard tire inflation pressure, as indicated on the Tire and Loading Information label located inside the vehicle.

NOTE

- To adjust tire pressure correctly when outside temperature is significantly colder than shop temperature, perform a Health Check using Techstream and select the "Compensation Tire Pressure" checkbox. Compensation pressures will display on the Health Check results screen.
- Adjust the tire pressure when the tires are cold.
- Cycle the ignition switch to the "IG-ON" position and press and hold the Tire Pressure Warning Reset switch for AT LEAST 3 seconds so that the Tire Pressure Warning Light blinks 3 times.

Figure 1.


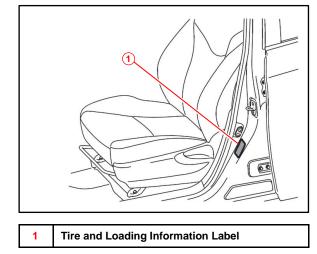


Figure 2.

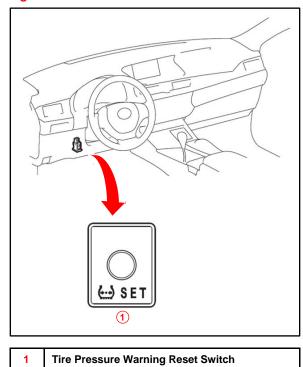

Tire Pressure Warning System Initialization

Repair Procedure (Continued)

3. Cycle the ignition switch to the "OFF" position and then to the "IG-ON" position.

NOTE

It is necessary for the ignition to be in the "IG-ON" mode AT LEAST 5 minutes for the initialization to complete correctly.

4. Check the tire pressure values of ALL the tires using Techstream.

NOTE

- It can take 2 3 minutes for the tire pressure values to display on the Techstream Data List.
- If the tire pressure values do NOT display on the Techstream Data List, the initialization is NOT complete. Repeat steps 2 4.