

# Roof Rack Cross Bar & Leg Cover Installation During PDS

**Service Category** General

**Section** Pre-Delivery Service

**Market** USA

Lexus Supports  
ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2018	LX570	

## Introduction

To avoid damage during transportation, the 2018 model year LX 570 roof rack cross bars have been placed inside the vehicle at the assembly plant.

Install the roof rack cross bars and leg covers during Pre-Delivery Service (PDS) using the following procedure.


## Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	–	–	–	–

## Installation Procedure

1. Loosen the adjustment knobs on each cross bar joint.

**Figure 1.**

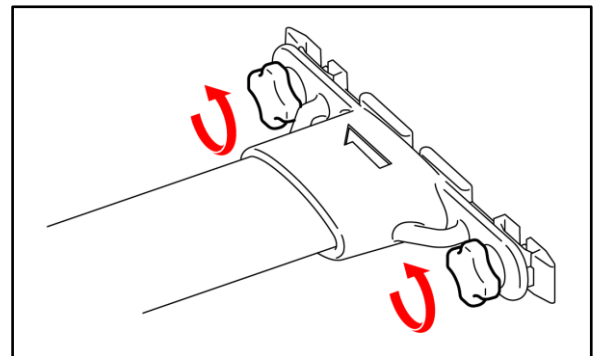

## Roof Rack Cross Bar & Leg Cover Installation During PDS


### Installation Procedure (Continued)

- Slide the cross bar joints into the grooves of the right and left roof rack rails with the arrow mark on each cross bar joint facing forward.

**NOTE**

There is a possibility that the cross bars will create wind noise if they are installed backwards.

**Figure 2.**

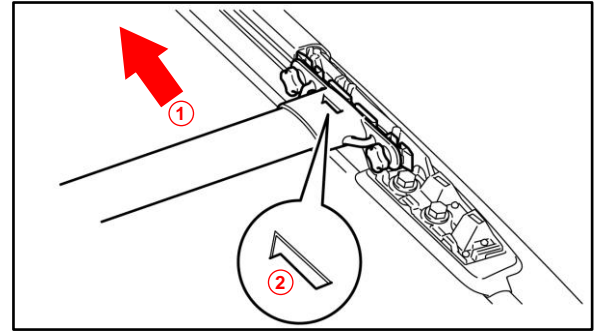

<b>1</b>	Front
<b>2</b>	Arrow Mark

- Position the front and rear cross bars so that they are parallel to each other. Then, securely tighten the knobs on each cross bar (A = A', B = B').


**Table 1.**

AREA	MEASUREMENT
A	250 mm (9.84 in.)
B	295 mm (11.60 in.)

**NOTICE**

If the knobs are NOT tightened securely, the knobs may come loose and rattle or possibly fall off the vehicle.

**Figure 3.**

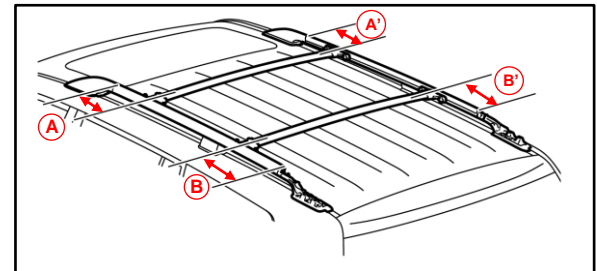

## Roof Rack Cross Bar & Leg Cover Installation During PDS


### Installation Procedure (Continued)

4. Install the right and left rear roof rack leg covers in the following sequence (labeled as shown):
  - A. Insert the tab at the front of the cover into the roof rack rail.
  - B. Place the cover on the leg and align the rear part of the cover. Do NOT press down.
  - C. Press the cover claws facing the outside of the vehicle into place.
  - D. Press the cover claws facing the inside of the vehicle into place.

**NOTICE**

Do NOT press on the claws facing the outside of the vehicle at the same time as pressing on the claws facing the inside. This may damage the leg cover.

Figure 4.

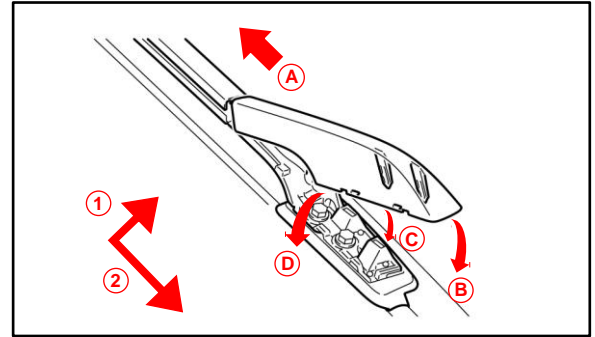

1	Outside
2	Rear

5. Check that the covers are installed securely.