

Oil Change Maintenance Monitor Setup

Service Category General

Section Pre-Delivery Service

Market USA

Toyota Supports
ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2018	iA	

Introduction

2018 model year iA vehicles are equipped with a multi-display capable of monitoring oil change intervals. As part of the pre-delivery process, ensure that the Oil Change Maintenance Monitor is properly set up.


Warranty Information

OP CODE	DESCRIPTION	TIME	OFP	T1	T2
N/A	Not Applicable to Warranty	0.9	—	—	—

Setup Procedure

1. On the home screen, press the leftmost icon labeled *Applications*.

Figure 1.

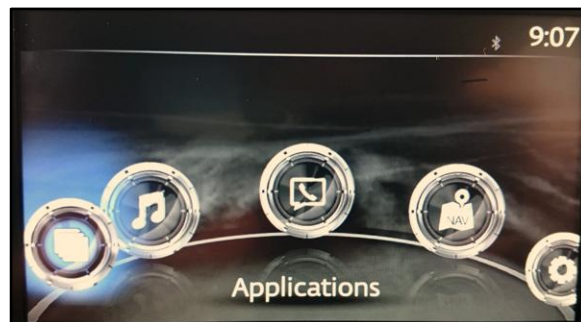

Oil Change Maintenance Monitor Setup

Setup Procedure (Continued)

2. In the “Applications” submenu, press *Maintenance*.
3. In the “Maintenance” submenu, press *Oil Change*.
4. In the “Oil Change” submenu, press *Setting Interval*.
5. In the “Setting Interval” submenu, choose *Fixed*.

Figure 2.

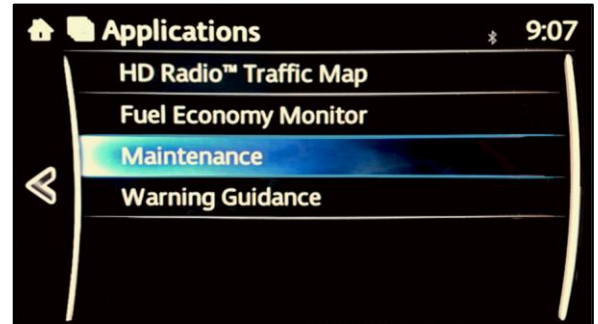


Figure 3.



Figure 4.


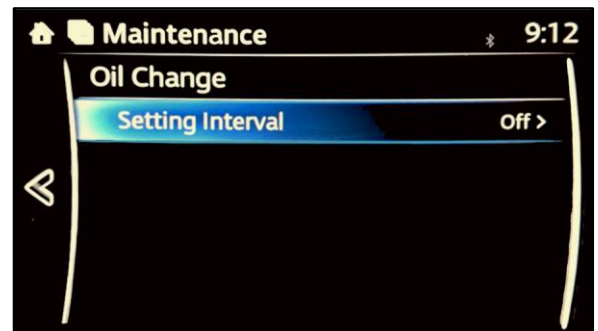


Figure 5.

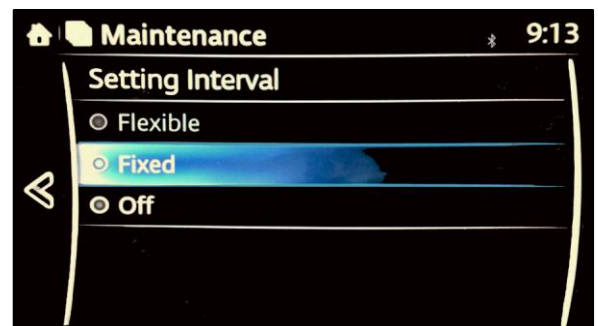


Oil Change Maintenance Monitor Setup

Setup Procedure (Continued)

6. Change the *Distance* setting to 7,500 miles using the “+” or “-” icons.

Figure 6.

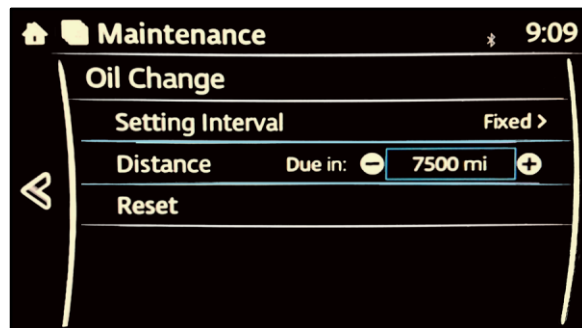

7. Use the left arrow to navigate out of the submenus to the home screen.