

Subject		Market
How to Enable iPhone® Text Messages on Multimedia Display		USA
Service Category	Section	
Audio/Visual/Telematics	Cellular Communication	
Applicability		
All models with Bluetooth		

APPLICABLE VEHICLES

2015-2018	RC F	2015-2018	RC350
2015-2018	NX300H	2014-2015	IS250C
2013-2016	LS600H	2018	LC500
2018	LC500H	2014-2015	IS250
2016-2017	GS200T	2015-2017	NX200T
2013-2018	GS450H	2013-2018	ES300H
2017-2018	GS F	2013-2018	ES350
2013-2017	LS460	2014-2018	GX460
2016-2018	RC300	2013-2018	RX450H
2018	NX300	2013-2018	GS350
2013-2018	CT200H	2014-2018	IS350
2013-2018	RX350	2016-2017	IS200T
2014-2015	IS350C	2013-2014	IS F
2013-2018	LX570	2016-2017	RC200T

CONDITION

iPhone text messages do not appear on multimedia display.

RECOMMENDATIONS

Follow these steps if iPhone text messages are not shown on the multimedia display.

- After the initial pairing is completed, and if applicable to your multimedia system, enable messaging features by accessing the Phone's Bluetooth menu.
- First, select the "Information" symbol to the right of the "Connected" system and turn on "Show Notifications".
- Then, disconnect/reconnect the phone using the multimedia system's controls.

Note: Previous text messages cannot be read from an iPhone, only new incoming messages will be shown.

For iPhones running IOS 8 or later

- On the iPhone go to "Settings".
- Select "Notifications" under "Settings".
- Then choose "Messages".
- Finally ensure that the either "Banners" or "Alerts" is selected and style is not set to "None".

Subject How to Enable iPhone® Text Messages on Multimedia Display	Market USA
Applicability All models with Bluetooth	

LINK REFERENCES

This Tech Tip does not contain any link references