

# 2018 Audi Maintenance Schedule - All Models

## MY 2018 Maintenance Intervals - USA

Service intervals in miles												
	10K	20K	30K	40K	50K	60K	70K	80K	90K	100K	110K	120K
<b>Minor Maintenance (Every 1 year)<sup>1</sup></b>	X		X		X		X		X		X	
<b>Standard Maintenance (Every 2 years)<sup>2</sup></b>		X		X		X		X		X		X
<b>Additional Maintenance Items</b>	<b>Refer to the Additional Maintenance Items Table below</b>											

1) First minor maintenance service at 10,000 miles or 1 year after delivery, whichever occurs first. Minor maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last minor maintenance service, whichever occurs first.

2) First standard maintenance service at 20,000 miles or 2 years after delivery, whichever occurs first. Standard maintenance services thereafter occur at intervals of 20,000 miles or every 2 years after the last standard maintenance service, whichever occurs first.

**NOTE:** The intervals shown in this table are based on vehicles operating under normal conditions. In case of severe conditions, such as extremely low temperatures, excessive dust, etc., it is necessary for certain operations to be carried out in between the given intervals. This applies particularly to engine oil changes and the cleaning or replacing of the air cleaner filter element.

### Minor Maintenance

- Brake system - Check the thickness of the disc brake pads
- Engine Oil and Oil filter - Change oil and replace filter
- Multi-Point Inspection - Completed
- Service Reminder Indicator display - Reset display
- Tire Repair Kit - Check and record the completeness and expiration date (if equipped)

### Standard Maintenance (Includes All Minor Maintenance Items)

- Safety belts- Check function
- Body - Check for damage and corrosion
- Brake system - Check condition of brake hoses and the presence of the bleeder caps
- Charging socket - Check for contamination and damage (A3 e-tron only)
- Convertible Top - Lubricate latch mechanism (A5/S5/RS 5 Cabriolet only)
- Cooling system for electrical components - Check coolant level according to description in ElsaPro (A3 e-tron only)
- Door hinge and door latch - Lubricate
- Engine cooling system - Check freeze protection and coolant level (All except e-tron)
- Engine, Transmission, Final drive, Steering - Visual inspection for leaks and damage
- Exterior lighting - Check front and rear lights, turn signals, cornering lights, reverse lights, license plate lights, and hazard warning lights
- First aid kit - Check and enter expiration date YYYY / MM \_\_\_\_\_
- Front and rear axle/suspension components - Check dust seals on ball joints and tie rod ends; check for excessive play
- Front lid latch - Lubricate (R8, R8 Spyder only)
- Fuel tank flap system - Check the water drain (R8, R8 Spyder only)
- Headlights - Check adjustment
- Hood safety catch - Lubricate (A3, A6, A7, A8, Q3, Q7, and R8 only)
- Horn - Check function
- Instrument cluster - Check warning and indicator lights
- Interior lights - Check all interior lights, trunk lights, and glove box compartment illumination



**Standard Maintenance (continued)**

- Oil filler area - Check water drain (R8, R8 Spyder only)
- Panoramic sunroof systems - Check function (if equipped) (All except A8)
- Panoramic sunroof systems - Clean guide rails and lubricate with grease according to description in ElsaPro (if equipped) (A8 only)
- Plenum chamber and water drain valves: Check for dirt. (A6, A7, A8 and Q7 only)  
**NOTE:** Time spent cleaning of item is a separate charge for service time
- Road test - Check engine performance, clutch, manual/auto transmission, braking (including hand and foot brake), steering, wheels, wheel bearings, driveshaft, horn, hybrid vehicles (electric drive for operational readiness)
- Rollover protection - Check the rollover protection when the convertible top is open (R8 Spyder and A3 Cabriolet only)
- Spare tire - Check condition and tire inflation pressure, adjust if necessary (if equipped)
- Spoiler - Lubricate rear spoiler (A7, S7, RS 7, and TT only)
- Sunroof systems - Check function (if equipped)
- Tires - Check condition and tire tread wear. Check and record the tread depth
- Tires - Check tire inflation pressure and adjust if necessary
- Underbody - Check the covers and inner fender liners for damage and correct fit
- Warning triangle - Check if present (if equipped)
- Windshield washer and headlight washing system - Add fluid if necessary. Check adjustment and function
- Wiper blades - Check condition and replace if necessary

Additional Maintenance Items		
Work to be completed	Interval	Model Application
<input type="checkbox"/> Air filter - Replace	Every 40k miles	RS7, A8 LWB only
<input type="checkbox"/> Air filter - Replace	Every 60k miles	All vehicles except RS7 and A8 LWB
<input type="checkbox"/> AWD clutch - Change fluid (if equipped)	Every 3 years	A3 quattro, S3, RS 3, Q3 quattro, TT Coupe 2.0T, TTS Coupe 2.0T, TT Roadster 2.0T, TT RS
<input type="checkbox"/> Battery - Connected gateway	Every 7 years	A4, S4, A4 allroad, A5, S5, RS 5, 3.0T, Q5, SQ5, Q7
<input type="checkbox"/> Brake fluid - Change	Every 2 years	All
<input type="checkbox"/> Dust and Pollen filter - Replace	Every 30km or 2 years, whichever occurs first	All
<input type="checkbox"/> Front axle differential - Change fluid (if equipped)	Every 180km or 10 years, whichever occurs first	R8 only
<input type="checkbox"/> Rear Axle, quattro Sport - Change oil and ATF fluid changes	Every 60km	RS 7, RS 7 Plus only
<input type="checkbox"/> Rear Axle, quattro Sport - Change oil and ATF fluid changes	Every 90km	RS 5 only
<input type="checkbox"/> Ribbed V-belt - Replace	Every 90km	A6 3.0T, A6 Competition 3.0T, A7 3.0T, A7 Competition 3.0T, A8 3.0T, Q7 3.0T
<input type="checkbox"/> Spark plugs - Replace	Every 45km or 3 years, whichever occurs first	RS 3, RS 5, RS 7 Plus, S8 Plus, TT RS only



Additional Maintenance Items		
Work to be completed	Interval	Model Application
<input type="checkbox"/> Spark plugs - Replace	Every 60km or 6 years, whichever occurs first	A3, S3, A3 e-tron, A4, S4, A4 allroad, A5, S5, A6 2.0T, S6 4.0T, S7 4.0T, RS 7 4.0T, A8 L 4.0T, Q5, SQ5, Q7 2.0T, TT 2.0T, TTS
<input type="checkbox"/> Spark plugs - Replace	Every 90km or 6 years, whichever occurs first	A6 3.0T, A6 Competition 3.0T, A7 3.0T, A7 Competition 3.0T, A8 L 3.0T, Q3, Q7 3.0T, R8
<input type="checkbox"/> S-Tronic transmission - Change fluid	Every 120km	A3 Sedan 2.0T B-cycle, A3 Cabriolet 2.0T B-cycle, S3
<input type="checkbox"/> S-Tronic transmission - Change fluid and filter replace	Every 60km	A3 Cabriolet 2.0T (non B-cycle), A3 Sedan 2.0T (non B-cycle), S6 4.0T, S7 4.0T, TT Coupe 2.0T, TTS Coupe 2.0T, TT Roadster 2.0T, R8
<input type="checkbox"/> S-Tronic transmission - Change fluid	Every 60km	A3 e-tron, RS 3, A4 2.0T, A4 allroad, A5 2.0T, S5 3.0T, (Coupe/Cabriolet/Sportback), A6 2.0T, Q5 2.0T, TT RS

\*For oil capacity information, please refer to ElsaPro for the most current information.