

1 06 12-17



Service Information Bulletin

SUBJECT	DATE
Power Take-Off Position Switch	June 2017

Additions, Revisions, or Updates

Publication Number / Title	Platform	Section Title	Change
DDC-SVC-MAN-0140	DT12 Transmission	Removal of the Power Take-Off Position Switch	These are new sections.
		Installation of the Power Take-Off Position Switch	




13400 Outer Drive, West, Detroit, Michigan 48239-4001
 Telephone: 313-592-5000
www.demanddetroit.com

2 Removal of the Power Take-Off Position Switch

Remove as follows:

1. Shut off the engine, apply the parking brake, chock the wheels, and perform any other applicable safety steps.
2. Remove the quick-disconnect chassis fairing for access, if applicable.
3. Remove the switch electrical harness connector.

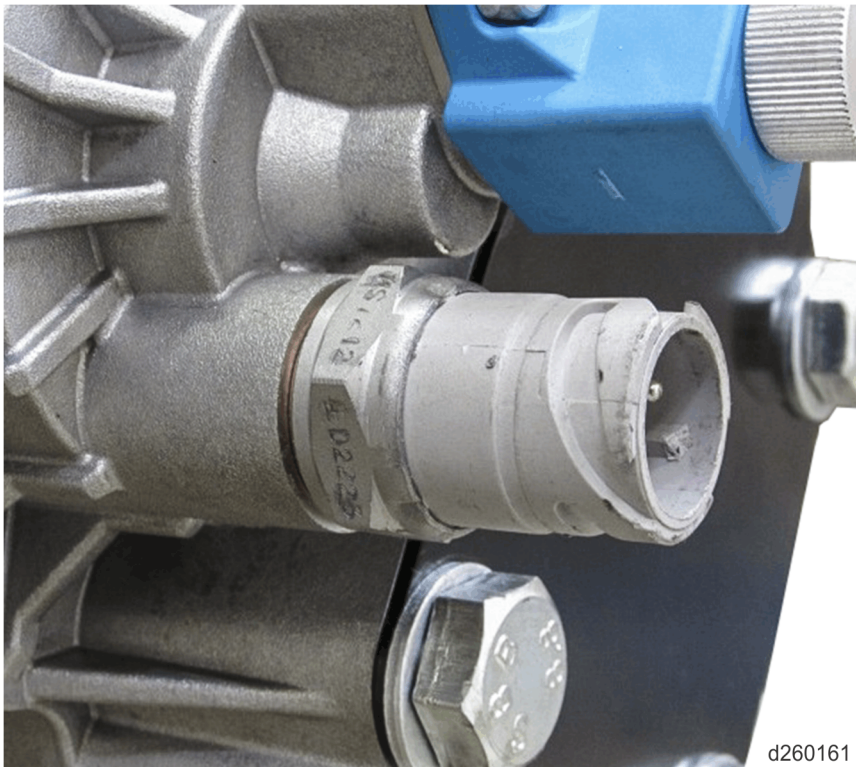


d260161

4. Remove the switch.

3 Installation of the Power Take-Off Position Switch

Install as follows:

1. Using a new seal, install the switch and torque to 43 N·m (35 lb·ft).
2. Install the electrical connector.

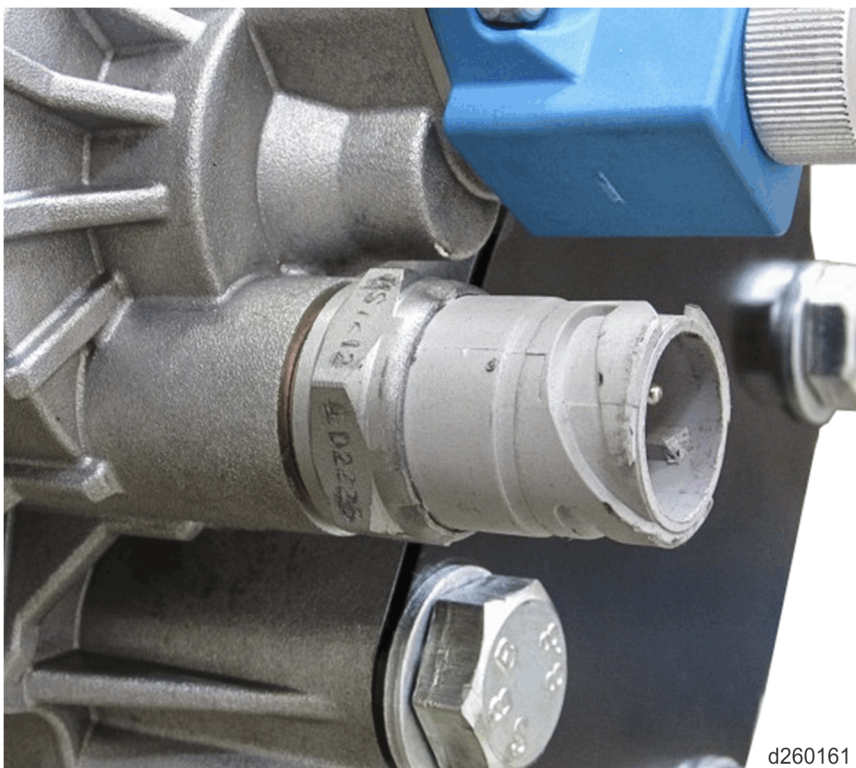

3. Install the chassis fairing, if applicable.