

Heated seats inoperative

Topic number	LI91.30-P-066988
Version	1
Function group	91.30 Seat heater, seat ventilation
Date	08-31-2017
Validity	A/C 205 with code 873 or 401 up to production date 22.05.2017
Reason for change	
Reason for block	

Complaint:

A/C 205 seat heating/ventilation inoperative. When the seat heating or ventilation is switched on, the LEDs in the seat heater switch or seat ventilation switch go out by themselves after approx. 2 s.

Attachments	
File	Description
Pic1.JPG	Chafed seat heater wiring harness in driver seat backrest
Pic2.JPG	Chafed seat heater wiring harness in driver seat backrest
Pic3.JPG	Chafed seat heater wiring harness in driver seat backrest

Cause:

Chafe point on seat wiring harness in driver seat backrest (Pic1, Pic2, Pic3).

Remedy:

1. Remove seat (AR 91.10-O-3310LW)
2. Remove seat-back lining from front seat backrest (AR91.10-P-1910CLW)
3. Detach covering (Pic4 red), release plug and unhook downwards (Pic4)
4. Wrap chafe point with duct tape (A0079890785) in the entire visible area (Pic5) as far as the label on the wiring harness (Pic6).

Attachments	
File	Description
Pic4.jpg	Seat with seat-back lining removed
Pic5.jpg	Wiring harness to be wrapped.

Symptoms
Body / Seat / Seat heater/comfort heater / Seat heater nonfunctional

Parts						
Part number	ES1	ES2	Designation	Quantity	Note	EPC

XENTRY TIPS

A 007 989 07 85		DUCT TAPE / COROPLAST 837X-HAND 19MM	1		X
-----------------	--	---	---	--	---


Attachments

Pic1.JPG:



XENTRY TIPS

Pic2.JPG:

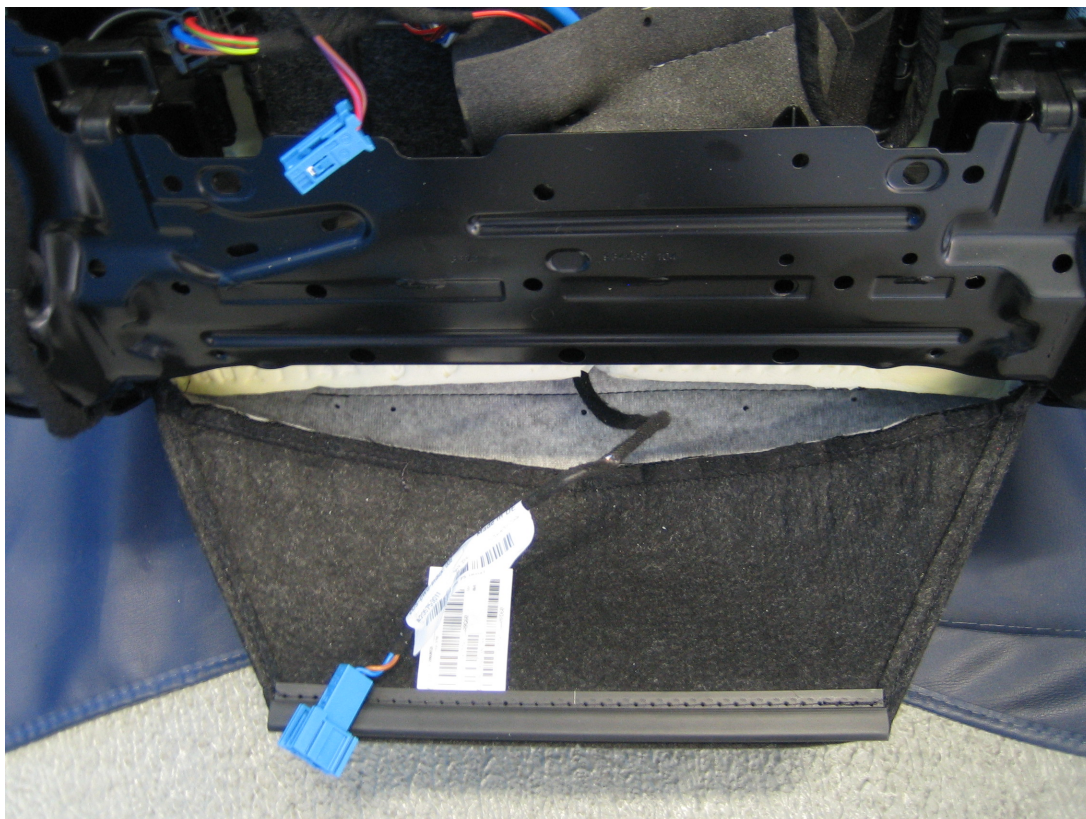


Pic3.JPG:



XENTRY TIPS

XENTRY TIPS

Pic5.jpg:

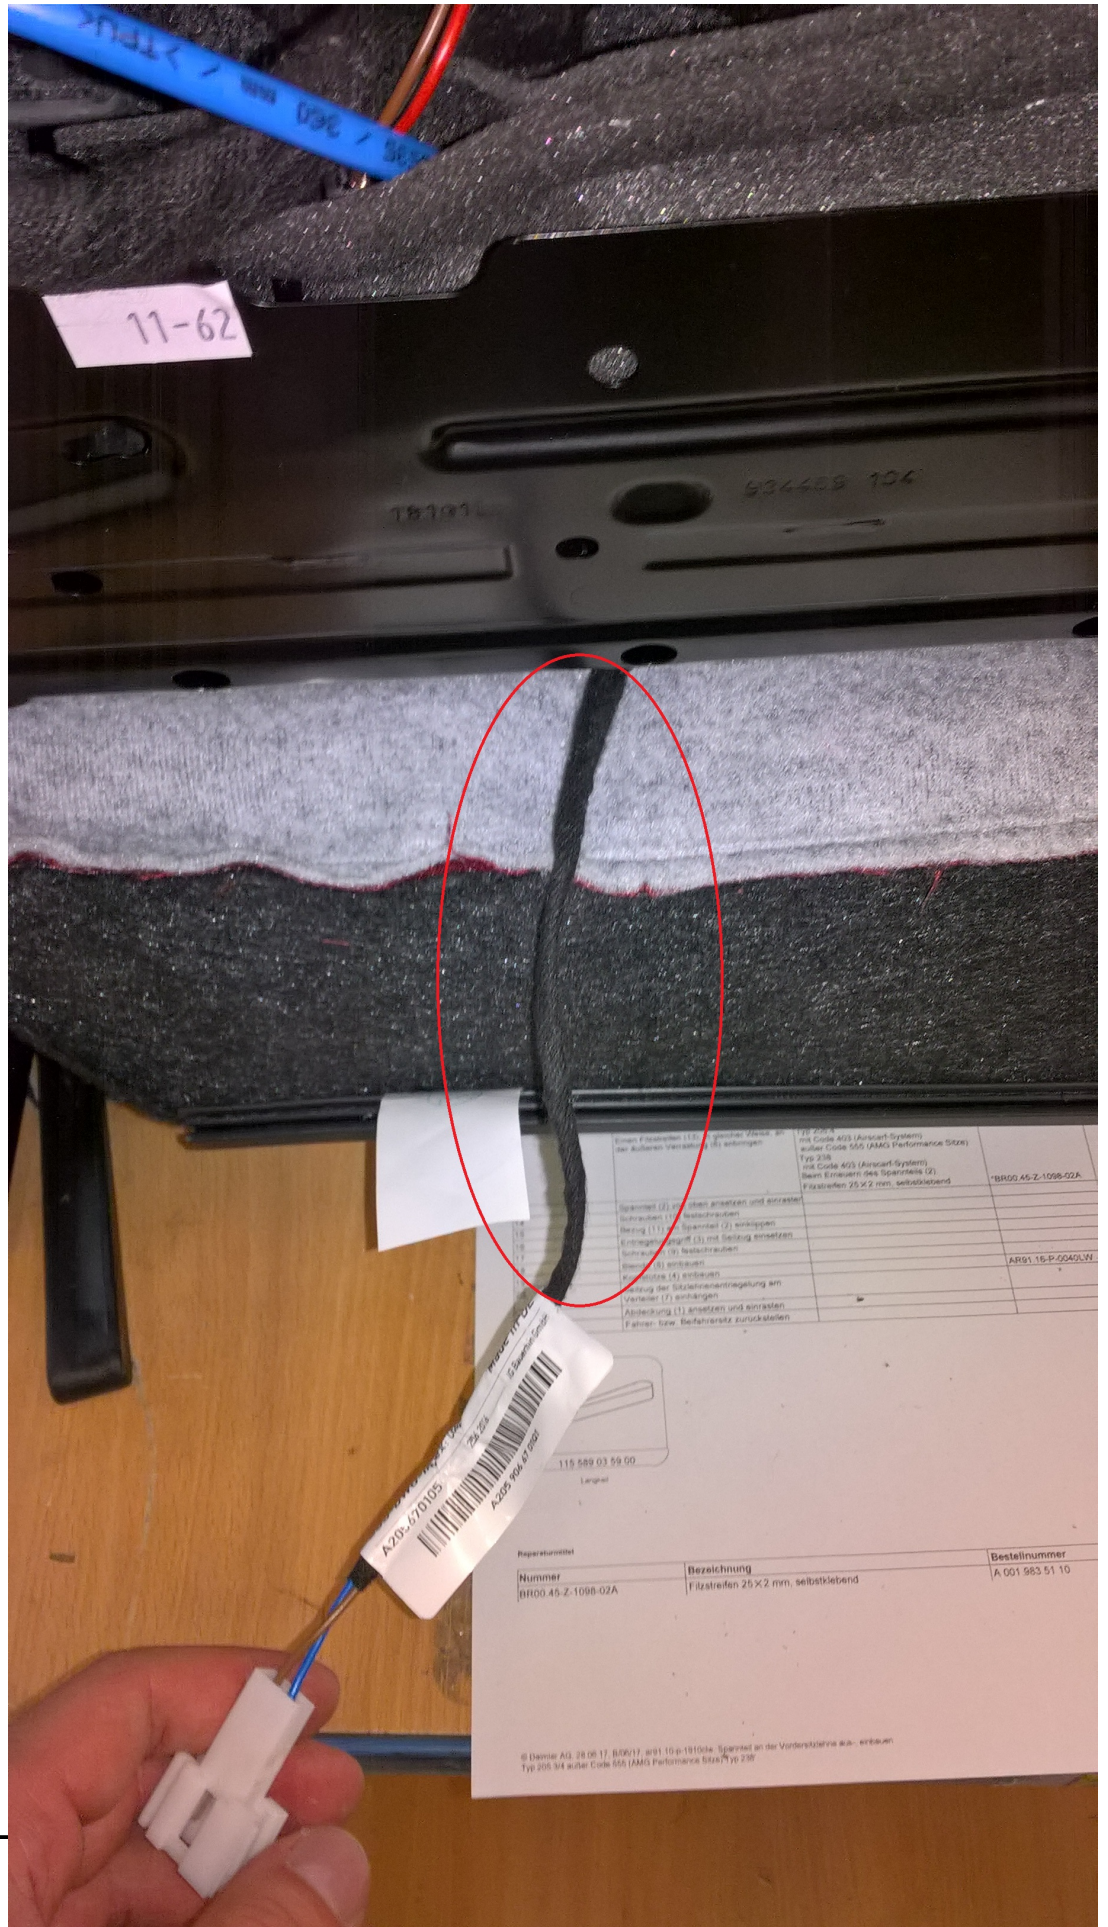

XENTRY TIPS
