

Service Information

Diagnostic Device Hardware & Windows®

Number: VHW-17-11

Subject: VAS 6154 Diagnostic Interface – Replacement Part
Setup Guide

Date: June. 22, 2017

1.0 – Introduction and Process Overviews

1.1 – General Information

This document describes the steps required to configure a **replacement** VAS 6154 Main Unit, Docking Station, USB Cable and WLAN Module.

You will follow the below listed sections of the **VAS 6154 Diagnostic Interface – Initial Setup Guide** located in ServiceNet when receiving one of the below replacement parts.

- VAS6154 - Main Unit Replacement – Complete the entire **VAS 6154 Diagnostic Interface – Initial Setup Guide**.



- VAS6154/2 - Docking Station Replacement – **Complete Section 2.2** – Install Base Station Network Drivers of the **VAS 6154 Diagnostic Interface – Initial Setup Guide**.



- VAS6154/4 – USB Cable – **There is no action required when replacing this cable.**



- VAS6154/5 – WLAN Module – **Complete Section 2.6** - Identify WLAN Module of the VAS 6154 Diagnostic Interface – Initial Setup Guide.

