

FURNITURE

Purpose

This document provides the steps to remove the protective plastic covering on the footrest of Thomas Payne® theater seating (Fig. 1).

⚠ WARNING

Sharp cutting tools can damage stitching or vinyl material. Do not use any sharp objects on the stitching or vinyl.

Resources Required

- Scissors or Knife
- Needle Nose Pliers

Fig. 1



Procedure

NOTE: A plastic, protective covering is installed over the chair's footrest (kick board), which can be removed without damaging the chair's material. Closely, and carefully, follow the removal instructions.

1. Pull on handle to release footrest.
2. Place hand underneath plastic, palm facing up, near top seam, then tightly grasp the plastic covering with thumb and slowly roll hand forward along perforation to break the plastic covering away from the footrest.

NOTE: Make sure to keep rolling slowly.

NOTE: If the plastic starts to tear or the vinyl wants to pull away while pulling the plastic at the top of the footrest, try removing the plastic from the opposite end.

3. Once the top of the plastic is removed, grasp the plastic from the top and pull down, making sure the cover is straight and tight.

⚠ CAUTION

Use care when cutting to prevent tears in material or personal injury.

FURNITURE

4. With a sharp pair of scissors, or cutting tool, pull plastic cover down and cut plastic horizontally along the backside of the footrest.
5. Continue to pull cover tight when cutting until material is removed from footrest.

CAUTION

Use care not to puncture vinyl material when using pliers to remove any remaining cover material.

6. Use the needle nose pliers to remove any small pieces of plastic that cannot be removed by hand.
7. Push on footrest to close the chair.