



Countries: CANADA, UNITED STATES **Document ID:** IK0800557
Availability: ISIS, Fleet!SIS, NotSIR **Revision:** 2
Major System: ELECTRICAL SYSTEM **Created:** 11/17/2017
Current Language: English **Last Modified:** 1/4/2018
Other Languages: NONE **Author:** William Katschke
Viewed: 202

[Less Info](#)

Hide Details

Coding Information

Copy Link 	Copy Relative Link 	Bookmark View My Bookmarks	Add to Favorites 	Print 	Provide Feedback 	Helpful 2	Not Helpful 0
----------------------	-------------------------------	--	-----------------------------	------------------	-----------------------------	-------------------------	-----------------------------

Title: Power & Ground Locations
Applies To: LT

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

01/02/2018 - Added links to printable PDF files
 01/02/2018 - Initial Article Release

DESCRIPTION

This document will provide the user with power and ground locations for [A26](#) & [X15](#) powered LTs.

SYMPTOM(s)

N/A

DTC/Light	Description
N/A	N/A

SPECIAL TOOL(s) / SOFTWARE


N/A

Tool Description	Tool Number	Comments	Instructions
N/A	N/A	N/A	N/A

SERVICE PARTS INFORMATION


N/A

Kit Description	Part Number	Quantity Required
N/A	N/A	N/A

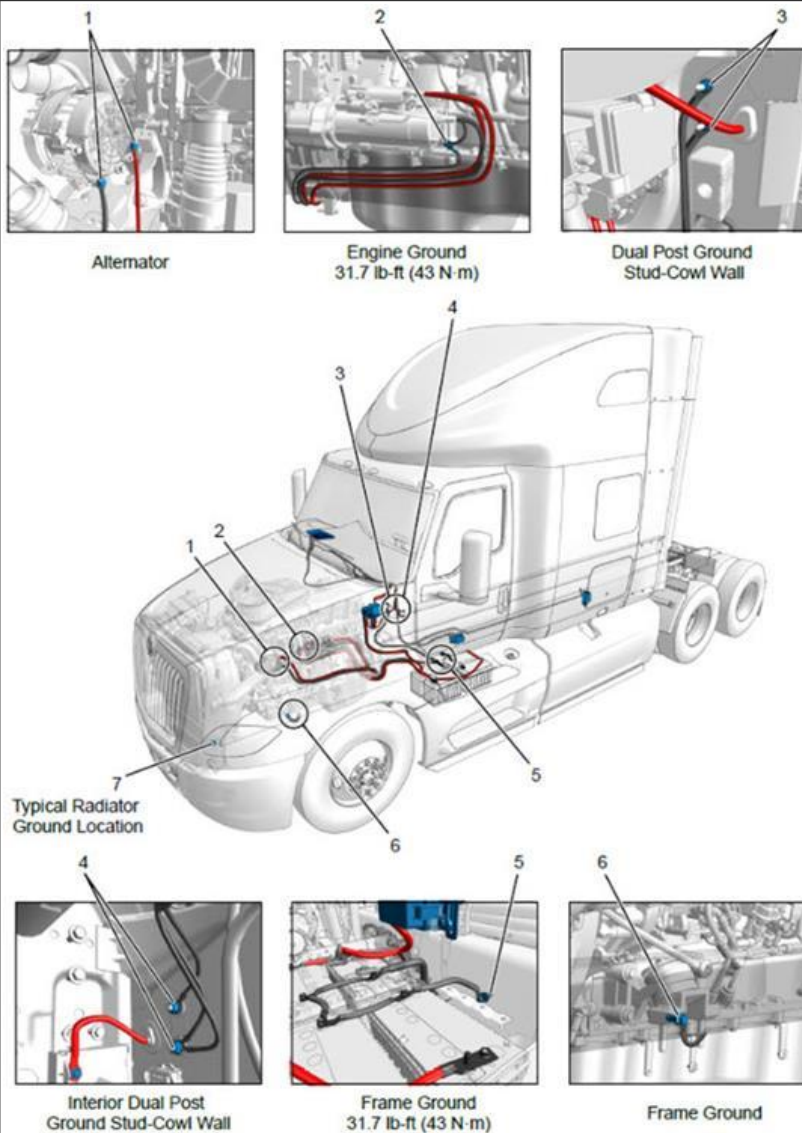A26

0000429675

Link to PDF: [0000429675](https://www.ik0800557.com/0000429675)**X15**

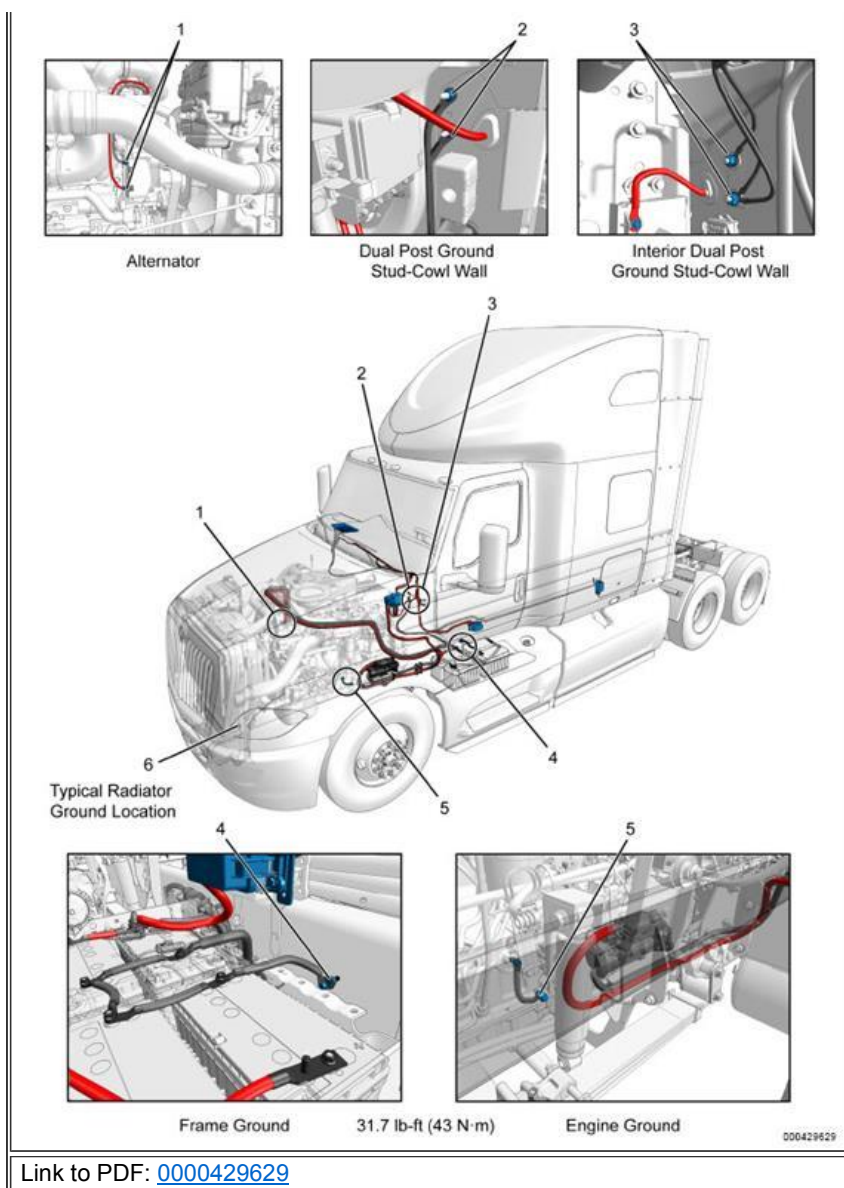

WARRANTY INFORMATION

Warranty Claim Coding:

Refer to the [Warranty Coding Manual](#) for Group and Noun Codes.

Standard Repair Time(s):

Refer to the [SRT Manual](#) for Repair Times

OTHER RESOURCES

[Master Service Information Site](#)

 Hide Details

Feedback Information

Viewed: 201

Helpful: 2

Not Helpful: 0

No Feedback Found

Copyright © 2018 Navistar, Inc.