



Countries: CANADA, UNITED STATES **Document ID:** IK1600241
Availability: ISIS, NotSIR **Revision:** 0
Major System: CAB / SLEEPER / HOOD **Created:** 12/20/2017
Current Language: English **Last Modified:** 1/16/2018
Other Languages: NONE **Author:** William Katschke
Viewed: 96

[Less Info](#)

Hide Details

Coding Information

Copy Link	Copy Relative Link	Bookmark	Add to Favorites	Print	Provide Feedback	Helpful	Not Helpful
		 View My Bookmarks				 1	 0

Title: LT Front Bumper Rock Guard Corrosion**Applies To:** LT

CHANGE LOG

Please refer to the change log text box below for recent changes to this article:

01/16/2018 - Initial Article Release

DESCRIPTION

This document will guide the user through steps to take when rust/corrosion is found around the rock guards on the LT front bumpers.

SYMPTOM(s)

Rust/Corrosion found around the rock guards on the LT front bumpers, see figure 1 below.

DTC/Light	Description
N/A	N/A

SPECIAL TOOL(s) / SOFTWARE

Tool Description	Tool Number	Comments	Instructions
N/A	N/A	N/A	N/A

SERVICE PARTS INFORMATION

Kit Description	Part Number	Quantity Required	Note

SCREEN, AIR INTAKE	Refer to Parts Catalog	2	As Needed
FASTENER, PUSH-IN TUFLOK	6090983C1	8	As Needed
WASHER, FLAT 5/16	22654R1	8	As Needed, Obtain Locally, Must have zinc finish

REPAIR STEP(s)



Figure #1: Rust/Corrosion on the Front Bumper Rock Guard

1. If the rock guard shows signs of rust/corrosion as shown in Figure #1:

1. Remove the rock guard
2. Clean bumper
3. Install new rock guard

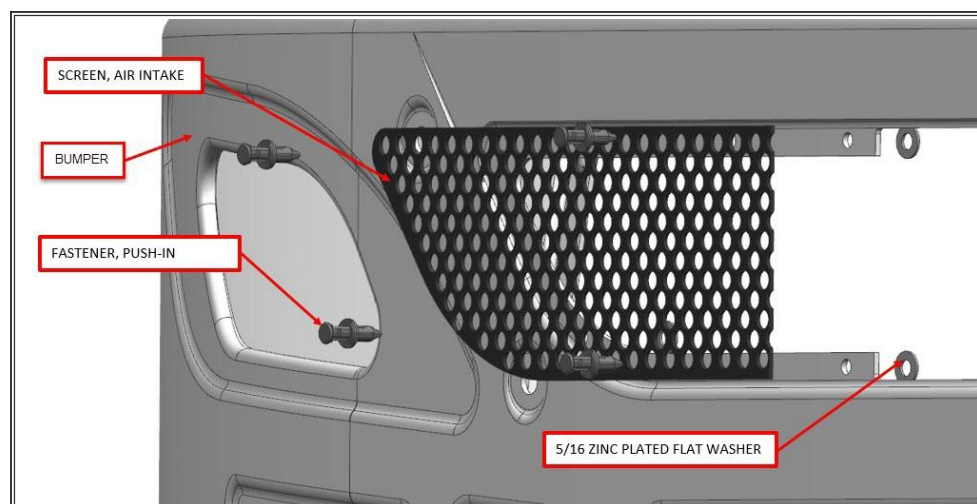


Figure #2: Front Bumper Rock Guard Component Locations

WARRANTY INFORMATION

Warranty Claim Coding:

Refer to the [Warranty Coding Manual](#) for Group and Noun Codes.

Standard Repair Time(s):Refer to the [SRT Manual](#) for Repair Times

OTHER RESOURCES[Master Service Information Site](#)

Hide Details

Feedback Information

Viewed: 95

Helpful: 1

Not Helpful: 0

No Feedback Found

Copyright © 2018 Navistar, Inc.