

TIRE CARRIER REMOVAL

Ascent & Plateau Tire Carrier

- 1) Remove the Chrome Continental ring by releasing the key clip at the bottom of the ring and spreading it to come off the tire.**




- 2) Remove the plastic tire cover by pulling up from the bottom. Unplug the license light by disconnecting the plugs. Weather seal the end of the vehicle plug.**



- 3) Release the 15/16" safety bolt on the carrier arm locking pin. You will find a 15/16" wrench in the tool pouch under the passenger front floor board.**




- 4) Release and remove the safety pin, the locking clip and the carrier-locking pin from the tire arm.**

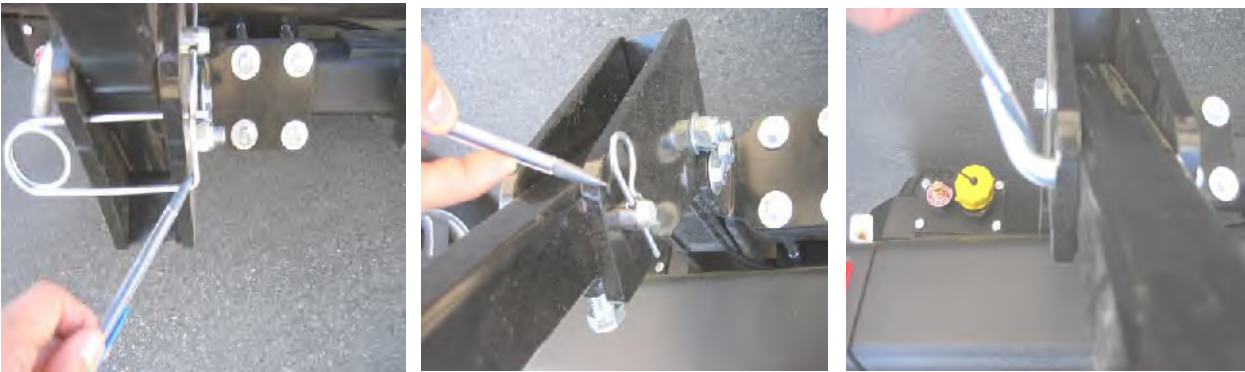

- 5) Lower the tire to the horizontal position. Use the 15/16" wrench to release the tire from the carrier arm.**

(Caution: Tire and carrier arm is heavy use assistance if possible.)

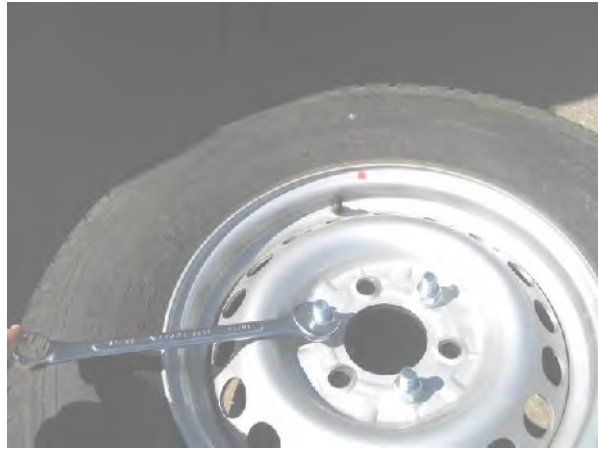

6) Refer to your Dodge Sprinter Manual for jacking and tire replacement instructions.

7) Remove the spare tire.

Caution: The tire and carrier arm is heavy use assistance if possible for lifting and replacing the locking pin into position.

8) Remove tire carrier arm bolt and tire carrier arm.



9) Strap the license plate light wire under the rear bumper.

10) Remove the vehicle license plate from the spare tire cover and reinstall it in the rear door license plate holder.

