

D/C Cut Fuse Installation During PDS

Service Category Power Source/Network

Section Power Distribution

Market USA

Toyota Supports
 ASE Certification 

Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2018	Mirai	

Introduction

To minimize battery discharge during transportation and storage, the D/C cut fuse (30A) has been removed at the assembly plant and temporarily stored in the blank space of the relay block in the engine compartment.

Reinstall the D/C cut fuse (30A) into its original location and clear all related Diagnostic Trouble Codes (DTCs) during PDS (Pre-Delivery Service).

Warranty Information


OP CODE	DESCRIPTION	TIME	OFF	T1	T2
N/A	Not Applicable to Warranty	-	-	-	-

D/C Cut Fuse Installation During PDS

Installation Procedure

Remove the D/C cut fuse (30A) from the blank space of the relay block in the engine compartment and install it into the location as shown during PDS.

Figure 1.

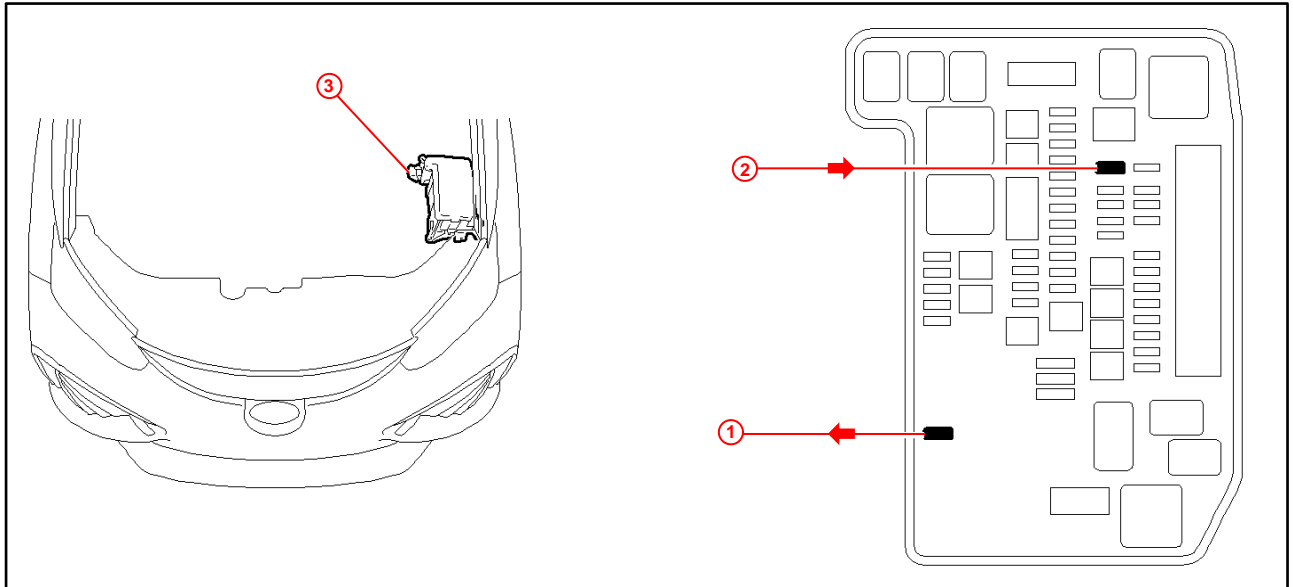

1	Remove This D/C Cut Fuse (30A)
2	Install D/C Cut Fuse (30A) Here (Original Location)

3	Main Relay Block
----------	-------------------------