

FLA COE
 FLB COE
 FLD Conventional
 Business Class
 FLC 112 Conventional

Century Class Conventional
 Argosy COE
 Cargo
 Columbia
 122SD and Coronado

Business Class M2
 > Cascadia
 108SD/114SD
 > New Cascadia

Caster Angle

The caster angle specifications are different for Cascadia and New Cascadia. When aligning a New Cascadia vehicle, use the appropriate values shown in **Table 1**. The target values indicate a positive caster angle; see **Fig. 1**.

Caster Angle Specifications				
Side	Cascadia		New Cascadia	
	Target (degrees)	Tolerance (degrees)	Target (degrees)	Tolerance (degrees)
LH	3.5*	±1.5	4.5	±1.5
RH	3.5*	±1.5	4.5	+3.5/-1.5

* LH and RH values must be within 0.5 degrees of each other (Cascadia only).

Table 1, Caster Angle Specifications

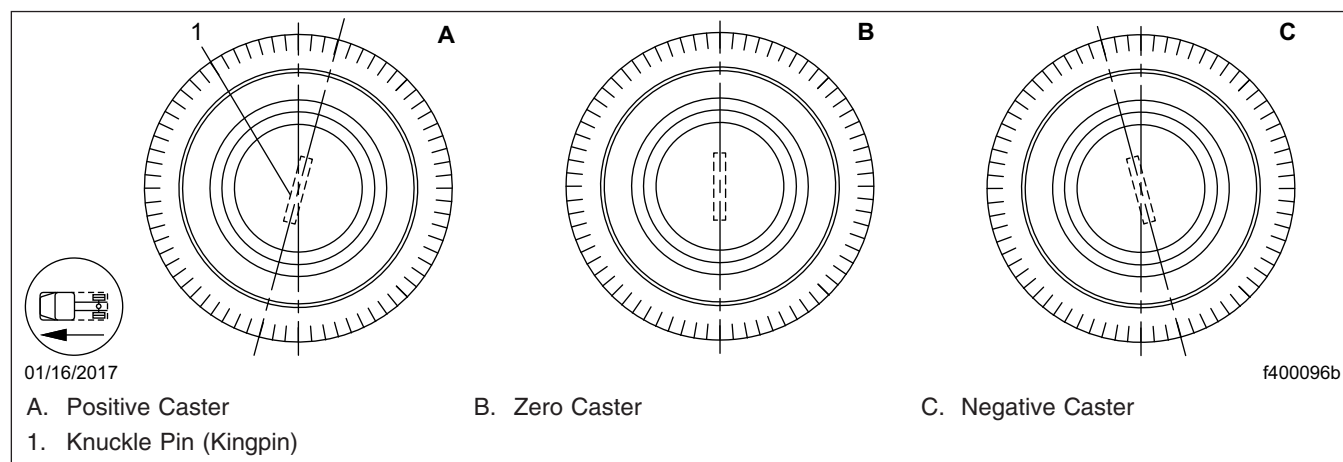


Fig. 1, Caster Angle

Warranty

This is an informational bulletin only. Warranty does not apply.

