

FLA COE  
FLB COE  
FLD Conventional

Business Class  
FLC 112 Conventional  
> Century Class Conventional

Argosy COE  
Cargo

Freightliner  
Service Bulletin

## General Information


On vehicles equipped with the ICU2M (also called the Level III ICU), a buzzer will sound and a warning message will be displayed when the cab air system has been in the recirculation mode for 20 minutes.

If desired, use ServiceLink 2.1 (or greater) to disable the buzzer by resetting parameter 320 to zero (0).

NOTE: Turning the buzzer off will **not** disable the ICU from displaying the following message on the message display screen as called for: **PROVIDE FRESH AIR; STOP RECIRC, MAX A/C.**

This message will be displayed once for seven seconds—then again about every four minutes for seven seconds each time—until the cab air system is switched out of the recirculating mode.

To switch out of the recirculating mode, either change the setting on the fresh air/recirculation switch, if so equipped, or rotate the air selection switch to a setting other than maximum air conditioning. See [Fig. 1](#).

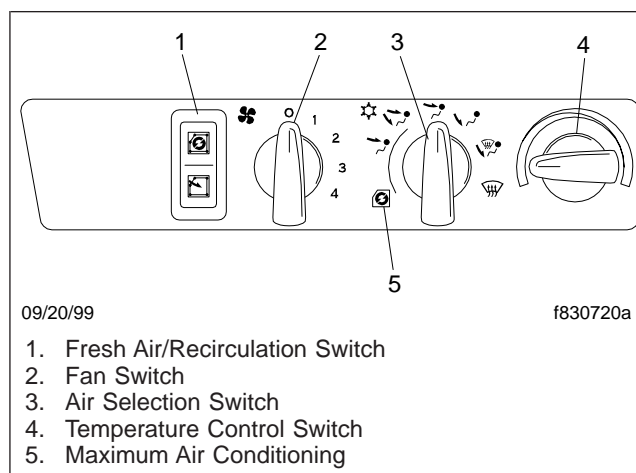

**Fig. 1, Climate Control Panel (typical)**

## Warranty

This is an informational bulletin only; warranty does not apply.