

# Inoperative Seat Heater (A/C Panel Does Not Illuminate)

**Service Category** Vehicle Interior

**Section** Seat

**Market** USA

Toyota Supports  
 ASE Certification 

## Applicability

YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
2016 - 2018	Mirai	

## Introduction

Some 2016 – 2018 model year Mirai vehicles may exhibit an inoperative seat heater and an A/C panel light that does not illuminate when pressing the seat heater switch. Follow the Repair Procedure in this bulletin to address this condition.

## Production Change Information

This bulletin applies to vehicles produced **BEFORE** the Production Change Effective VIN shown below.

MODEL	PLANT	DRIVETRAIN	PRODUCTION CHANGE EFFECTIVE VIN
Mirai	Motomachi	All	JTDBVRBD#JA004080

## Warranty Information

OP CODE	DESCRIPTION	TIME	OFF	T1	T2
EL1804	R & R Integration Control and Panel Assembly	0.4	84010-62030	72	71

### APPLICABLE WARRANTY

- This repair is covered under the Toyota Basic Warranty. This warranty is in effect for 36 months or 36,000 miles, whichever occurs first, from the vehicle's in-service date.
- Warranty application is limited to occurrence of the specified condition described in this bulletin.

## Inoperative Seat Heater (A/C Panel Does Not Illuminate)

### Parts Information

PART NUMBER		PART NAME	QTY
PREVIOUS	NEW		
84010-62030	84010-62031	Control and Panel Assy, Integration	1

### Repair Procedure

1. Confirm the condition exists.
  - A. Does the seat heater change from ON to OFF after pressing the seat heater switch?
    - **YES** — This bulletin does NOT apply. Continue diagnosis using the applicable Repair Manual.
    - **NO** — Continue to substep B.
  - B. Does the light on the A/C panel illuminate after pressing the seat heater switch?
    - **YES** — This bulletin does NOT apply. Continue diagnosis using the applicable Repair Manual.
    - **NO** — Continue to step 2.
  
2. Replace the A/C panel.  
 Refer to TIS, applicable model and model year Repair Manual:
  - 2016 – 2018 Mirai:  
*Vehicle Interior – Heating/Air Conditioning – “Heating / Air Conditioning: Air Conditioning Panel: [Removal](#) / [Installation](#)”*
  
3. Confirm normal seat heater operation.