



GROUP
Electrical

MODEL
2018MY~
Stinger (CK)

NUMBER
PS566

DATE
June 2018



TECHNICAL OPERATIONS

SUBJECT: STINGER (CK) REMOTE START LOGIC

This Pitstop provides information regarding the logic of Remote Start installed on some 2018MY~ Stinger (CK) vehicles. In most Kia models with Remote Start, the engine will remain running when a door is opened. However, the logic is different in the Stinger (CK). The “take-over” feature is not available for this vehicle and the engine will turn off as soon as any door, including the rear hatch, is opened. This is a normal remote start operation in the Stinger and does not require any further repair or diagnosis. For more details, refer to the Remote Start Owner’s Guide on KGIS → Publication → Accessory Information → Body Electrical System → 2018 Stinger (CK) Remote Start – Push Start (J5F57 AC100) → User Guide / QRG / ENG lsheet.

KIA | Genuine Parts

QUICK REFERENCE GUIDE - REMOTE START (Smart Key)

GETTING STARTED

STARTING with remote start fob	Press button once, then within 3 seconds, press and hold button for 2 seconds.
TURNING OFF the engine with remote starter	Press and hold button for 2 seconds.
DRIVING OFF	Take-over feature is not available for this vehicle. The engine will shut off when any door, trunk, or tailgate are opened during Remote Start Mode. Push and hold the brake pedal and press the vehicle's start button to drive off. NOTE: that the OE key must be inside the vehicle.
STARTING with Smart Key	Press button and within 3 seconds, Press or button on the smart key. NOTE: The Factory Key Fob "PANIC" function is disabled during Remote Start Mode.
TURNING OFF the engine with smart key	Press or button on the smart key.
LOCK	Press button 1 time.
UNLOCK	(Driver's door) Press button 2 times. (All doors) With driver's doors unlocked, press button 2 times. NOTE: May require changes to vehicle's user settings, see vehicle's Owner's Manual for details of door unlock option.
VALET / SERVICE MODE ON / OFF	Setting Condition: Engine Stop, IG ON, Brake Pedal ON . Press and hold button for 2 seconds. Vehicle lights flash 1 time and/or Vehicle horn sounds 1 time = Valet ON, Vehicle lights flash 2 times and/or Vehicle horn sounds 2 times = Valet OFF.

- **Lock:** Press 1 time
- **Unlock :**
 - (Driver's door) Press 2 times
 - (All doors) Press 2 more times for all door unlock
- **Start / Stop :**
 - Press and hold for 2 seconds

NOTE: Make sure to press the button only after LED lighting ends to activate each feature properly.

07/2017