

Creaking noise on front seat when cornering

Topic number	LI91.10-P-067955
Version	1
Function group	91.10 Front seats
Date	03-29-2018
Validity	BR213
Reason for change	
Reason for block	

Complaint:

Creaking noise on front seat when cornering

Attachments	
File	Description
BR213_Sitzlehnenverkleidung Geräusch.mp4	Squeaking noise on seat backrest

Cause:

The fastening hooks (Pic 1) on the seat-back lining rubs up against the functional carrier hooks (Pic 3) and cause a noise

Attachments	
File	Description
Pic1.JPG	Fastening hooks on seat-back lining without felt
Pic3.jpg	Functional carrier

Remedy:

1. Disassemble seat-back lining on front seat AR91.10-p-1910lw

2. Perform test drive without backrest seat-back lining.

If the noise is no longer present, continue with operation step 3.

If the noise is still present, look for source of noise elsewhere.

3. Cut felt (A000 983 71 10) to size and attach as in Pic 2 to the two fastening hooks on the seat-back lining.

4. Mount seat-back lining onto front seat AR91.10-p-1910lw

Attachments	
File	Description
Pic2.JPG	Fastening hooks on seat-back lining with felt

Symptoms

Body / Seat / Noises / Cracking

Parts

Part number	ES1	ES2	Designation	Quantity	Note	EPC
-------------	-----	-----	-------------	----------	------	-----

XENTRY TIPS

A 000 983 71 10			Felt	1	Felt	X
-----------------	--	--	------	---	------	---

Attachments

Pic1.JPG:



XENTRY TIPS

Pic2.JPG:



XENTRY TIPS

Pic3.jpg:

