# Height adjustment of electric steering column adjustment sticks at top end stop

Topic number	LI46.15-P-063353
Version	6
Function group	46.15 Steering column adjustment
Date	06-01-2018
Validity	Model 166 Model 205 Model 213 Model 217 Model 222 Model 238 Model 253 Model 257 Model 292
Reason for change	Remedy and validity revised
Reason for block	

#### Complaint:

Height adjustment of electric steering column adjustment stuck in adjustment position at top.

#### Cause:

Height adjustment sticks after moving to the top limit.

#### Remedy:

- 1. Move fore/aft adjustment to the end position.
- 2. Release stuck height adjustment by knocking with palm of hand onto top of steering wheel.
- At the same time, push adjusting switch (downwards).
- 3. Commission driver's seat control unit.

#### While doing so,

- the control unit software is updated, if necessary
- the limit stops are cleared and normalized again
- and any renewed jamming is prevented
- 4. Once commissioning has been completed the vehicle can be handed over to the customer.

### Note:

If a vehicle receives a complaint again after this LI has been performed, please provide the drivers seat (N32/1) control unit log in a PTSS case.

## Symptoms

Chassis/suspension / Steering system / Steering column adjustment / Malfunction

Chassis/suspension / Steering system / Steering column adjustment / Does not adjust longitudinally

Chassis/suspension / Steering system / Steering column adjustment / Does not adjust in height

Chassis/suspension / Steering system / Steering column adjustment / Adjusts without obvious cause

Operation numbers/damage codes					
Op. no.	Operation text	Time	Damage code	Note	
			46236 D6	Steering column adjustment motor for height adjustment has excessive resistance	