

Technical Information

Service

118/18 ENU

9

WJ60

WJ60 - Adapting Vehicle Order in the Instrument Cluster and Re-Coding PCM and Air-Conditioning Control Unit (Workshop Campaign)

- Important: CRITICAL WARNING - This campaign includes steps where control unit(s) in the vehicle will be programmed with the PIWIS Tester. The vehicle voltage must be maintained between 13.5 volts and 14.5 volts during this programming. Failure to maintain this voltage could result in damaged control unit(s). Damage caused by inadequate voltage during programming is not a warrantable defect. The technician must verify the actual vehicle voltage in the PIWIS Tester before starting the campaign and also document the actual voltage on the repair order. Model Year: 2019 Model Line: Cayenne (9YA) Subject: Instrument cluster Information: Due to a faulty Timer function for the internal clock in the instrument cluster, there is a possibility that the control unit system will be activated cyclically by the instrument cluster after stopping the vehicle. As a result, the control unit system will not be switched to energy-saving mode, resulting in increased closed-circuit current consumption. This can deplete the vehicle battery if the vehicle is idle for a long time. Remedial Adapt the vehicle order and re-code the PCM and air-conditioning control unit using the PIWIS Tester with Action: software version 37.600.025 (or higher) installed. NOTICE Use of a PIWIS Tester test software version that is older than the prescribed version Measure is ineffective Always use the prescribed version or a higher version of the PIWIS Tester test software for control unit ⇒ coding. Important: Please complete campaign repair during PDI for any affected vehicle. Affected Only the vehicles assigned to the campaign (see also PIWIS Vehicle information). This campaign affects 484 vehicles in North America. Vehicles: **Required tools**
- Tools: 9900 PIWIS Tester 3 with PIWIS Tester software version 37.600.025 (or higher) installed

• Battery charger with a current rating of **at least 90 A** and a **current and voltage-controlled charge map** for lithium starter batteries, e.g. **VAS 5908 - Battery charger 90A**

i Information

The new Cayenne is equipped as standard with a **lithium starter battery**, which must only be charged using suitable battery chargers.

For further information about the battery chargers to be used, see:

- \Rightarrow Workshop Manual '2706IN General information on the 12-volt lithium-ion battery'
- \Rightarrow Workshop Manual '270689 Charging vehicle electrical system battery'

Preparatory work

NOTICE

Fault entry in the fault memory and/or control unit coding aborted due to low-voltage.

- Increased current draw during diagnosis or control unit coding can cause a drop in voltage, which can result in one or more fault entries and the abnormal termination of the coding process.
- ⇒ Before starting control unit coding, connect a suitable battery charger with a current rating of at least 90 A to the vehicle.

NOTICE

Coding will be aborted if the WLAN connection is unstable.

- An unstable WiFi connection can interrupt communication between the PIWIS Tester and the vehicle communication module (VCI). As a result, coding may be aborted.
- ⇒ During control unit coding, always connect the PIWIS Tester to the vehicle communication module (VCI) via the USB cable.

NOTICE

Control unit coding will be aborted if the driver's key is not recognized

- If the driver's key is not recognized in the vehicle, coding cannot be started or will be interrupted.
- ⇒ Position the driver's key in the rear area of the left cupholder in the center console between the holding struts (emergency start tray) in order to guarantee a permanent radio link between the vehicle and driver's key.
- Work Procedure: 1 Connect a battery charger that is suitable for lithium starter batteries with a current rating of at least 90 A (e.g. VAS 5908 Battery charger 90A) to the jump-start terminals in the engine compartment.
 For instructions, see ⇒ Workshop Manual '2706IN External power connection, jump-lead starting'.

AfterSales

- 2 Position the driver's key in the rear area of the left cupholder in the center console between the holding struts (emergency start tray) in order to guarantee a permanent radio link between the vehicle and driver's key ⇒ *Emergency start tray*.
- 3 **9900 PIWIS Tester 3** must be connected to the vehicle communication module (VCI) via the **USB cable**. Then connect the communication module to the vehicle and switch on the PIWIS Tester.
- 4 Switch on the ignition.



Emergency start tray

5 On the PIWIS Tester start screen, call up the **'Diagnostics'** application. The vehicle type is then read out, the diagnostic application starts and the control unit selection screen is populated.

Reading out hardware version of the instrument cluster

Work Procedure: 1 Read out the hardware version from the instrument cluster.

- 1.1 Select the **Instrument cluster** control unit in the control unit selection screen (**'Overview'** menu) and confirm your selection by pressing •F12[#] ('Next').
- 1.2 Once the instrument cluster control unit has been found and is displayed in the 'Overview', select the **'Extended identification'** menu.
- For hardware version **011**: Continue with ⇒ *Technical Information '2706IN Adapting vehicle order in the instrument cluster and re-coding PCM and air-conditioning control unit'.*
- For any other hardware version, do not carry out the campaign ⇒ End of action required. For warranty processing, see Scope 1 under ⇒ *Technical Information '2706IN Warranty processing'*.

Adapting vehicle order in the instrument cluster and re-coding PCM and air-conditioning control unit



Information

The procedure described here is based on the PIWIS Tester test software version 37.600.025.

The PIWIS Tester instructions take precedence and in the event of a discrepancy, these are the instructions that must be followed. A discrepancy may arise with later software versions for example.

Work Procedure: 1 In the control unit selection screen (**'Overview'** menu), press • F7[#] to call up the Additional menu.

2 When the question "Create Vehicle Analysis Log (VAL)?" appears, press • F12" ('Yes') to confirm that you want to create a VAL.

6

- 3 Press F12" ('Next') to acknowledge the message informing you that campaigns for the vehicle are stored in the PIWIS information system.
- 4 Select 'Maintenance of vehicle data' and press F12" ('Next') to confirm your selection.
- 5 In the 'Family' column under 'Auxiliary heating', change the value 9MO (Without auxiliary heating/auxiliary heater) to 9M9 (Auxiliary water heater with timer and remote control) (⇒ Selecting auxiliary heating). Press • F12" ('Next') twice to finish and then press

In the control unit selection screen ('Overview'

'Coding/programming' menu \Rightarrow *Control unit* selection - *PCM 5.0 and air conditioning.*

menu), select the control units 'PCM 5.0' and 'Air conditioning' and select the

•F8" to sa	ave the change.
------------	-----------------

Nerview				ł
Value group	Family	Volue	Changed	
	WINDSCREEN	40F - WINDSHIELD, HEAT, INSULAT, G		6
	CENTRAL ELECTRICS	VH2 - 48 V VEHICLE ELECTRICAL SYSTEM		Ϊİ.
	INSTR. CLUSTER DIALS (VW: INSTRUMENT LIGHTING)	7V0 - INSTRUMENT DIALS IN BLACK		I
	ADD. TANK FOR SCR	FK0 - WITHOUT ADDITIONAL TANK FOR		
	ADDITIONAL TYRES	2WA - WITHOUT ADDITIONAL TIRES		1
	ADDITIONAL CHILD SEAT ANCHOR	SA1 - ISOFIX CHILD SEAT ANCHOR, RE		1
	ADDITIONAL DUST SEALS	600 - WITHOUT ADDITIONAL OUTER 8		
	ADDITIONAL WARNING LIGHTS	9TF - EXTERIOR MIRROR LIGHT		1
	AUX HEATING	ING - WATER AUX, HEATER, TIMER.		E
	ADDITIONAL INSTRUMENTS	ALM - SPORT CHRONO PACKAGE PLUS		5

Selecting auxiliary heating

Dentew	1	Extended identifications	Feutmentery	Actual values input signals	Drive links checks	Maintenani	Coding programming	
DTC	Sinter		Certral	unt		DSN	Partnurder	
		AC						0
		Instrument o	kutter					1
		Loudspeake	r anpilter					I
		Steering wh	eel electronics					1
		Steering col	umin lock					
		Steering col	uren adjustment					1
		Engine elect	tonics (DME)			-		
		Night vision	nyeters					1
		PCM 5.0						
		Porsche Vel	hicle Tracking Sys	tein (PVT8), EACL	Lanly			100
		Diff how						

Control unit selection - PCM 5.0 and air conditioning

Automatic coding

- 7 Select the 'Automatic coding' function and press F12" ('Next') to start coding.
- 8 When coding is complete, the message "Coding has been completed successfully" is displayed and a tick appears in the 'Status' boxes.

If coding is not completed successfully (error message "Coding was not completed successfully"), coding must be **repeated**.

Technical Information

- 9 Select the **'CLIMATE'** menu on the PCM touch-screen.
- 10 Select the submenu **'HEATING'** \Rightarrow *PCM Climate menu* -1- and activate Timer 1 \Rightarrow *PCM Climate menu* -2-.

When the procedure is finished, set the vehicle back to its original status. To do this, continue with **Step 11**.

11 In the control unit selection screen (**'Overview'** menu), press • F7[#] to call up the Additional menu.



PCM Climate menu

- 12 Select 'Maintenance of vehicle data' and press F12" ('Next') to confirm your selection.
- 13 In the 'Family' column under 'Auxiliary heating', change the value 9M9 (Auxiliary water heater with timer and remote control) to 9MO (Without auxiliary heating/auxiliary heater) (⇒ Selecting auxiliary heating).
 Press •F12" ('Next') twice to finish and then press
 •F8" to save the change.
- 14 In the control unit selection screen ('Overview' menu), select the control units 'PCM 5.0'

and 'Air conditioning' and select the 'Coding/programming' menu.

Maintenance of vehicle date Plases stands you have fine the lat. Velocations Vel

Selecting auxiliary heating

- 15 Select the 'Automatic coding' function and press F12" ('Next') to start coding.
- 16 When coding is complete, the message "Coding has been completed successfully" is displayed and a tick appears in the 'Status' boxes.

If coding is not completed successfully (error message "Coding was not completed successfully"), coding must be **repeated**.

Concluding work

Work Procedure: 1 Read out and erase the fault memories of all control units.

1.1 Press • F7" in the control unit selection screen ('Overview' menu) to call up the Additional menu.

Technical Information

1.2 Select the function "Read all fault memories and erase if required" and press • F12" ('Next') to confirm your selection \Rightarrow *Erasing fault memories*.

The fault memories of the control units are read out.

1.3 Once you have read out the fault memories, check the fault memory entries.

Overview					Codings adaptations
			Function		
Measurement of cl	osed-cir	cuit current			
Maintenance of vel	hicle dat	ta .			
Vehicle analysis lo	g (VAL)				
Campaign					
Vehicle handover					
Read all fault mem	ories an	d erase if required			
					_

Erasing fault memories



Information

If control units are found to have faults that are **not** caused by control unit coding, these must first be **found** and **corrected**. This work **cannot** be invoiced under the workshop campaign number.

- 1.4 Press F8" to delete fault memory entries.
- 1.5 Press F12" ('Yes') in response to the question as to whether you really want to delete all fault memory entries.

The faults stored in the fault memories of the various control units are deleted.



Information

If fault memory entries for individual control units cannot be deleted, proceed as follows:

- Switch off the ignition.
- Disconnect the PIWIS Tester diagnostic connector from the diagnostic socket.
- Lock the vehicle using the driver's key.
- Wait approx. 1 minute before unlocking the vehicle again.
- Start the engine, leave it running for a short time and then stop it again.
- Switch off the ignition and wait approx. 10 seconds before switching it back on again.
- Plug the PIWIS Tester diagnostic connector into the diagnostic socket again and restore communication with the vehicle.
- Read out the fault memory again and delete any fault memory entries that are stored.

AfterSales

- 1.6 Once you have erased the fault memories, select the **'Overview'** menu to return to the control unit selection screen \Rightarrow *Control unit selection*.
- 2 Create Vehicle Analysis Log (VAL). Return the VAL together with the VAL created when you started the work using the PIWIS Tester.
- 3 Switch off the ignition.
- 4 Disconnect the PIWIS Tester from the vehicle.
- 5 Switch off and disconnect the battery charger.
- 6 Enter the campaign in the Warranty and Maintenance booklet.

End of action required.

For warranty processing, see Scope 2 under \Rightarrow Technical Information '2706IN Warranty processing'.

ov	erview .					
DTC	Ratus	Centrol unit	DSN	Porache part a	rumber	T
	Airbag					
	Gateway					
	DME					
	PDK (Porsi	che Doppelkupplung)				
	PDK select	ior lever				1
	Instrument	cluster				
	Steering wi	heel electronics				1
	Stopwatch					
	PCM / CDP	ŧ				1

Control unit selection

Warranty processing

Scope 1:

Scope 2:

The specifie	d working time was determined specifically for carrying out this car	npaign and includes
necessary p	preliminary and subsequent work.	ation List in DIM/IC
i ne working) time may differ from the working times published in the Labor Oper-	ation List in Piwis.
Reading out	hardware version of the instrument cluster	
• If the ha	ardware version is not 011 , no further action required	
Working t	ime:	
Reading ou	It hardware version from the instrument cluster	Labor time: 20
Includes:	Connecting and disconnecting battery charger	
	Connecting and disconnecting PIWIS Tester	
	Connecting and disconnecting PIWIS Tester	
	Connecting and disconnecting PIWIS Tester	
⇒ Damag	Connecting and disconnecting PIWIS Tester	
⇒ Damag	Connecting and disconnecting PIWIS Tester	
⇒ Damag Adapting ve	Connecting and disconnecting PIWIS Tester Je Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit	
⇒Damag Adapting ve • Hardwa	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011	
⇒Damag Adapting ve • Hardwa	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011	
⇒ Damag Adapting ve • Hardwa Working ti	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011 ime:	
⇒ Damag Adapting ve • Hardwa Working ti Adapting ve	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011 ime: ehicle order and re-coding PCM and air-conditioning control unit	Labor time: 56
⇒ Damage Adapting ve Hardwa Working ti Adapting ve Includes:	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011 ime: ehicle order and re-coding PCM and air-conditioning control unit Connecting and disconnecting battery charger	Labor time: 56
 ⇒ Damag Adapting ve Hardwa Working ti Adapting ve Includes: 	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011 ime: ehicle order and re-coding PCM and air-conditioning control unit Connecting and re-coding PCM and air-conditioning control unit Connecting and disconnecting battery charger Connecting and disconnecting PIWIS Tester	Labor time: 56
 ⇒ Damag Adapting ve Hardwa Working ti Adapting ve Includes: 	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011 ime: ehicle order and re-coding PCM and air-conditioning control unit Connecting and disconnecting battery charger Connecting and disconnecting PIWIS Tester Reading out hardware version from the instrument cluster	Labor time: 56
 ⇒ Damag Adapting ve Hardwa Working ti Adapting ve Includes: 	Connecting and disconnecting PIWIS Tester ge Code WJ60 066 000 1 hicle order and re-coding PCM and air-conditioning control unit are version is 011 ime: ehicle order and re-coding PCM and air-conditioning control unit Connecting and disconnecting battery charger Connecting and disconnecting PIWIS Tester Reading out hardware version from the instrument cluster Reading out and erasing fault memory	Labor time: 56

 \Rightarrow Damage Code WJ60 066 000 1

Important Notice: Technical Bulletins issued by Porsche Cars North America, Inc. are intended only for use by professional automotive technicians who have attended Porsche service training courses. They are written to inform those technicians of conditions that may occur on some Porsche vehicles, or to provide information that could assist in the proper servicing of a vehicle. Porsche special tools may be necessary in order to perform certain operations identified in these bulletins. Use of tools and procedures other than those Porsche recommends in these bulletins may be detrimental to the safe operation of your vehicle, and may endanger the people working on it. Properly trained Porsche technicians have the equipment, tools, safety instructions, and know how to do the job properly and safely. Part numbers listed in these bulletins are for reference only. The work procedures updated electronically in the Porsche PIWIS diagnostic and testing device take precedence and, in the event of a discrepancy, the work procedures in the PIWIS Tester are the ones that must be followed.