

Service Category	General		
Section	Pre-Delivery Service	Market USA	Toyota Supports

#### Applicability

2019 Avalon, Avalon HV        REVISION NOTICE        August 24, 2018 Rev1:        • The Before Inspection and Functional Operation sections have been updated.	YEAR(S)	MODEL(S)	ADDITIONAL INFORMATION
August 24, 2018 Rev1:	2019	Avalon, Avalon HV	
August 24, 2018 Rev1:			
	<b>U</b>		aratian castiens, have been undeted
	Any previous p	rinted versions of this bullet	in should be discarded.

#### Introduction

Pre-Delivery Service (PDS) is a critical step in satisfying our new car customers. Customer feedback indicates the following areas deserve special attention when performing PDS:

- Careful inspection for paint chips/scratches and body dents/dings.
- Proper operation of electrical accessories (including interior light, clock, and radio reset).
- Interior cleanliness.
- Proper function of mechanical systems.

Customer retention and proper maintenance of vehicles are and have always been a major focus for Toyota. To help remind customers that regular service is essential to the proper maintenance of their vehicle, dealers are required to install a service reminder sticker prior to delivery. By doing this, customers will be reminded to return to your dealership for service. Your current service reminder sticker may be used. (See PDS Check Sheet item 9 of "Final Inspection and Cleaning.")

A new PDS <u>Check Sheet</u> has been developed for the 2019 model year Avalon/Avalon HV. Some check points have been added, expanded, or clarified. **Bulletins are available for items in bold type.** 

#### **Warranty Information**

OP CODE	DESCRIPTION	MODEL	TIME	OFP	T1	T2
001013	Pre-Delivery Service (PDS)	Avalon	1.0			
		Avalon HV	1.0		-	-

# Warranty Policy

If the need for additional repairs or adjustment is noted during the PDS, the required service should be performed under warranty. Reimbursement will be managed under the warranty policy.

The Warranty Policy and Procedures Manual requires that you maintain the completed PDS Check Sheet in the customer's file. If you cannot produce a completed form for each retailed vehicle upon TMS and/or Region/Distributor audit, the PDS payment amount will be subject to debit.

An additional Repair Order completed in conjunction with normal PDS must have time punch/flags for service. If multiple repairs are performed, separate time flags must be punched for each repair.

# **Required Tools & Equipment**

REQUIRED EQUIPMENT	SUPPLIER	PART NUMBER	QTY
Techstream 2.0*		TS2UNIT	
Techstream Lite	ADE	TSLITEPDLR01	1
Techstream Lite (Green Cable)		TSLP2DLR01	

\* Essential SST.

#### NOTE

- Only ONE of the Techstream units listed above is required.
- Software version 13.10.019 or later is required.
- Additional Techstream units may be ordered by calling Approved Dealer Equipment (ADE) at 1-800-368-6787.

#### **Before Inspection**

When performing new car PDS, install the D/C cut fuse before moving the vehicle from the storage lot so that Functional Operation checks can begin as soon as the vehicle is moved into the service stall.

1. Install D/C cut fuse\* – <u>see Check Sheet</u>

#### NOTE

The D/C cut fuse is removed only on vehicles going to Hawaii, Puerto Rico, Saipan, Guam, and American Samoa.

2. Initialize/update the Entune <sup>™</sup> 3.0 App Suite Connect – <u>T-SB-0068-18</u>

# **Functional Operation**

Apply parking brake, cycle ignition "IG-ON," place gear selector in "R," turn on lights and rear defogger, unlock all doors, and release fuel door and trunk hatch.

- 1. Check dome, courtesy, map, and sun visor lights\*
- 2. Check warning/indicator lights, gauges, and horn
- 3. Check windshield wipers and washers
- 4. Check headlights, instrument lights, turn signals, emergency flashers, and brake lights
- 5. Check inside/outside rear view mirror operation/adjustment
- Check USB and 12V power outlets Check the power outlet using an electrical accessory designed for this use.
- 7. Check audio/navigation\*/backup camera systems and set clock For navigation, set the destination search area to local position.
- Add dealer contact information for Call Dealer head unit function\* <u>OM07006U</u> (Entune<sup>™</sup> 3.0 Audio Plus and Premium Audio only.)
   See Multimedia System Owner's Manual pg. 62 – 63 (Entune<sup>™</sup> Premium Audio) and pg. 64 – 65 (Entune<sup>™</sup> 3.0 Audio Plus).
- 9. Install shift-lock override button cover
- 10. Check sliding roof\*
- 11. Check rear sunshade operation\*

# Walkaround Inspection

Starting at the left front door, check window and door lock operation from master power switch, if equipped. Continue around vehicle in a counterclockwise direction checking each door and window operation, child door locks, seat belts, interior condition, all lights, and luggage compartment contents. Finish by checking headlight aim.

# 1. Check Smart Key System – <u>T-SB-0185-17</u>

- 2. Check door and door lock operation, including each wireless remote control/theft deterrent system\*
- 3. Check window operation
- 4. Check that engine starts with all keys
- 5. Check that child safety door locks are in normal (unlocked) position
- 6. Check seats and seat belt operation
- 7. Check rear defogger/rear view mirror defogger\*
- 8. Check side marker, tail, backup, and license plate lights

### Walkaround Inspection (continued)

- 9. Check luggage compartment light\* and trim appearance
- 10. Adjust spare tire pressure, inspect for damage, and check jack and tool installation
- Check headlight aim Refer to the Repair Manual for procedures.

#### Under Hood

- 1. Check engine oil level
- Check brake fluid level Visually inspect using see-through reservoirs.
- 3. Check engine coolant level
- 4. Check inverter coolant level\*
- 5. Check windshield washer fluid level
- 6. Inspect for fuel, oil, coolant, and other fluid leaks
- 7. Check battery State-Of-Charge (SOC) using digital battery system analyzer Refer to Service Bulletin No. T-SB-0195-17, *Battery Maintenance During PDS.*

#### NOTE

Battery SOC should be a minimum of 75%. Please enter the SOC reading on the space provided on the check sheet and attach the printout to the check sheet.

8. Inspect for fuel, oil, coolant, and other fluid leaks

#### **Battery Maintenance\***

1. Perform HV battery check and maintenance – <u>T-SB-0197-17</u>

# Under Vehicle (On Hoist)

1. Remove disc brake anti-rust covers/anti-corrosion wheel film\* - PD017-04

Visually inspect rotors for rust.

#### NOTE

For best rotor rust prevention, retain wheel film on vehicle until just prior to customer delivery.

- 2. Inspect tires for defects/damage
- 3. Initialize Tire Pressure Warning System (TPWS) see Check Sheet
- Install wheel covers/caps/spare tire wheel covers\*

# Under Vehicle (On Hoist) (continued)

- 5. Check hybrid transaxle fluid level\*
- 6. Inspect for fuel, oil, coolant, and other fluid leaks
- 7. Inspect under the vehicle for damage, rust, etc.
- 8. Visually check bolts and nuts on chassis and powertrain for looseness
- 9. Install rubber body plugs (stored in glove box or center console)\* Install the four rubber plugs into front and rear torque box holes.
- 10. Install front wheel opening extension pads see Check Sheet

# Road Test

A complete road test helps promote customer satisfaction. Drive vehicle over a variety of road surfaces and driving conditions. Check for unusual noise and driving performance.

- Check cold engine operation Check starting and fast idle operation performance.
- Check engine operation during warm-up Check that engine operates smoothly during warm-up. Check for unusual noise, engine vibration, rough idle, etc.
- 3. Check engine operation at normal operating temperature Check engine performance over a broad range of driving conditions, including idle quality, acceleration, cruise, and deceleration.
- 4. Check transmission operation

Check automatic transmission operation, if equipped, including operation in each range, neutral start switch, and shift-lock system.

Check manual transmission operation, if equipped, including shift lever/linkage, operation in each gear, and clutch engagement, disengagement, chattering, and unusual noise.

- Check brake and parking brake operation
  Check brake function, including unusual noise, parking brake performance, and all related brake system indicator lights.
- Check steering operation and off-center/vehicle pull/flutter Check steering function.

Check steering off-center/vehicle pull/flutter.

- 7. Inspect for abnormal noise and vibration
- 8. Inspect for squeaks and rattles
- 9. Check Blind Spot Monitor System\*
- 10. Check front and rear\* heater and A/C operation
- 11. Initialize Panoramic View Monitor System (PVM) see Avalon / Avalon HV Repair Manual

# Road Test (continued)

- 12. Check cruise control operation\* Check cruise control, including On-Off switch, Set/Coast, Resume/Accel, and Cancel functions.
- 13. Check front seat heater/ventilation\* operation
- 14. Check driver's seat memory operation\*
- 15. Calibrate Intelligent Clearance Sonar System\* (Procedure 4) see <u>Avalon</u> / <u>Avalon HV</u> Repair Manual

# Final Inspection and Cleaning

1. Remove interior protective covers, unnecessary labels, tags, etc. (Remove protective covers just before delivery to the customer)

Remove plastic covers from door panels, seats, head restraints, and sun visors, as required.

Remove labels, tags, and stickers (except those containing owner information).

#### NOTE

Customer information labels, such as the fuel caution, airbag warnings, and bumper labels, must be left on the vehicle until delivery to a retail customer.

- 2. Visually inspect all interior parts for installation, fit, damage, dirt, etc.
- 3. Verify floor mat application and install using retainers\* T-SB-0188-17
- 4. Verify green light is illuminated on SOS (Safety Connect) button\*
- Remove Rapgard<sup>™</sup> and clear protective bumper film<sup>\*</sup>

Ensure that all glue residue is removed.

- 6. Wash and clean vehicle
- 7. Inspect paint finish for scratches, chips, rust, dents, damage, etc.
- 8. Inspect exterior body parts for proper installation, damage, rust, etc.
- 9. Place service reminder sticker on inside of windshield, top left corner

Complete the mileage or date recommendation and apply the service reminder sticker to the inside of the windshield, top left corner. You may use your current service reminder sticker.

- 10. Place Owner's Manual portfolio\* in glove box
- 11. Install front license plate and mounting bracket\* see Check Sheet
- 12. Perform Techstream Health Check

Perform a Health Check to ensure that Diagnostic Trouble Codes (DTCs) are not present. Health Check results can be printed for the customer at delivery, or for the dealer file, using the Diagnostic Report function.

\*Inspect or install when equipped or required.