

QUARANTINE NOTICE

Reference number:	QN-18-1108	Issued: 27 September, 2018
Subject:	Replace the bracket for the rear fuse box	
Model(s):	Vanquish Zagato Volante and Vanquish Zagato Speedster	
VIN Range:	Refer to the separately published list of affected Vehicle Identification Numbers (VINs)	
Applicable to:	All Dealers	
Distribute to:	After Sales Manager Executive Manager Service Manager Sales Manager	Warranty Staff Technician(s) Parts Staff

Note: *This repair is the same as Service Action SA-18-1108. Use this Quarantine Notice for vehicles that are not registered and have not been given to a Customer.*

Some vehicles in the affected VIN list for this Quarantine Notice may now be registered and given to a Customer. Make sure that you do a check of the Online Dealer Warranty (ODW) database to make sure that all necessary work is done to every vehicle.

Reason for this Quarantine Notice

Aston Martin has found a problem with the bracket for the rear fuse box on Vanquish Zagato Volante and Vanquish Zagato Speedster vehicles.

Do the procedure that follows to replace the bracket for the rear fuse box.

Workshop Procedure

1. Open the boot lid.

Note: *Make sure that the boot lid stays open during the steps that follow. The boot lid latch is operated electronically and will not open when the battery is disconnected.*

2. Disconnect the vehicle battery. (Refer to Workshop manual procedure: 14.01.CA Battery Disconnection and Connection Procedure.)

3. Release the weather strip on the right side of the luggage compartment opening. (Refer to Figure 1.)

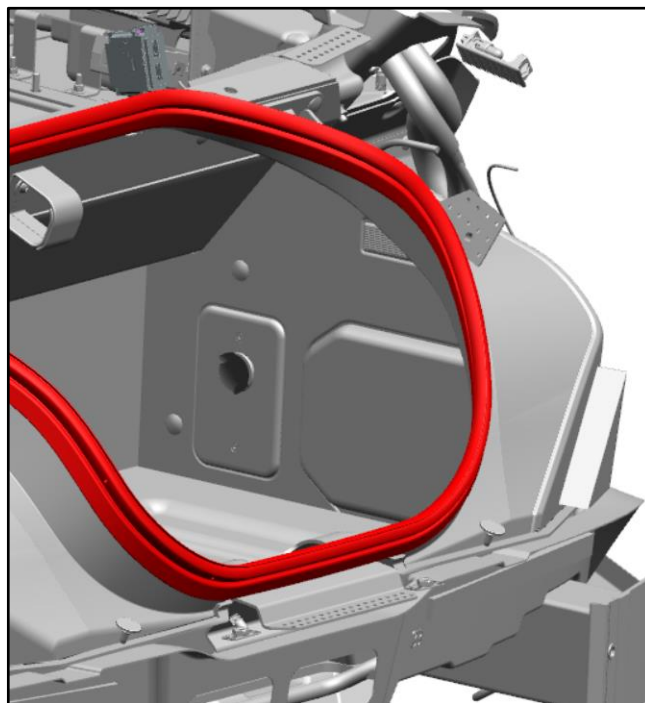


Figure 1

CAUTION: IN STEPS 4 THRU 11 MAKE SURE THAT NO DAMAGE TO THE LEATHER OF THE SIDE PANEL OCCURS. TOOLS CAN CAUSE DAMAGE TO THE LEATHER IF SUFFICIENT PROTECTION IS NOT USED.

4. Remove the cover for the rear fuse box. (Refer to Figure 2.)

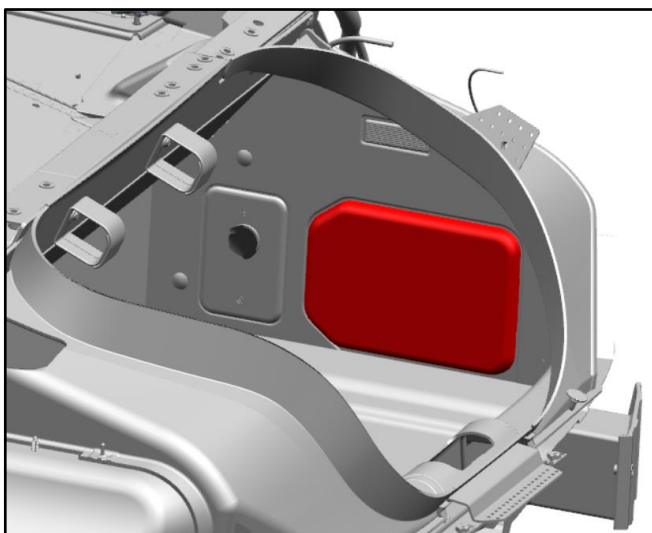


Figure 2

5. Remove the two screws that attach the panel for the 12V power supply to the side panel of the luggage compartment. (Refer to Figure 3.)

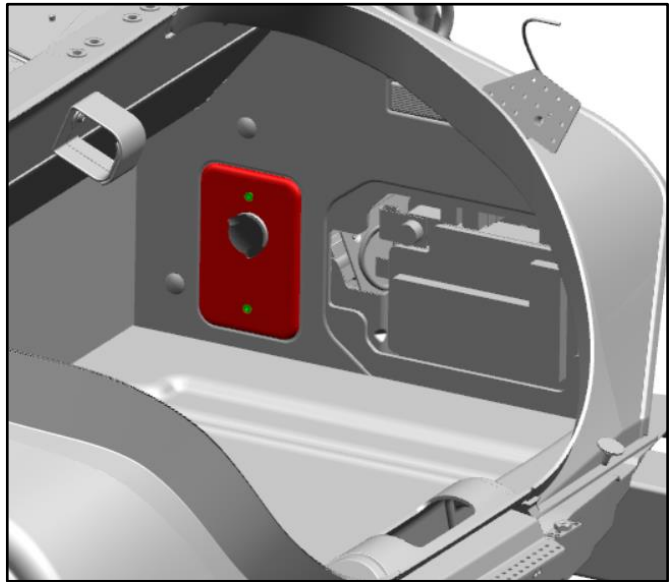


Figure 3

6. Release the 12V power supply to get access to the electrical connection.
7. Disconnect the 12V power supply.
8. Release the luggage compartment light from the side panel of the luggage compartment to get access to the electrical connection. (Refer to Figure 4.)

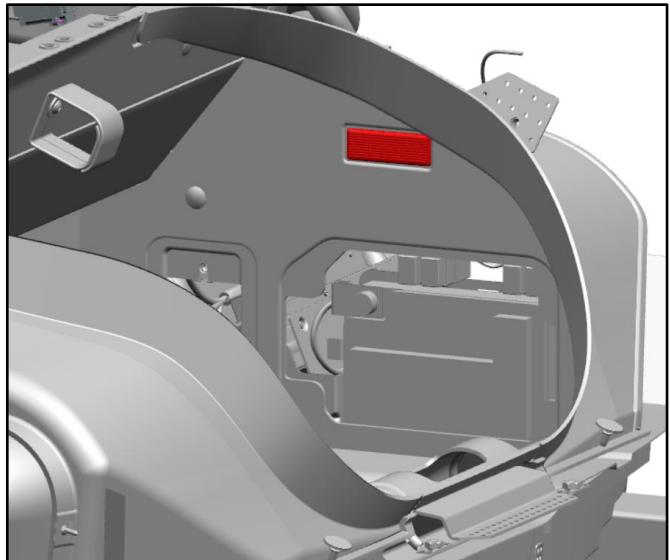


Figure 4

9. Disconnect the luggage compartment light.

10. Remove the screw and the two fir tree clips that attach the side panel of the luggage compartment to the vehicle. (Refer to Figure 5.)

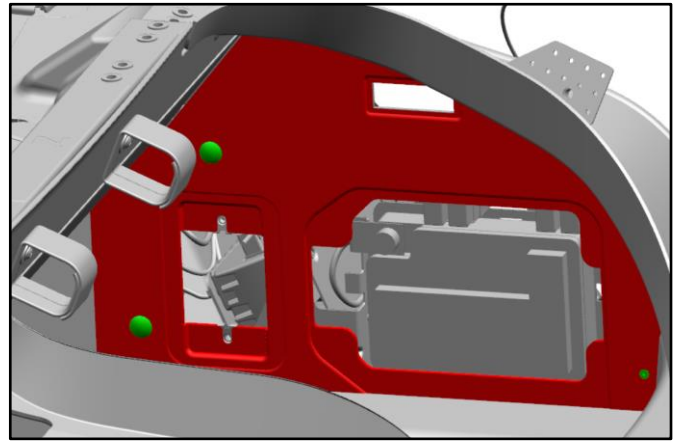


Figure 5

11. Remove the side panel of the luggage compartment.
12. Remove the insulation cap and the nut that attaches the main power cable to the fuse box. (Refer to Figure 6.)
For installation: Torque the nut to 12Nm.

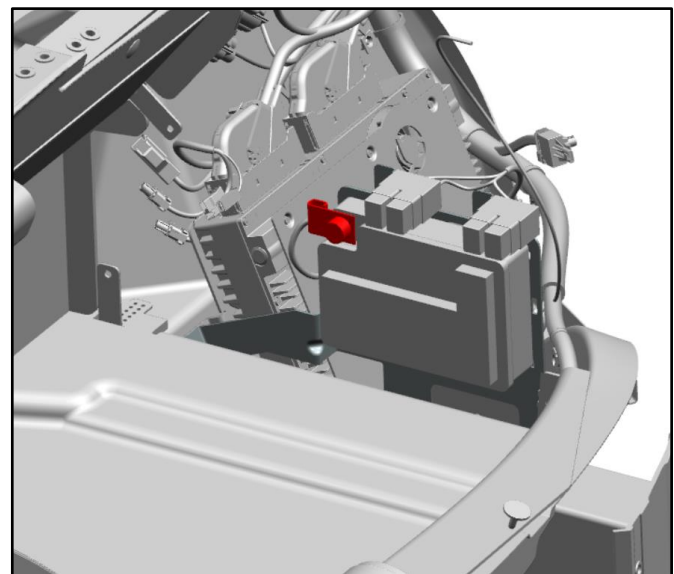


Figure 6

13. Disconnect the main power cable from the fuse box.
14. Remove the two nuts that attach the bracket for the rear fuse box to the vehicle. (Refer to Figure 7.)

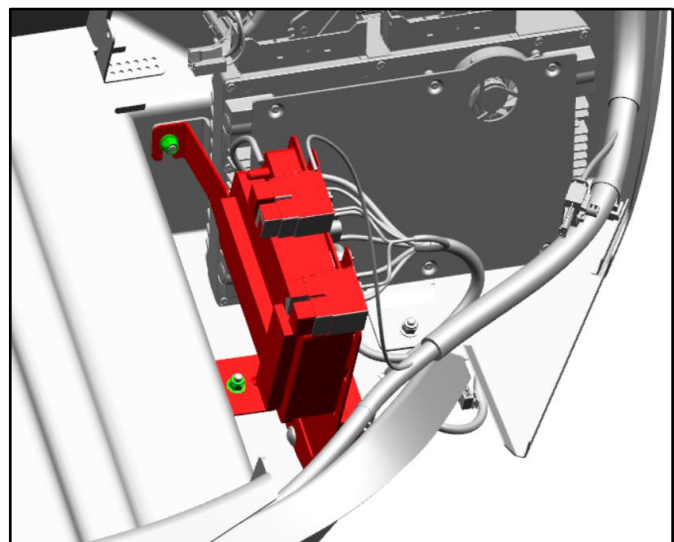


Figure 7

15. Lift the fuse box assembly into the luggage compartment.

16. Release the two relays from the top of the fuse box. (Refer to Figure 8.)

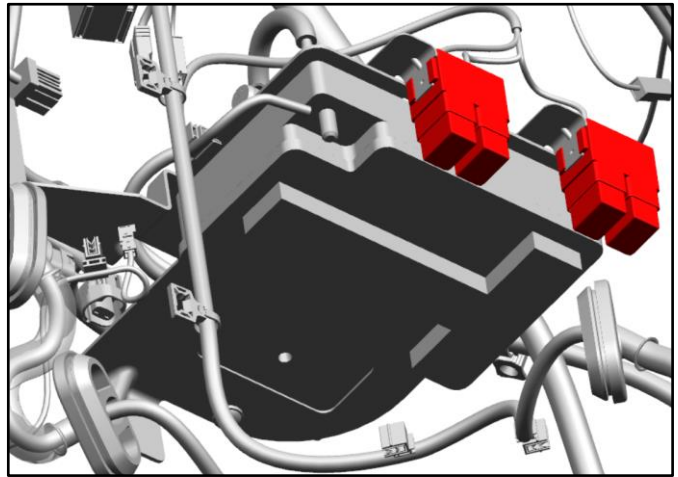


Figure 8

17. Disconnect the four electrical connectors from the fuse box. (Refer to Figure 9.)

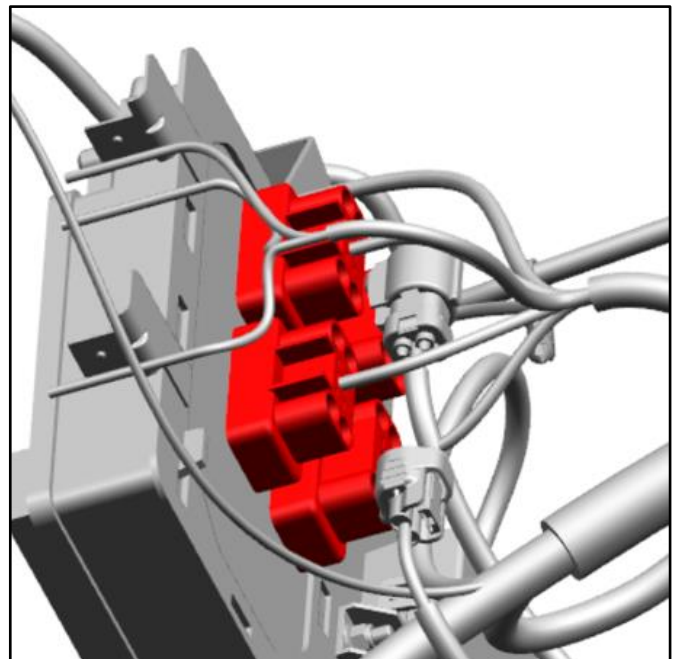


Figure 9

18. Move the fuse box as shown to release it from the bracket for the rear fuse box. (Refer to Figure 10.)

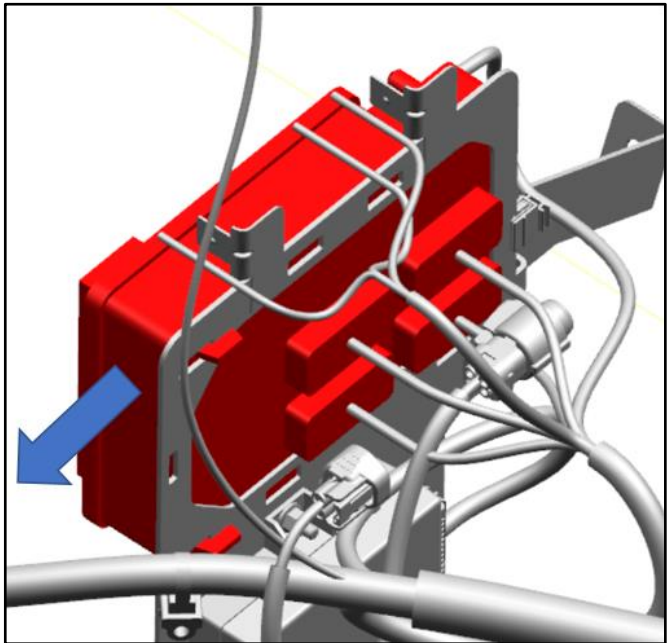


Figure 10

19. Remove the fuse box.
20. Remove the two nuts that attach the latch module for the boot lid to the bracket for the rear fuse box. (Refer to Figure 11.)
For installation: Torque the nuts to 5.4Nm.

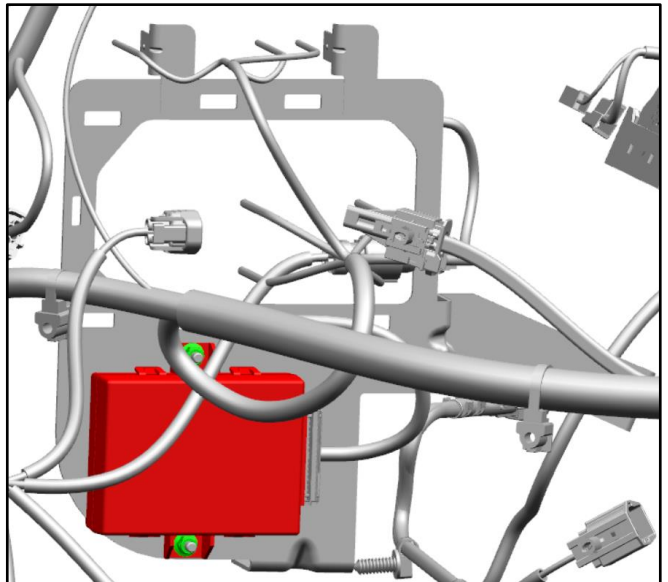


Figure 11

21. Remove the latch module for the boot lid from the bracket for the rear fuse box.
22. Discard the bracket for the rear fuse box.
23. Do steps 21 thru 16 in the opposite sequence to make the new bracket and rear fuse box assembly.
24. Move the new bracket and rear fuse box assembly into position.
25. Do steps 13 thru 12 in the opposite sequence to connect the main power cable to the fuse box.

26. Install and torque the two nuts that attach the bracket for the rear fuse box to the vehicle to 3.5Nm. (Refer to Figure 12.)

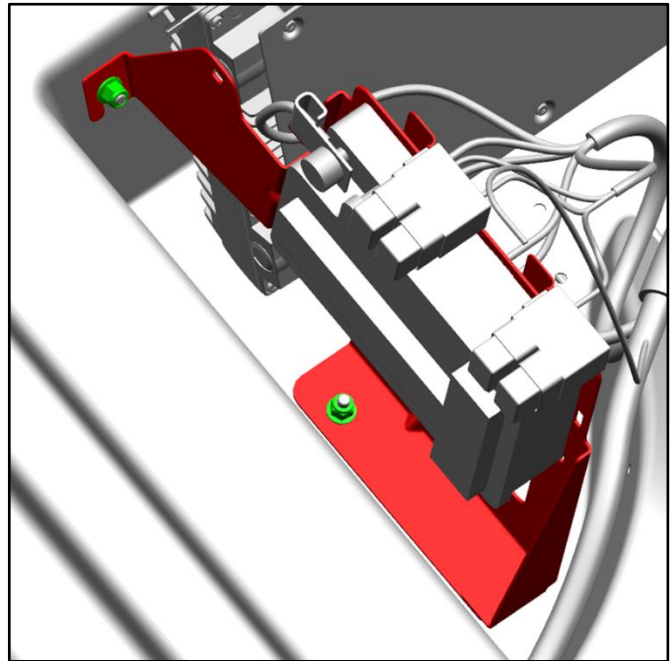


Figure 12

27. Install and torque the new bolt to attach the bracket for the rear fuse box to the audio amplifier to 10Nm. (Refer to Figure 13.)

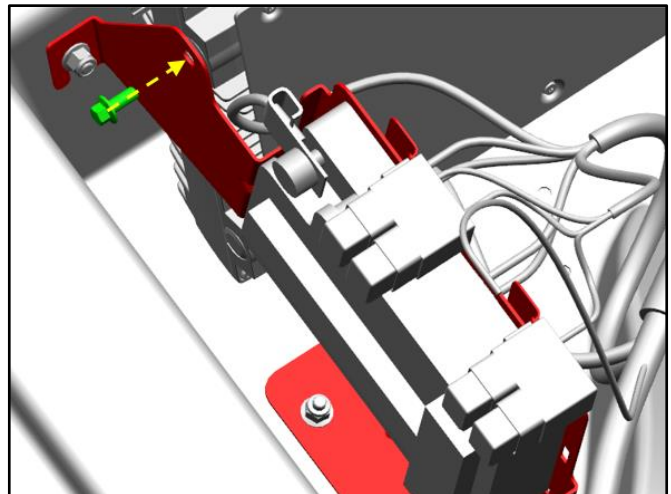


Figure 13

CAUTION: IN STEP 28 MAKE SURE THAT NO DAMAGE TO THE LEATHER OF THE SIDE PANEL OCCURS. TOOLS CAN CAUSE DAMAGE TO THE LEATHER IF SUFFICIENT PROTECTION IS NOT USED.

28. Do steps 11 thru 4 in the opposite sequence to install the side panel of the luggage compartment.
29. Connect the vehicle battery. (Refer to Workshop manual procedure: 14.01.CA Battery Disconnection and Connection Procedure.)
30. Close the boot lid.

Part Data

Description	Part Number	Quantity
BOOT FUSEBOX BRACKET	JD3Y-14A301-BA	1
SCREW M6 x 14 HEX HD	HY53-E804349-AA	1

Warranty Data**Procedure and Labour Time**

Description	Labour Time
Replace the bracket for the rear fuse box.	0.7 hours

If you have any questions related to this Quarantine Notice, please contact: Aston Martin Technical Services on: +44 (0) 1926 644720, email: askamtech@astonmartin.com,
Or contact your After Sales Manager.

The English version of this Quarantine Notice is written in Simplified Technical English to ASD-STE100™.