

Picture 1. If you're looking at the sliding door on the passenger side, on the left side of the door there are two bolts that can be removed and door can swing open. Once the bolts are removed, you'll need a box or something to hold the weight of door when you're swinging it open. The door is held by two hinges on the right side.

Picture 1



Picture 2. Once the door swings open, you can work on the spring loaded contacts that's inside the rectangular rubber seal on picture 2.

Picture 2



Picture 3. Check if the contact receivers are filled with dust/dirt and clean it so there's proper contact with the spring loaded contacts. If not replace as per you techs suggestion.

Picture 3

