

Technical Journal

TITLE:

DIM message "Parking brake service required"

REF NO: TJ 32525.4.0			CAR MARKET: United States and Canada		
3 US 7	PARTNER: '510 Volvo Car USA	ISSUE DATE: 2018-01-29	STATUS DATE: 2018-02-14		
FUNC GROUP: 3710			1 of 25		

"Right first time in Time"

Attachment

File Name	File Size
TJ32525.JPG	0.1931 MB
TJI-503688-2_1_2_en-US.pdf	3.5583 MB
TJI-503692-2_1_1_en-US.pdf	3.8535 MB

Vehicle Type

Туре	Eng	Eng Desc	Sales	Body	Gear	Steer	Model Year	Plant	Chassis range	Struc Week Range
234							2017-9999		-	201617-999952
235							2017-9999		-	201624-999952

CSC Customer Symptom Codes

Code	Description
PK	Parking brake/No/reduced/incorrect function

VST Operation Number

VST Operation Number	Description
98663-2	Cutting of cable harness acc. to TJ

Technical Journal 32525.4.0



DTC Diagnostic Trouble Codes

Control Module	Code	Fault Type
BCM	C20081B	Permanent
BCM	C200713	Permanent
BCM	C200E29	Permanent
BCM	C200574	Permanent
BCM	C20071B	Permanent
BCM	B111177	Permanent

Rows beginning with * are modified

Note! If using a printed copy of this Technical Journal, first check for the latest online version.

Text

DESCRIPTION:

If the DIM message "Parking Brake Service required" appears in the DIM and applicable DTC's are present, please follow instructions under "Service".

- *Changes in this version:
- DTC added, BCM-C20081B.
- Repair instructions with new part number.
- Spare parts are now available through normal channels i.e. parts department.

DIM = Driver Information Module

BCM = Brake Control Module

SERVICE:

- *NOTE: The DTC's may have been set due to other reasons then damaged wiring.
- *Please study typical examples of damaged areas in the attachment "TJ32525.jpg" before replacing any harness.

Check wire harness for the emergency parking brake on the rear control arm(s), if wires are damaged. Perform repair as per attached instructions.

TJI 503688 - right hand side

TJI 503692 - Left hand side

VEHICLE REPORT:

Yes, please submit a Vehicle Report if the service solution described in this TJ has no effect. Use concern area "Vehicle Report" and sub concern area "Support not needed", use function group 3760.

To view TJ attachments continue to next page. This TJ has three attachments.

Page 2 of 25 2018-02-14



Technical Journal 32525.4.0



2018-02-14 Page 3 of 25



Volvo Car Customer Service

TJ Instruction VCC-503688-2

Title	Joining wires, right	Page	1 (11)
Action	Product fix	Operation number:	98663-2

Issue	Date	Reason
2	2018-01	Materials list change
1	2017-05	First issue

Affected vehicles

Model year	Model
2017	S90 (17-)
2017, 2018	V90 (17-)

Materials

Materials	Qty.	Part No.	Notes
Electrical tape	0.1	9511028	Consumable;
Tape	0.1	1985615	WURTH Part Number; Consumable;
Kit	1.0	32214495	


Equipment

Designation	Part No.
Angle drill machine	


Removal

Note! Removal steps in this procedure may contain installation details.

Orientation view

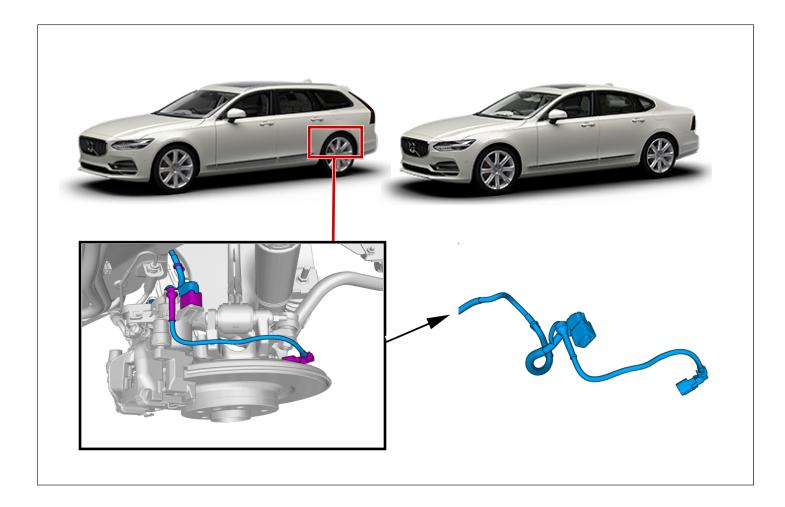

Color symbols

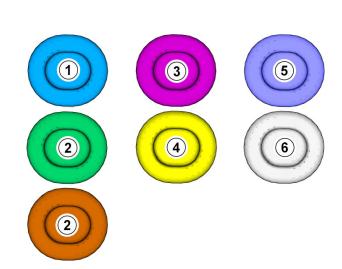

Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4 . Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- Used as background color for vehicle components.

Set the vehicle to Inactive mode, described in user mode, refer to:

General Information

3 - Electrical system

30 - General

300 - general


Remove the right rear wheel, refer to:

Removal, replacement and installation


7 - Springs and wheels

77 - Wheels, tyres, hubs


771 - wheel and wheel trim

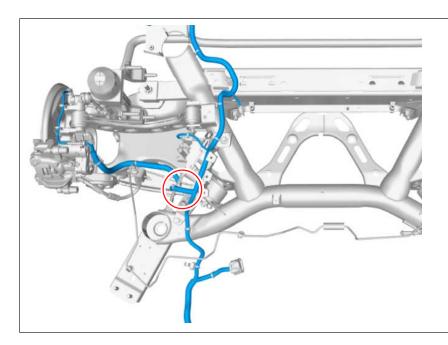


Note! Orientation view

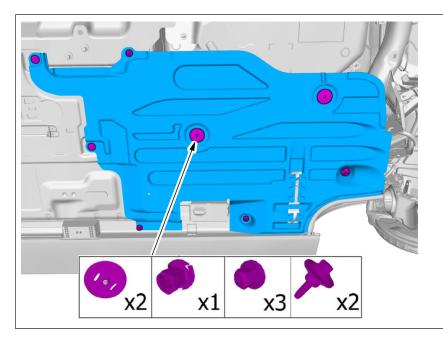


Remove the screws.
Remove the clips.
Remove the marked part.

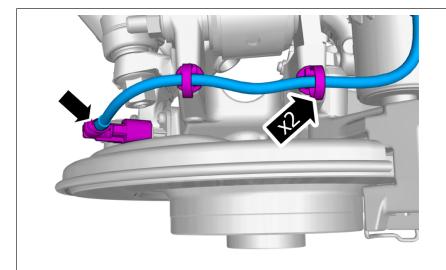


Loosen the clips.
Disconnect the connector.

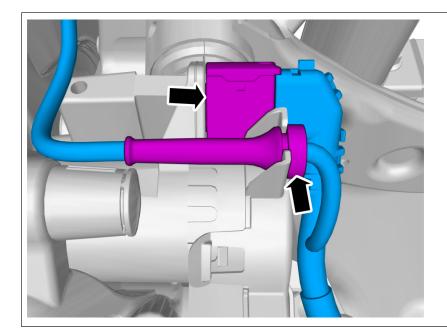


Disconnect the connector. Loosen the fastener.

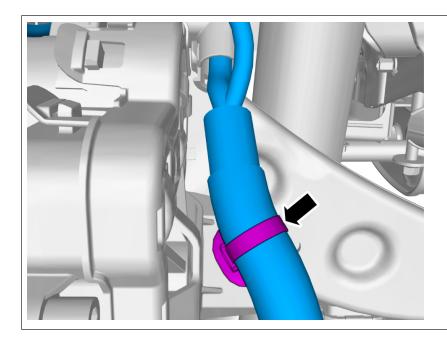


Loosen the clip.

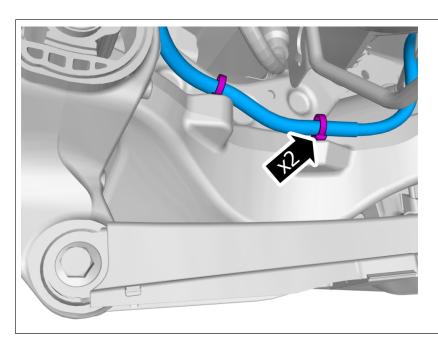

Loosen the clips.

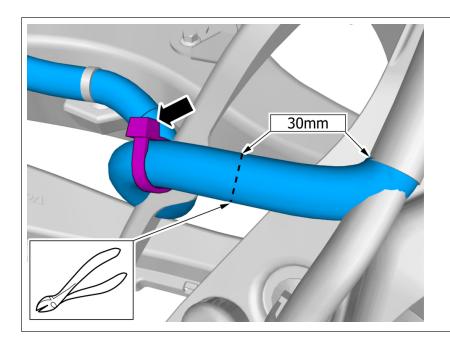

Loosen the clip. Cut

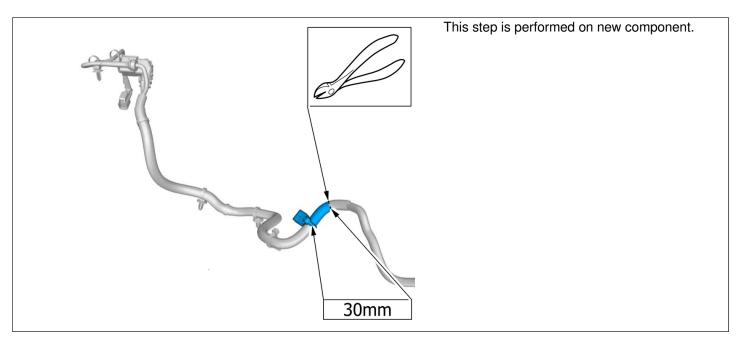

Installation


Carry out splicing of wire, refer to:

Cleaning, Inspection and Adjustment

3 - Electrical system


37 - Cables and fuses

371 - cables

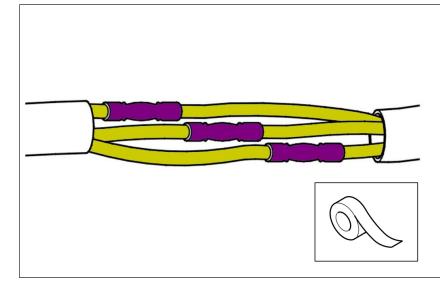


¹ · **Use:** Electrical tape , 9511028


² · **Use:** Tape , 9511071

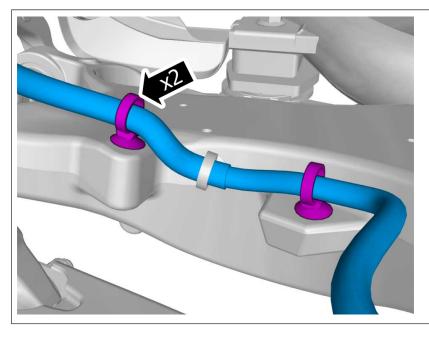

Position wire as illustrated. Install the clip(s).

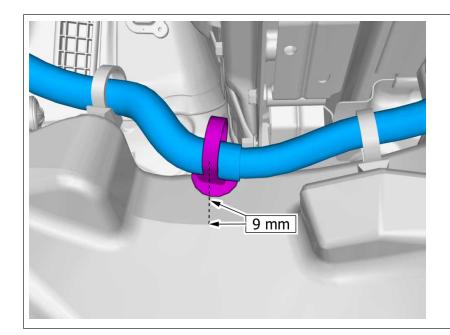


Measure from upper flange edge. Mark using a pen

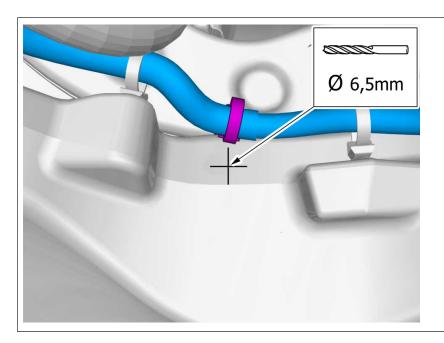


Position wire as illustrated.


Use: Angle drill machine

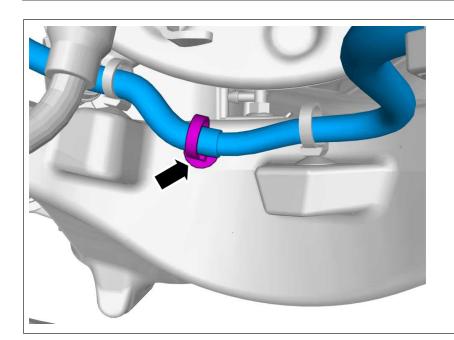

Install the clip(s).

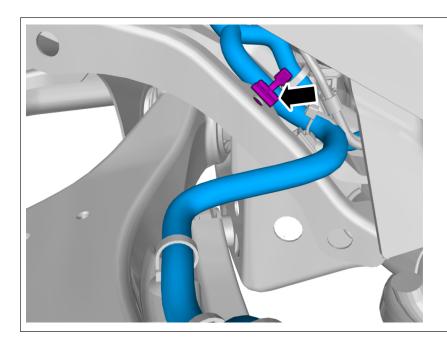

Position wire as illustrated. Install the clip(s).

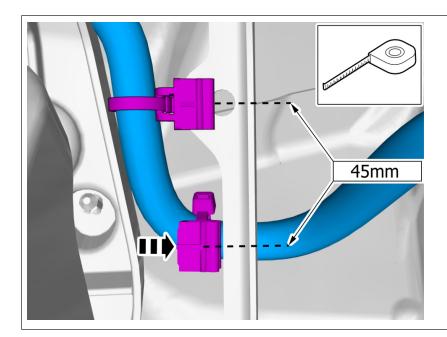

View from below Mark using a pen Install the clip(s).

To install, reverse the removal procedure.



Volvo Car Customer Service

TJ Instruction VCC-503692-2

Title	Joining wires, left	Page	1 (11)
Action	Product fix	Operation number:	98663-2

Issue	Date	Reason
1	2017-05	First issue
2	2018-01	Materials list change

Affected vehicles

Model year	Model
2017	S90 (17-)
2017, 2018	V90 (17-)

Materials

Materials	Qty.	Part No.	Notes
Strip clamp	1.0	983671	
Electrical tape	0.1	9511028	Consumable;
Tape	0.1	1985615	WURTH Part Number; Consumable;
Kit	1.0	32214494	


Equipment

Designation	Part No.
Angle drill machine	


Removal

Note! Removal steps in this procedure may contain installation details.

Orientation view

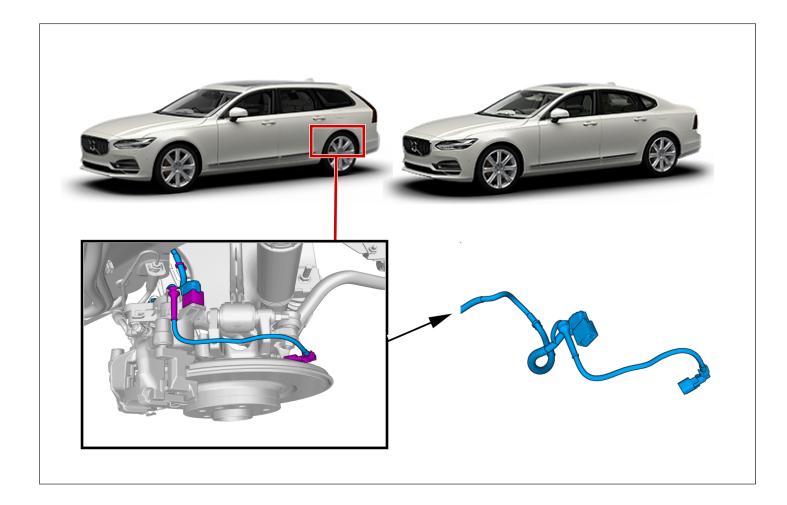

Color symbols

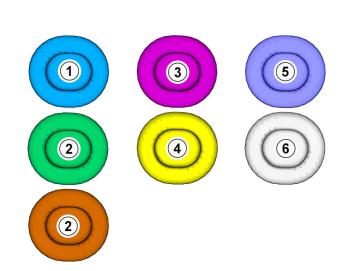

Note! This colour chart displays (in colour print and electronic version) the importance of the different colours used in the images of the method steps.

- Used for focused component, the component with which you will do something.
- 2. Used as extra colors when you need to show or differentiate additional parts.
- Used for attachments that are to be removed/installed. May be screws, clips, connectors, etc.
- 4 . Used when the component is not fully removed from the vehicle but only hung to the side.
- 5. Used for standard tools and special tools.
- Used as background color for vehicle components.

Set the vehicle to Inactive mode, described in user mode, refer to:

General Information

3 - Electrical system

30 - General

300 - general


Remove the left rear wheel, refer to:


Removal, replacement and installation

7 - Springs and wheels


77 - Wheels, tyres, hubs

771 - wheel and wheel trim

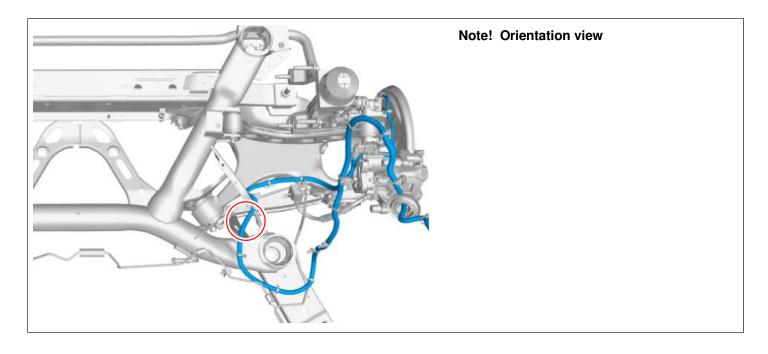


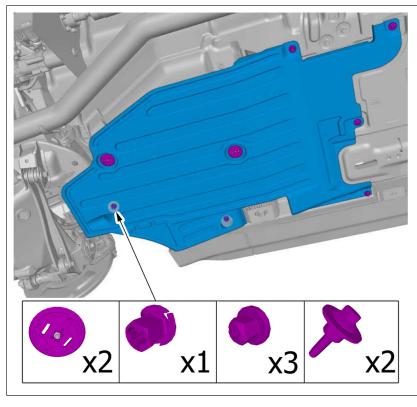


Remove the screws.
Remove the clips.
Remove the marked part.

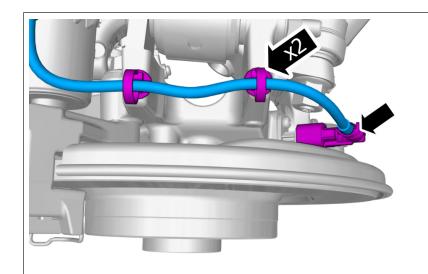


Loosen the clips.
Disconnect the connector.

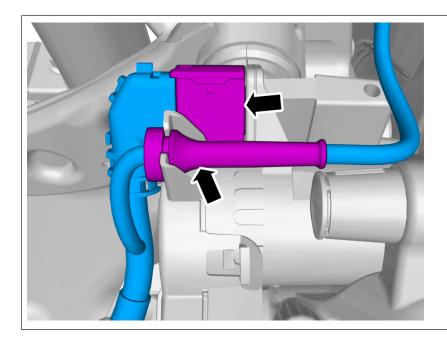


Disconnect the connector. Loosen the fastener.

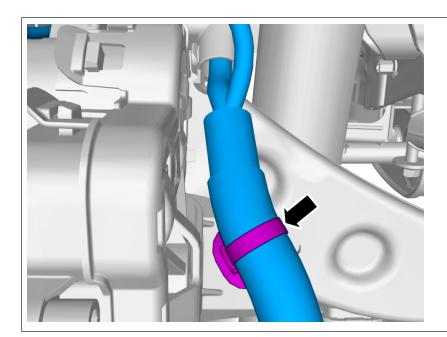

Loosen the clip.

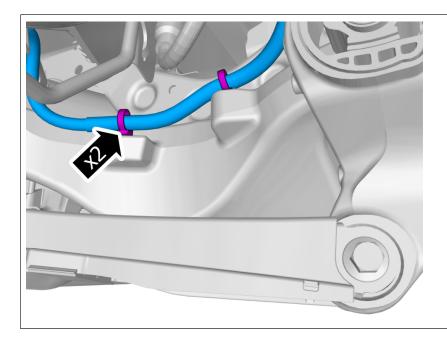


Loosen the clips.

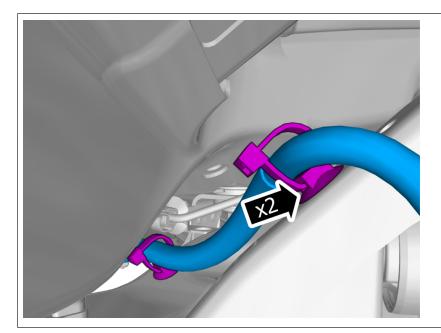


Note! Make sure that a new component is installed.

Loosen the clips.

Use: Strip clamp, 983671

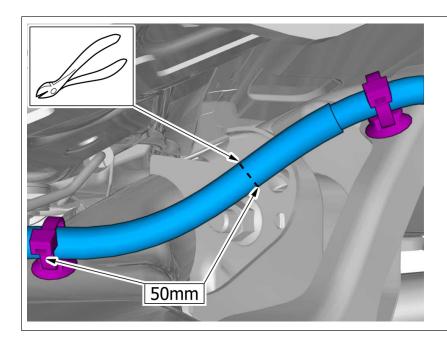



Cut

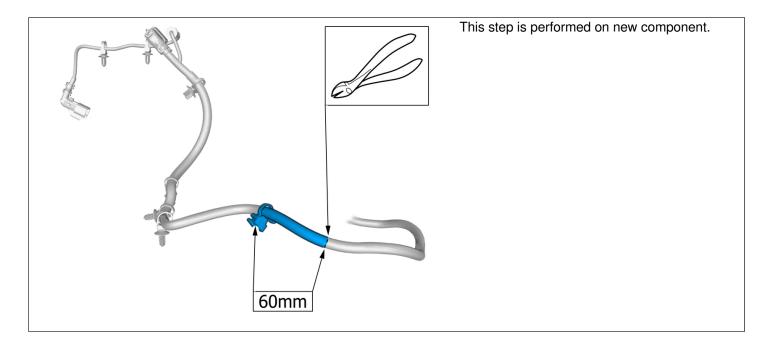


Installation

Carry out splicing of wire, refer to:
Cleaning, Inspection and Adjustment
3 - Electrical system
37 - Cables and fuses
371 - cables

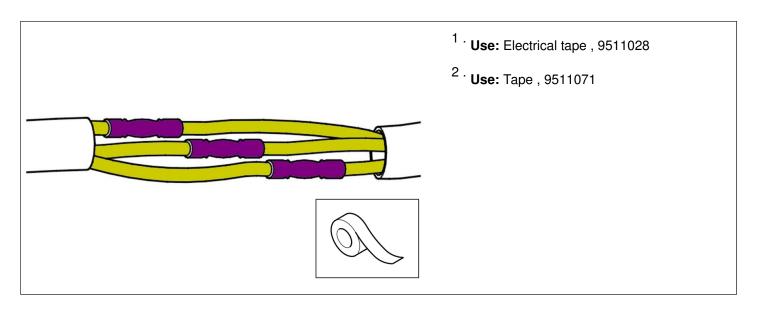


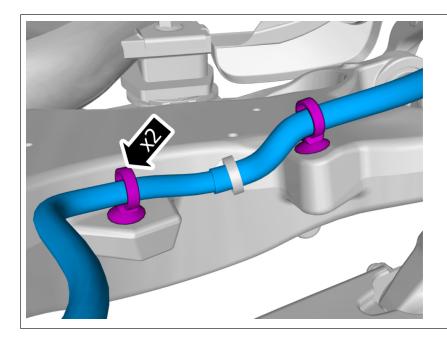

Position wire as illustrated. Install the clip(s).

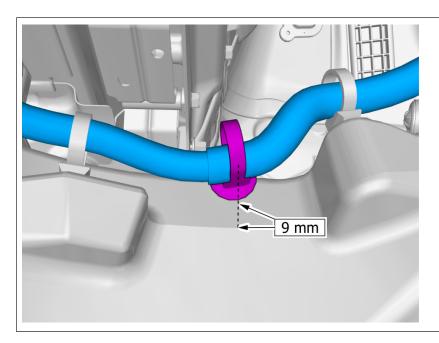


Measure from upper flange edge. Mark using a pen

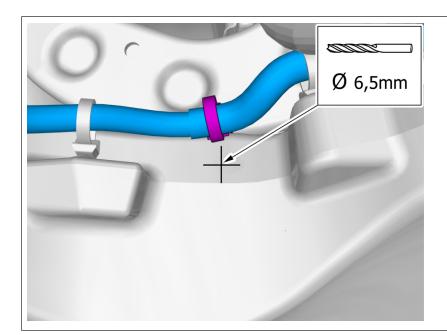


Position wire as illustrated.


Use: Angle drill machine

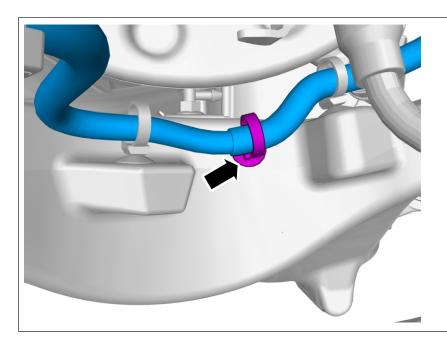

Install the clip(s).

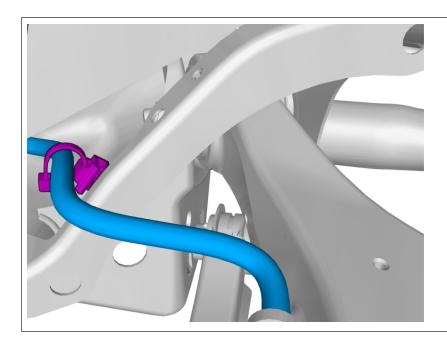

Position wire as illustrated.

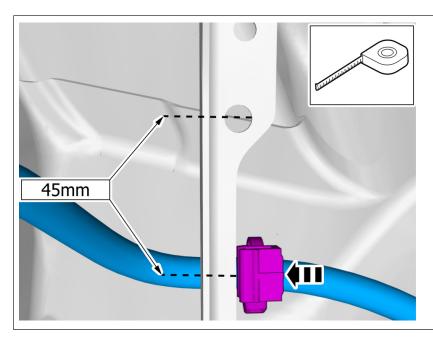

View from below Mark using a pen Install the clip(s).

To install, reverse the removal procedure.