



# Technical Service Bulletin

SUBJECT:			No: <b>TSB-19-23-003</b>
<b>TRANSAXLE CONTROL: ADDITION OF SHIFT INDICATOR PANEL REMOVAL &amp; INSTALLATION - SERVICE MANUAL REVISION</b>			DATE: <b>March 2019</b>
			MODEL: <b>2011-17 Outlander Sport/RVR</b>
<b>CIRCULATE TO:</b>	<input type="checkbox"/> GENERAL MANAGER	<input checked="" type="checkbox"/> PARTS MANAGER	<input checked="" type="checkbox"/> TECHNICIAN
<input checked="" type="checkbox"/> SERVICE ADVISOR	<input checked="" type="checkbox"/> SERVICE MANAGER	<input checked="" type="checkbox"/> WARRANTY PROCESSOR	<input type="checkbox"/> SALES MANAGER

## PURPOSE

This TSB updates the Automatic Transmission section of the affected Service Manual, to include steps for the shift indicator panel removal and installation procedure.

## AFFECTED VEHICLES

- 2011 - 2017 Outlander Sport/RVR

## AFFECTED SERVICE MANUAL

- 2011 - 2017 Outlander Sport/RVR Service Manual, Group 23-Automatic Transmission



Please make the indicated changes to the 2011 - 2017 Outlander Sport/RVR Service Manual, Group 23-Automatic Transaxle -> CVT -> Transaxle Control -> Removal & Installation.

<Added>

- <<A>> >>A<<
2. Shift indicator panel
  3. Lever cover
  4. Indicator slider
    - Front floor console center and floor console front (Refer to GROUP 52A – Front Floor Console Assembly .)
  5. Transaxle control cable connection (selector lever side)
  6. Selector lever assembly
 

**Transaxle control cable assembly removal steps**

    - Move the selector lever to the "N" position.
    - Rear floor console assembly (Refer to GROUP 52A – Rear Floor Console Assembly .)

<Added>


- <<A>> >>A<<
- Transaxle control cable assembly removal steps (Continued)**
1. Selector lever knob
  2. Shift indicator panel
    - Front floor console center and floor console front (Refer to GROUP 52A – Front Floor Console Assembly .)
    - SRS-ECU, SRS-ECU harness cover (Refer to GROUP 52B – SRS-ECU .)
    - Air cleaner body (Refer to GROUP 15 – Air Cleaner .)
    - Battery and battery tray (Refer to GROUP 54A – Battery .)
  7. Transaxle control cable connection (transaxle side)
  8. Transaxle control cable

<Added>

**REMOVAL SERVICE POINT**

**<<A>> SHIFT INDICATOR PANEL REMOVAL**

Remove the shift indicator panel from the front.

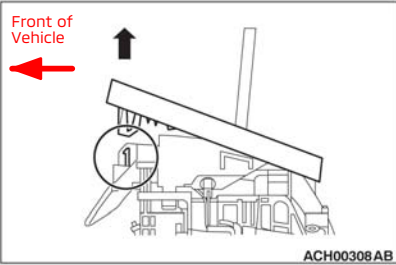

**INSTALLATION SERVICE POINT**

**>>A<< SHIFT INDICATOR PANEL INSTALLATION**

1. Engage the shift indicator panel with (A) at the rear side of the selector lever assembly.
2. Engage the shift indicator panel with (B) at the front side of the selector lever assembly.

