VOLVO CAR SERVICE AND PARTS BUSINESS



Technical Journal

TITLE: Rear air suspension- Dust cover loose on SPA

| REF NO: TJ 30517.6.0 | | | ARKET: s and Canada |
|-------------------------|--------------------------------|---------------------------|----------------------------|
| 3 US 7 | PARTNER: 7510 Volvo Car USA | ISSUE DATE: 2019-02-25 | STATUS DATE: 2019-03-06 |
| FUNC GROUP: 7261 | | | 1 of 18 |

"Right first time in Time"

Attachment

| File Name | File Size |
|----------------------------|-----------|
| TJ 30517 A.PNG | 0.9118 MB |
| TJI-488219-1_1_1_en-US.pdf | 1.4180 MB |
| TJI-488219-2_1_0_en-US.pdf | 4.3463 MB |

Vehicle Type

| Туре | Eng | Eng Desc | Sales | Body | Gear | Steer | Model Year | Plant | Chassis range | Struc Week Range |
|------|-----|-------------|-------|------|------|-------|------------|-------|-----------------|---------------------|
| 234 | | | | | | | 2017-2017 | | 0000001-0044124 | 201617-201810 |
| 235 | | | | | | | 2017-2018 | | 0000001-0063976 | 201620-201810 |
| 236 | | | | | | | 2017-2018 | | 0000001-0034772 | 201646-201810 |
| 238 | | | | | | | 2018-2018 | | 0000001-0051621 | 201646-201810 |
| 246 | | | | | | | 2018-2018 | | 0000001-0096113 | 201717-201810 |
| 256 | | | | | | | 2016-2018 | | 0000001-0376406 | 201505-201810 |

CSC Customer Symptom Codes

| Code | Description |
|------|--|
| 3L | Technician information/Repair information/Not for warranty use |

Produced in the USA and available as an electronic document. Hard copy documents are printed in USA on recycled paper containing a minimum of 50% wastepaper and 10% post-consumer waste. © 2019 VOLVO CAR USA, LLC



VST Operation Number

| VST Operation Number | Description |
|----------------------|--|
| 36050-2 | US-Calibrating/Identifying with VIDA |
| 98611-2 | Air suspension rear Installation acc, to TJ30517 |
| 36060-3 | Calibration with VIDA |

DTC Diagnostic Trouble Codes

Rows beginning with * are modified

Note! If using a printed copy of this Technical Journal, first check for the latest online version.

Text

DESCRIPTION:

If the dust cover loose from the top of the rear air suspension- see picture TJ 30517 A.PNG. Follow advice under service.

SERVICE:

If a car comes in with a loose dust cover, replace complete air spring according to VIDA. If the dust cover on the other side is not loose and has a plastic tie strap (black or white), update the plastic tie strap on the air spring with a new metal tie strap according to attached instruction **VCC-488219-1** or **VCC-488219-2**.

New metal strap introduced 18w09 in production.

Note: Always follow VIDA instruction.

VEHICLE REPORT:

Please follow the general TIE Reporting guidelines available in the TIE system under "Instructions" or the SPJ 27125 TIE Quick Guide (Dealers).


If this information cannot be found, please check other SPJ's or TJ's released locally by your market responsible office has released their own local report guide.

* Yes, please submit Vehicle Reports on vehicles built after structure week 18w10. Use concern area "Vehicle Report" and sub concern area "Support Not Needed", use function group 7261.

To view TJ attachments continue to next page. This TJ has three attachments.



Technical Journal 30517.6.0

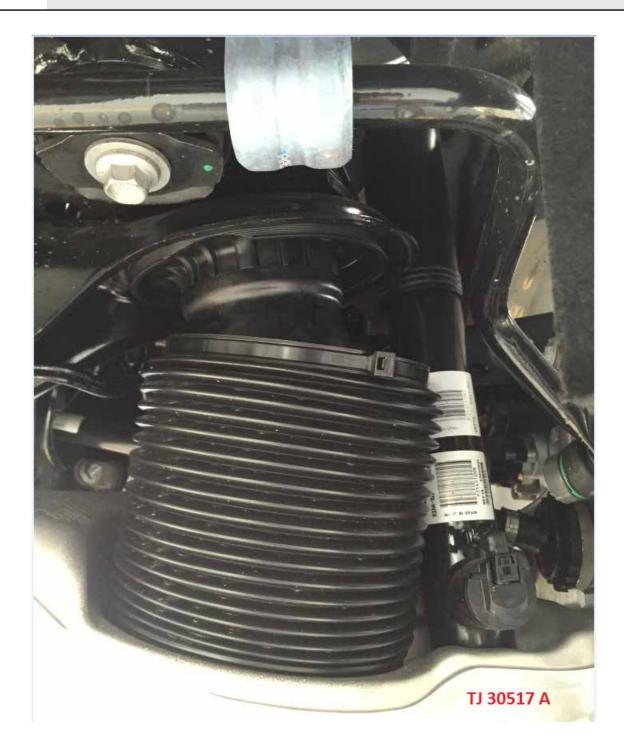

| VOLVO | Volvo Car Customer Service | TJ Instruction VC0 | C-488219-1 |
|--------|----------------------------|--------------------|------------|
| Title | Air suspension, rear | Page | 1(5) |
| Action | Installation | Operation number: | 98611-2 |
| | | | 36050-2 |
| | | | 36060-3 |

| Issue | Date | Reason |
|-------|---------|-------------|
| 1 | 2015-09 | First issue |

Affected vehicles

Г

| Model year | Model |
|-------------|-------------------|
| | V90 Cross Country |
| 2019 | |
| 2018, 2019 | XC60 (18-) |
| 2016, 2017, | XC90 (16-) |
| 2018, 2019 | |


| | | Materials | |
|-----------|------|-----------|-------|
| Materials | Qty. | Part No. | Notes |
| Clamp | 1.0 | 32269500 | |

| Special tools | | | | |
|------------------|----------|--|--|--|
| Description | Part No. | | | |
| Lock grip pliers | 981 4201 | | | |

Note! Removal steps in this procedure may contain installation details.

Remove relevant side rear wheel, refer to: Removal, replacement and installation 7 - Springs and wheels 77 - Wheels, tyres, hubs 770 - general

Empty air springs according to: Diagnostics/ Components/ ECU / SUM / Diagnostic Sequences / Deflating and filling air springs and reservoir

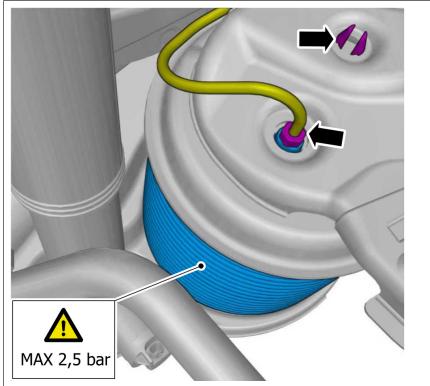


Undo the hose from the connection.

Torque:

Air hose connector, to Connector with plastic threads , 3 $\ensuremath{\mathsf{Nm}}$

Depress the locking device.

Remove the marked part.

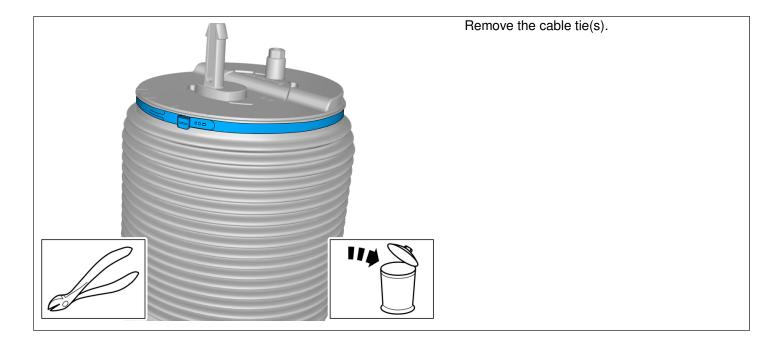

Page 3 (5)


Installation


Applies to the left-hand side:

Caution! Make sure that the component is positioned correctly.

Tighten the cable tie.

Applies to the right-hand side

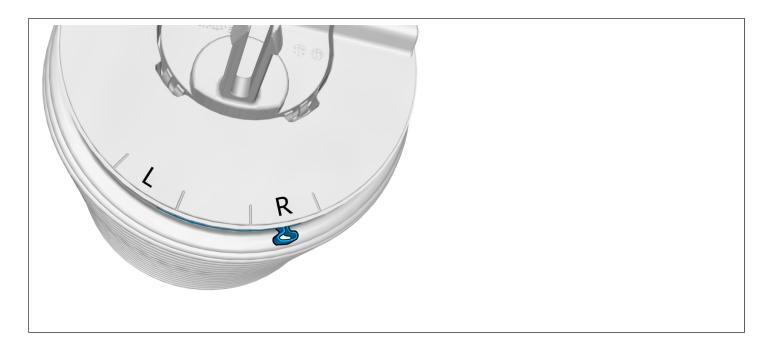

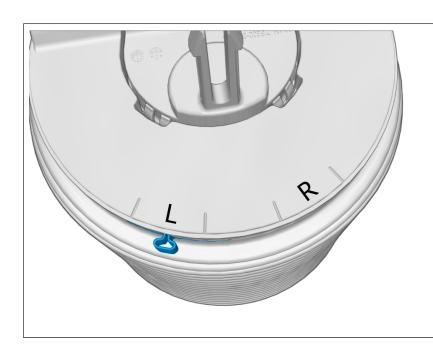

Page 5 (5)

On both sides.

Note! Make sure that a new clamp is installed. 981-4201 Install the marked component. Special Tool: T9814201, Lock grip pliers

| mm | Caution! Make sure the component is fitted as illustrated. |
|----|--|
| | |

To install, reverse the removal procedure.

Fill air springs according to: Diagnostics/ Components/ ECU / SUM / Diagnostic Sequences / Deflating and filling air springs and reservoir

Caution! Make sure that the air springs are inflated before lowering the vehicle.



| Vc | Ivo Car Customer Service TJ | Instruction VCC | -488219-2 |
|-----------|-----------------------------|-------------------|-----------|
| Title A | ir suspension, rear | Page | 1 (10) |
| Action Ir | stallation | Operation number: | 98611-2 |
| | | | 36050-2 |
| | | | 36060-3 |

| Issue | Date | Reason |
|-------|---------|-------------|
| 1 | 2019-01 | First issue |

Affected vehicles

| Model year | Model |
|-------------|-----------|
| 2017, 2018, | S90 (17-) |
| 2019 | |
| 2017, 2018, | S90L |
| 2019 | |
| 2017, 2018, | V90 (17-) |
| 2019 | |


| Special tools | | | |
|------------------|----------|--|--|
| Description | Part No. | | |
| Lock grip pliers | 981 4201 | | |

Removal

| Note! Removal steps in this procedure may contain installation details. |
|---|
| Deactivate the Air suspension control in |
| Settings, which is found in Center Console |
| Display top view or by way of VIDA: Diagnostics |
| Components/ECU/SUM/Diagnostic sequences/ |
| Enable leveling control |
| |
| Remove relevant side rear wheel, refer to: |
| Removal, replacement and installation |

- 7 Springs and wheels77 Wheels, tyres, hubs
- 770 general

Empty air springs according to: Diagnostics/ Components/ ECU / SUM / Diagnostic Sequences / Deflating and filling air springs and reservoir

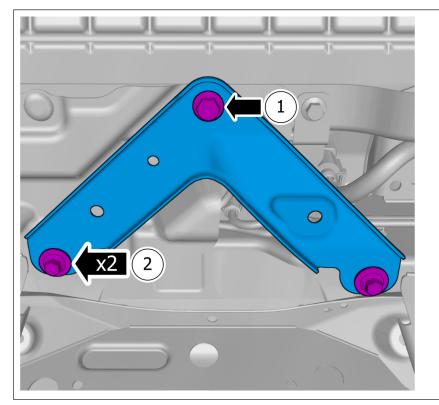


Remove the screws.


Torque:

- Stage 1 : Reinforcement plate, to Rear subframe , 50 Nm
- Stage 2 : Reinforcement plate, to Rear subframe , 125°

Remove the marked part.

Page 3 (10)

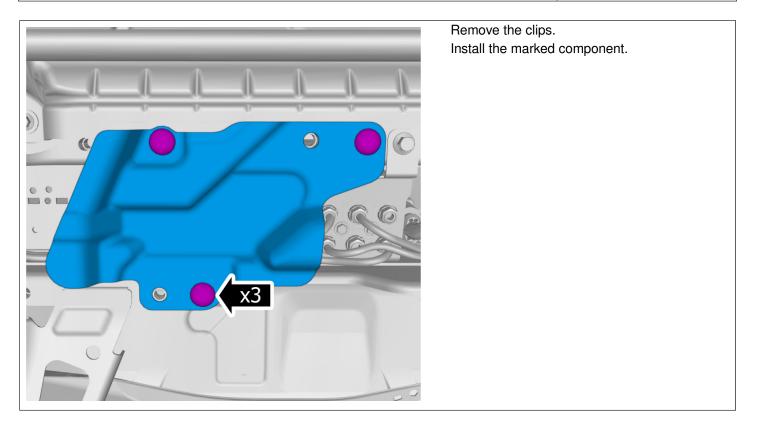

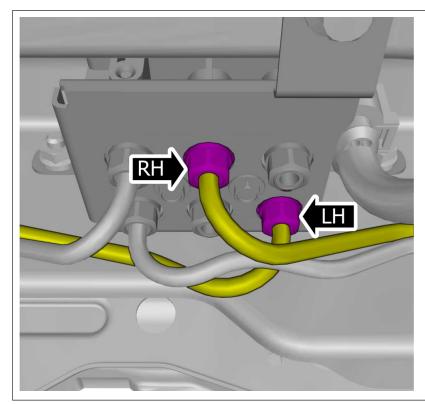


Locate relevant marking. Undo the hose from the connection.

Torque:

Air hose connector, to Connector with plastic threads , 3 $\rm Nm$

Page 4 (10)

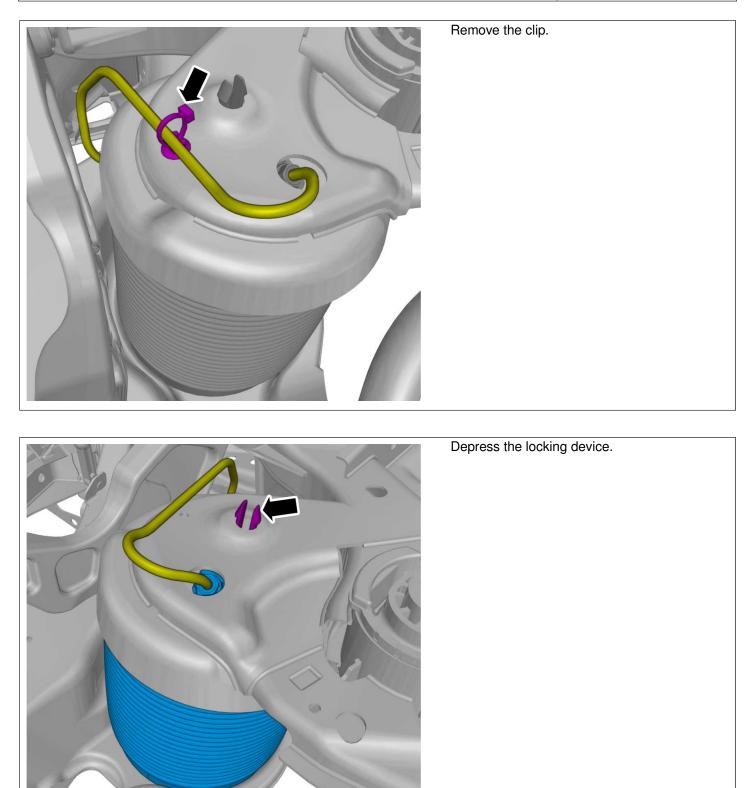


Page 5 (10)



Caution! Be extra careful when removing or installing this component.


- 1 . Lift the marked component forward.
- ² · Torque:

Air hose connector, to Connector with plastic threads , 3 Nm

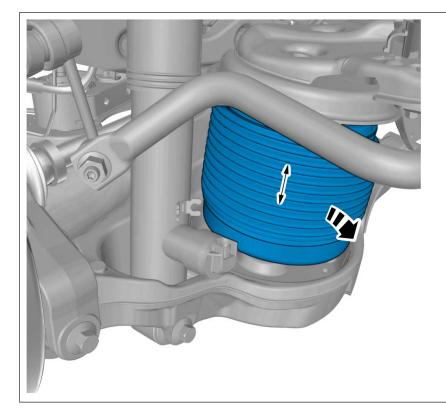

Remove the marked part.

Page 6 (10)

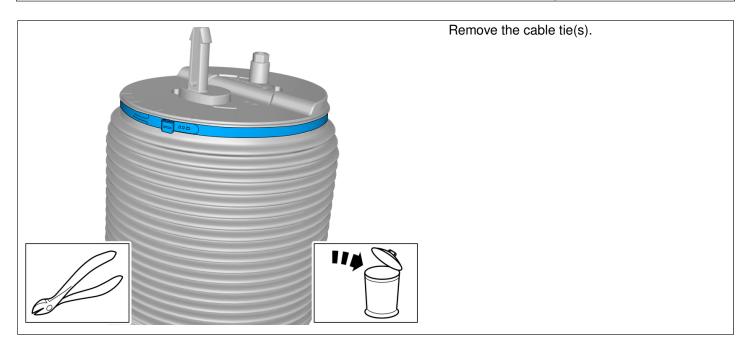

Installation

| Applies to the left-hand side: | 8-008914 (**** | Coution! Make ours that the component i |
|--------------------------------|----------------|---|
| Applies to the left-hand side: | | |
| | | Applies to the left-hand side: |



Caution! Make sure that the component is positioned correctly.

Page 7 (10)

Applies to the right-hand side

positioned correctly.

Caution! Make sure that the component is

981-4201

On both sides.

Note! Make sure that a new clamp is installed.

Install the marked component.

Special Tool: T9814201, Lock grip pliers



mm

Caution! Make sure the component is fitted as illustrated.

| Clean the marked area. |
|------------------------|
| |


2,9-3,1

To install, reverse the removal procedure.

Page 8 (10)

<image>

Fill air springs according to: Diagnostics/ Components/ ECU / SUM / Diagnostic Sequences / Deflating and filling air springs and reservoir

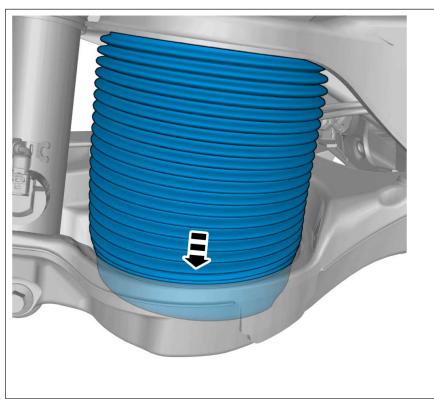

Warning! Make sure that the spring is correctly located in the lower spring seat.

Page 9 (10)

Install wheel, refer to: Removal, replacement and installation 7 - Springs and wheels 77 - Wheels, tyres, hubs 770 - general

Caution! Make sure that the air springs are inflated before lowering the vehicle.