

CFR with the BGS battery monitor leads wrong.

Orange should terminate on Battery "A" of BIM

Blue should terminate on Battery "B" of BIM

Mr. Conger's coach has the blue on "Batt" of BG, which is basically reading Battery "A". Move this blue wire to Battery "B" to correct House and Chassis battery readings on Firefly.