



This document details how to access the water pump on the Axis/Vegas 25.6.

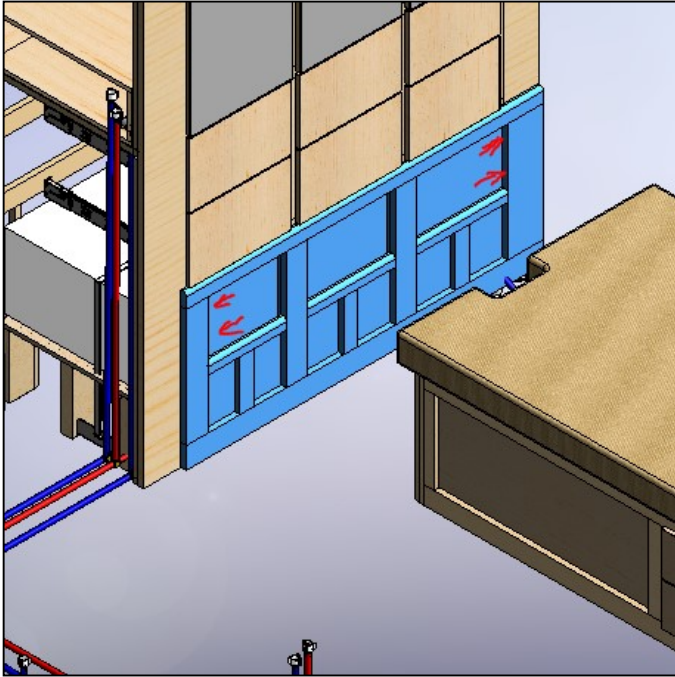

There are 4 to 6 screws holding the lower section of this cabinet into place (indicated by the red arrows). With these screws removed, the whole lower section (highlighted in blue) can be removed.

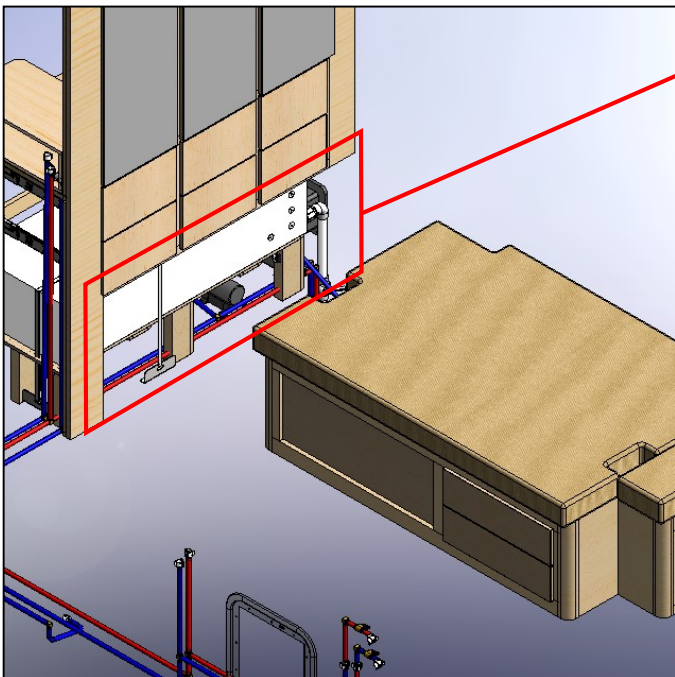

After the lower section is removed, there is easy access to all of the components around the tank including the water pump.